

How do I change the LAN IP address of my firewall?

Note: You may consider binding a secondary IP address to one NIC that matches the new network segment for this configuration ahead of actual firewall configuration.

Step 1 Open a web browser and type the IP address of the firewall into the address bar (default is **192.168.1.1**). Press Enter.

Step 2 The default username is **admin** (all lower case) and the password is **admin** (all lower case). Click on **OK**.

Step 3 Click on the plus sign next to **Objects**, select **Address Book**, and then select **Interface Addresses**.


The screenshot shows the 'InterfaceAddresses' configuration page. On the left is a tree view with 'InterfaceAddresses' selected. The main area displays a table of address objects:

Name	Address
class_C_subnet	255.255.255.0
dmz_ip	172.17.100.254
dmznet	172.17.100.0/24
dns_server	4.2.2.2
lan_ip	192.168.1.1
lan_ip_pool	192.168.1.2-192.168.1.10
lanet	192.168.1.0/24
wan1_gw	192.168.20.1
wan1_ip	192.168.20.186
wannet	192.168.20.0/24


Red boxes highlight the 'lan_ip' and 'lanet' rows. Red arrows point from a text box at the bottom left to these rows.

Change to the desired IP address and subnet mask


Step 4 Click on the **lan_ip** folder and edit the IP address as desired and then click **OK**.

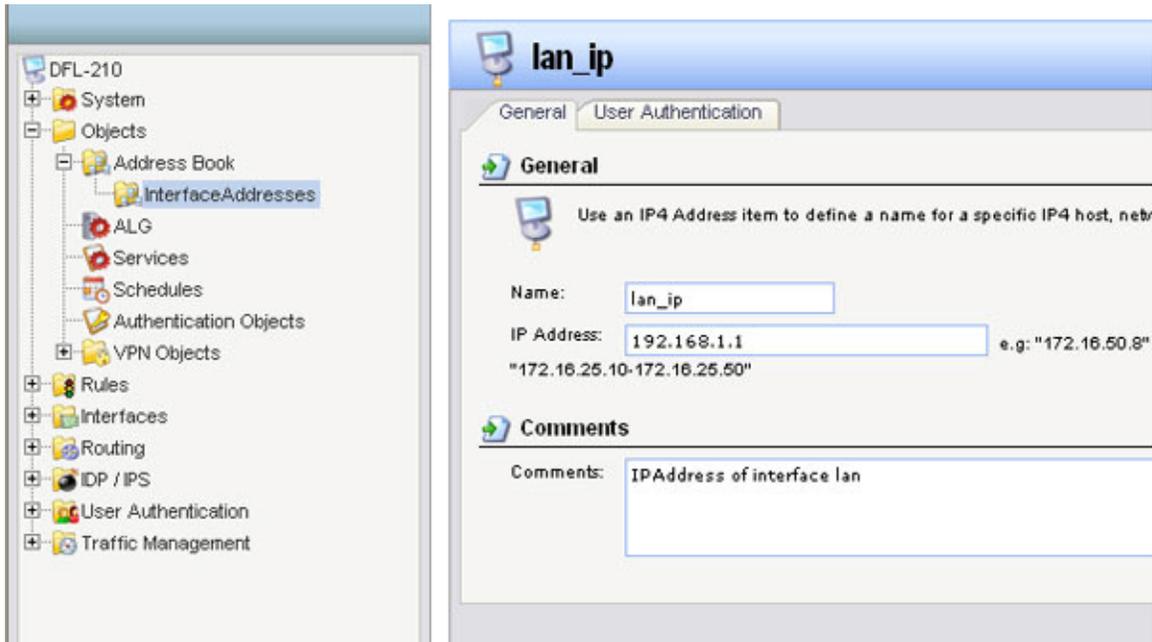


Step 5 Click on the **lanet** and edit the subnet as desired and then click **OK**.

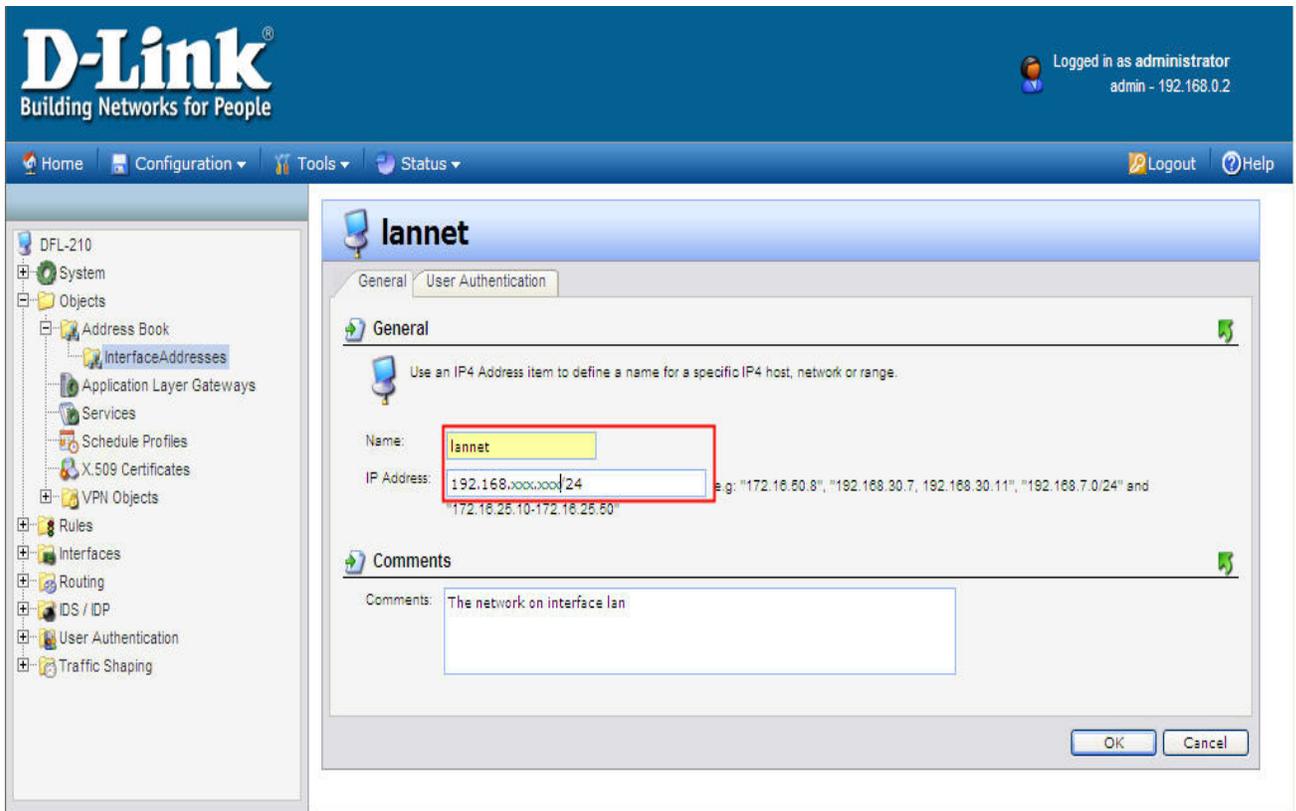


Step 6 Before we save and activate the setting we need to bind another IP address in the PC network interface. **Go to Local Area Connection Properties > Internet Protocol (TCP/IP) > Properties > Advanced.**

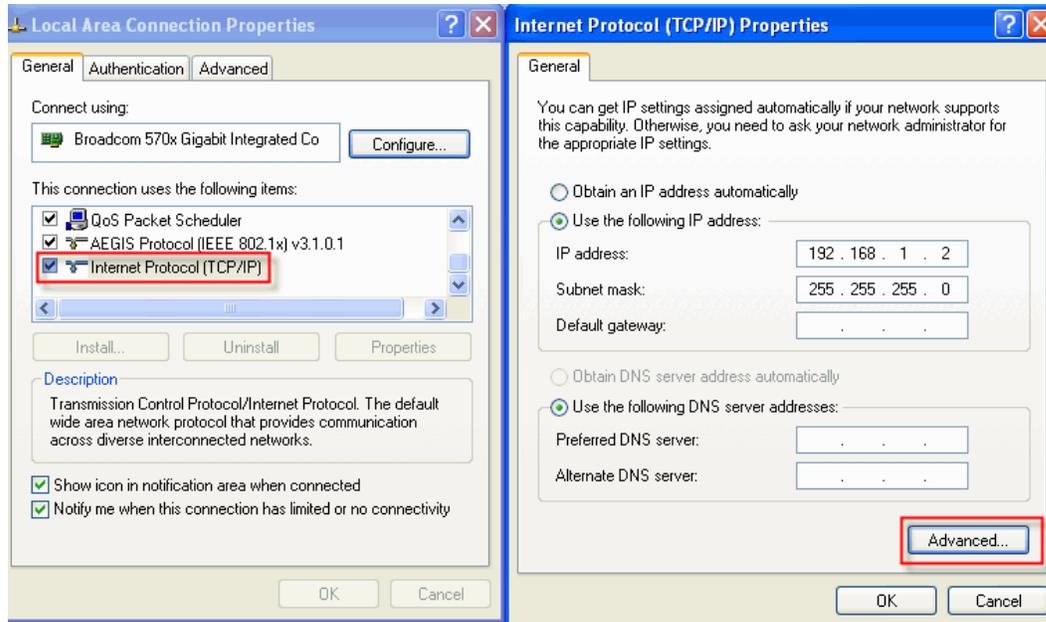

Step 7 Click on **Add** to add in the desired IP and subnet, after that click on **Add > OK** to bind the second IP address. Click **OK** to complete the binding process.

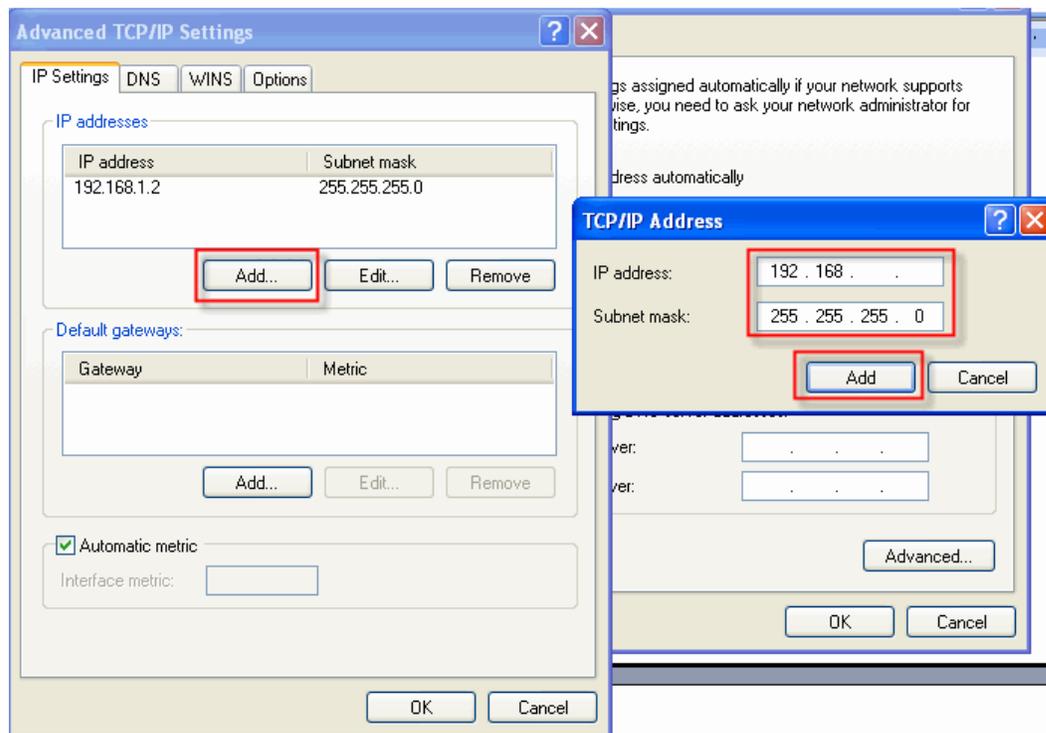

Step 5 Click on the **Configuration** tab and select **Save and Activate** from the dropdown menu. Click on **OK** to save and activate your changes.

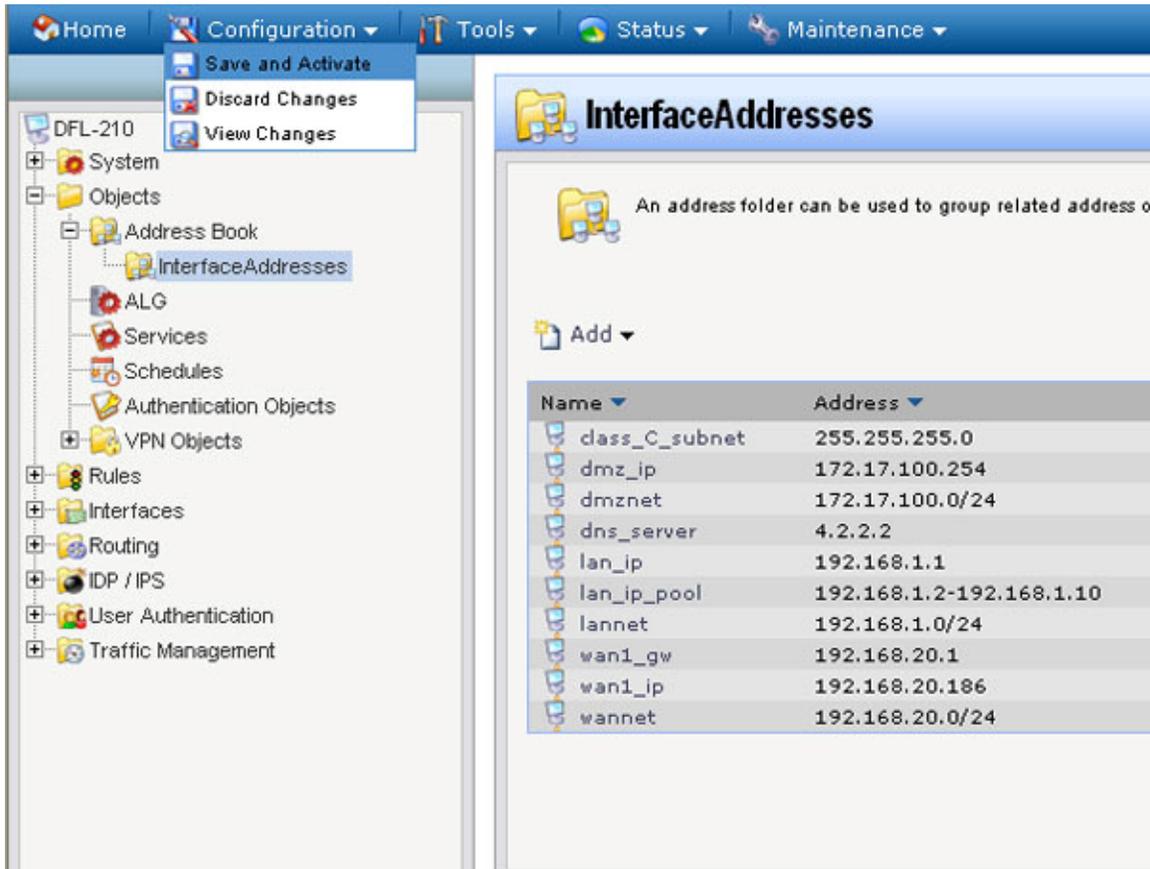

Step 6 After save and activate, please wait for approx 7 to 10 seconds, you will be able to see the login page again, **please login immediately once you see the login page or else the IP address of the DFL-210 will revert back to old IP address due to same security mechanism.**

Step 7 You are now done with the new IP setup. You can remove the secondary binding IP and manually configure the static IP in your PC.