


This is how you block an attacking public IP from the outside:

Log onto your firewall and do the following:


1. Click on Objects → address book → interface addresses → add → IPv4 address.

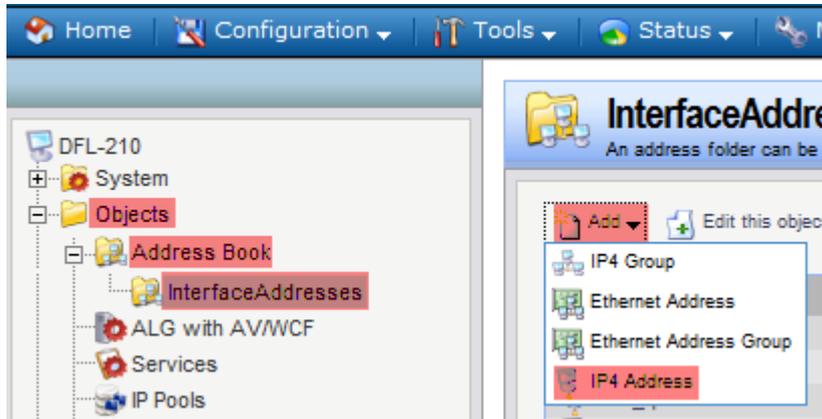


2. Under the General tab, name your “attacker” IP and specify the “attacker’s” IP.




3. Then it should look like this:

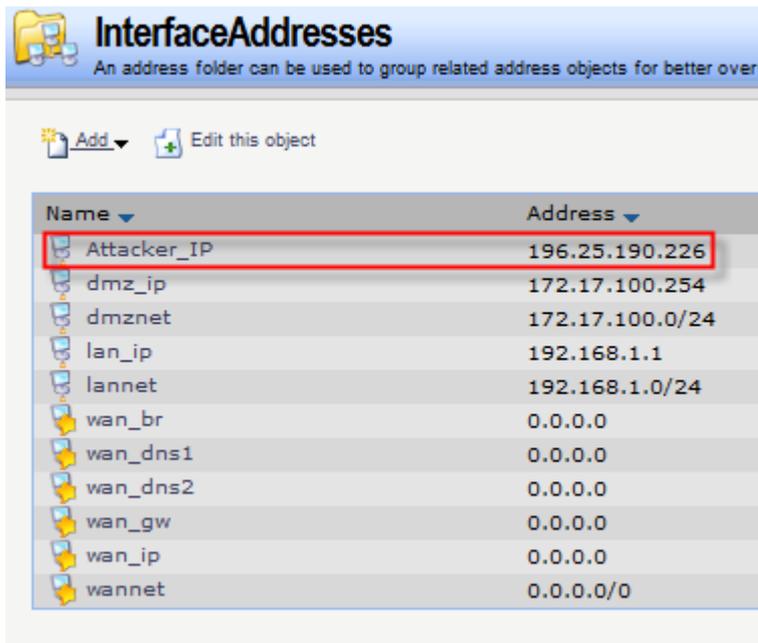


- Now we need to add an IP rule to block that IP. Click on Rules → IP Rules and under the General tab, name your rule = drop-public-ip, Action = Drop, Service = all_services. Your address filter will be as follows: Interface source = wan1, Network source = attacker_ip, Interface destination = any and Network destination = all-nets.

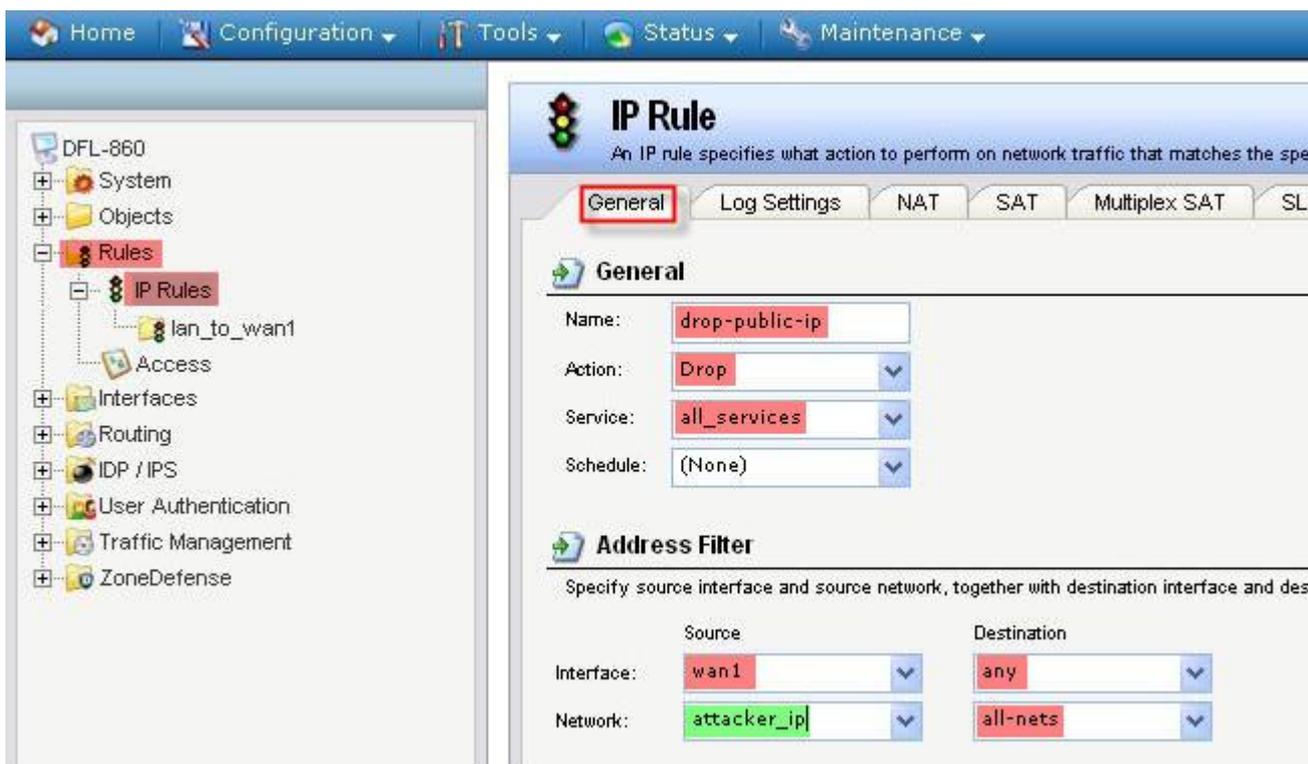

- Now you need to move your IP rule to the top of the list. Right-click the rule and select Move to Top.

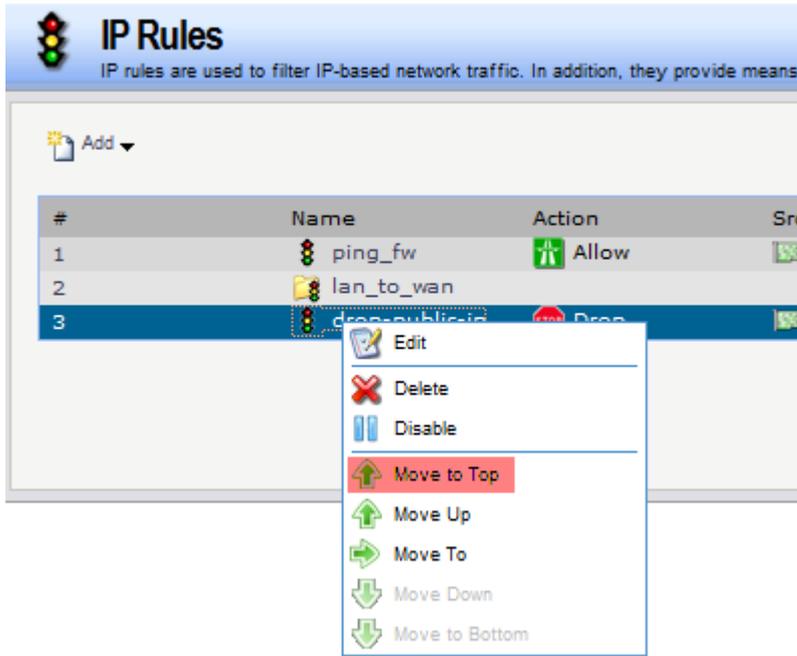

6. Now it should look like this:

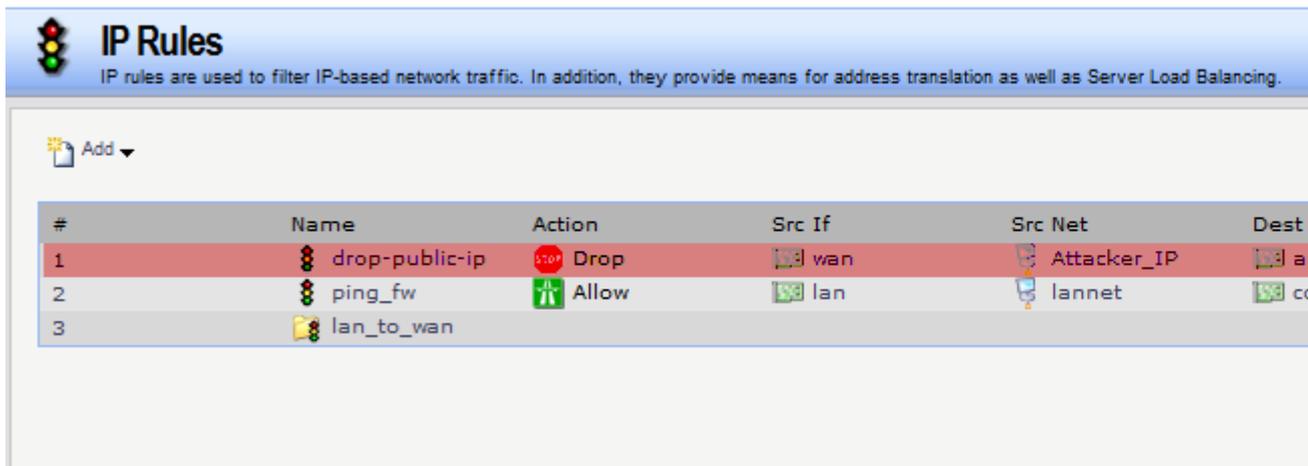

7. Save and activate and you are done. Your network will now be safe from that attacking public IP.

