


How to upgrade your firewall's firmware

Consult our ftp site (<ftp.dlinktech.co.za>) for the latest available firmware.

Log into your firewall.

To log in, open your browser and type the IP address (default-192.168.1.1) of the firewall in the address bar and press “Enter”.

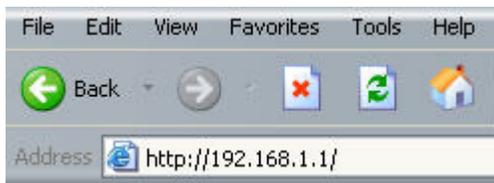


This will take you to the Login screen. Use “admin” as username and “admin” as password.




Now you are logged into your firewall.

Upgrading the firmware.

Click on Maintenance and then upgrade.

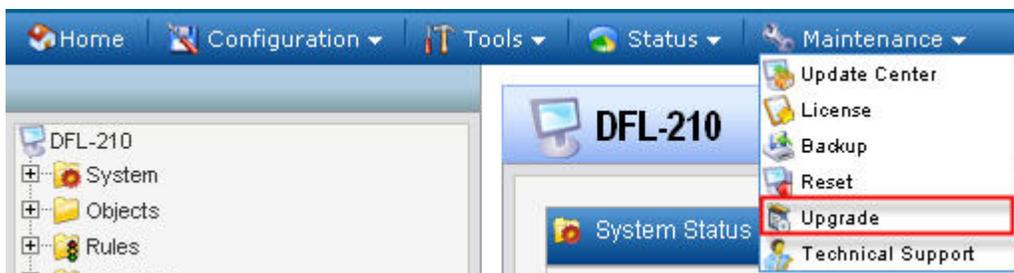

Click on the Browse button (1) to browse to the firmware you downloaded and saved on your computer, select it and click on Upload firmware (2).

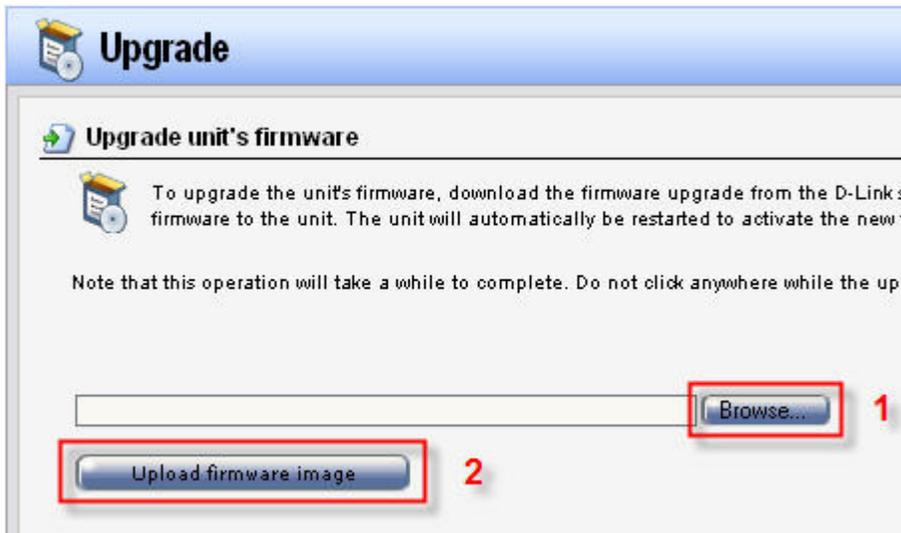

You have now upgraded your firmware.