

D-Link Quick Installation Guide

This product can be setup using any current web browser, i.e., Internet Explorer 6 or Netscape Navigator 7.0



DP-311U
2.4GHz Wireless
Print Server

Before You Begin

You will need an Ethernet-enabled device, such as a laptop or desktop computer and a USB printer that will connect to the DP-311U.

Important: TURN OFF the power to the printer before installing the DP-311U.

Check Your Package Contents



DP-311U Wireless USB Print Server



CD-ROM (Software, Manual and Warranty)



5V DC 2.5A Power Adapter




Using a power supply with a different voltage rating will damage this product and void its warranty.

If any of the above items are missing, please contact your reseller.

1

Connecting The DP-311U To Your Network

First, insert one end of a straight-through CAT5 Ethernet RJ-45 cable into the “**Network Port**” (shown below.) Connect the other end of the cable to the LAN port of the gateway or switch. **Note: Do not connect the power cord to the DP-311U until you are advised to do so.**

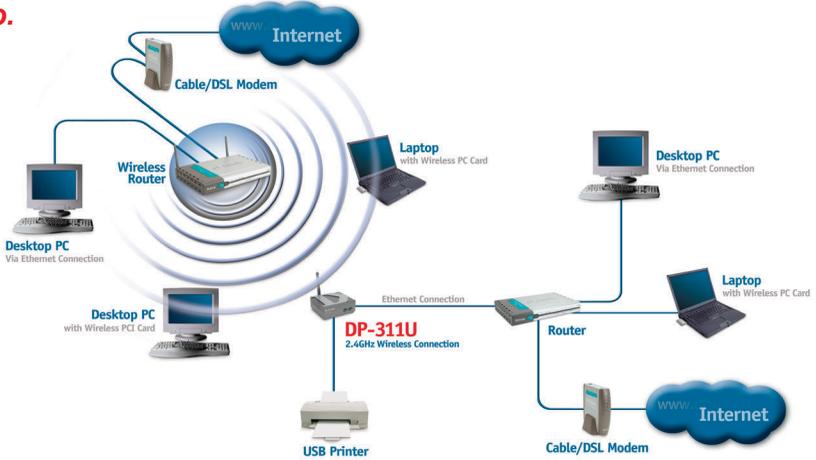


Warning!

Only a USB printer may be connected to the USB port of the DP-311U. Do not connect any other USB device to the USB port; doing so may damage the unit, voiding the warranty for this product.

Next, make sure that the Printer is turned **OFF**.

Using the USB cable, connect one end of the cable to the USB port of the DP-311U (shown below) and the other end to the USB port of the printer. Turn **ON** the printer.

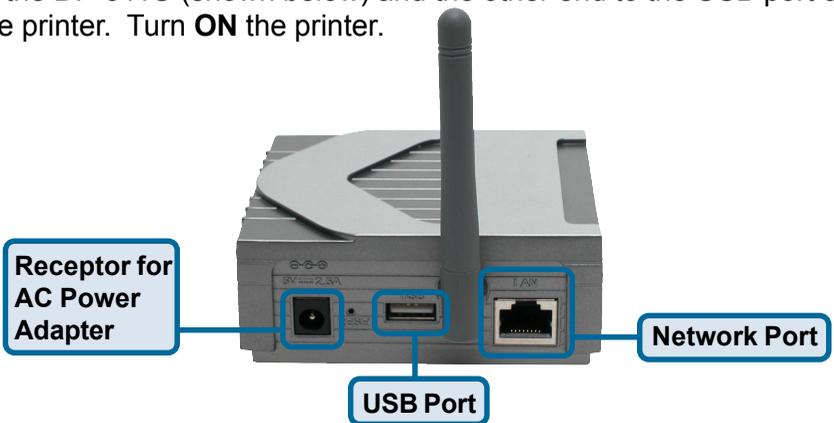

Then, plug one end of the power adapter into the DP-311U and the other end into your electric outlet. The DP-311U will turn on and begin a self-test.



For Mac OS printing, please refer to manual (.pdf) located on the CD-ROM.


2

Setting up your DP-311U for network printing in Windows XP

For additional Windows operating system setup or information on the web-management interface, refer to the manual located on the CD-ROM.

The factory default IP address of the DP-311U is 192.168.0.10. In order to network to the printer through the DP-311U, the DP-311U must have the same IP network settings as your network. IP address can be assigned manually or automatically by DHCP, BOOTP or RARP. To access the print server's web configuration, manually assign an IP address on one of the wired PC's on your network to the same subnet as the print server.


Go to **Start > right click on My Network Places > select Properties > Double-click on the Network Connection** associated with your Network Adapter.

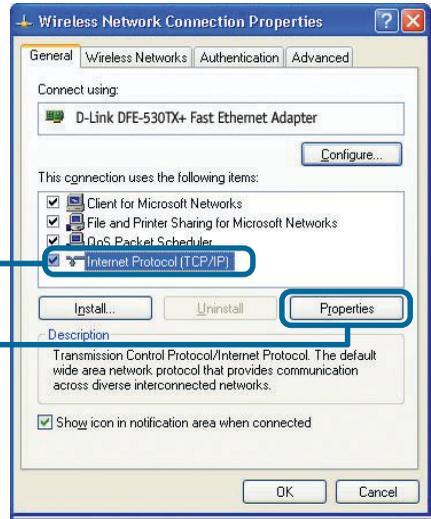

Click **Internet Protocol (TCP/IP)**

Click **Properties**

Input a static IP address in the same range as the print server.

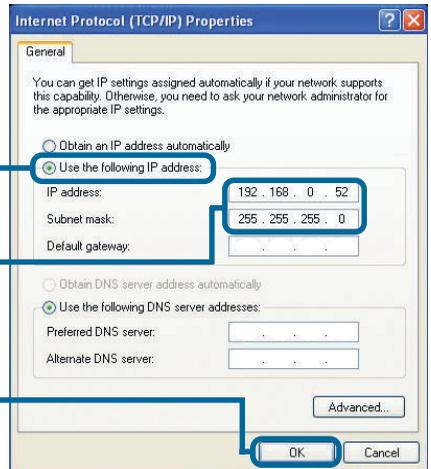

Select **Use the following IP address**

IP address: 192.168.0.52
Subnet mask: 255.255.255.0

Click **OK**

2 Setting up your DP-311U for network printing in Windows XP (continued)

Click **OK** to apply IP address settings.




Click **OK**

Using your web browser enter the IP address of the DP-311U. By default the IP address is set to **192.168.0.10**



The IP address of the DP-311U can be modified on the **Network** tab of the web configuration menu.

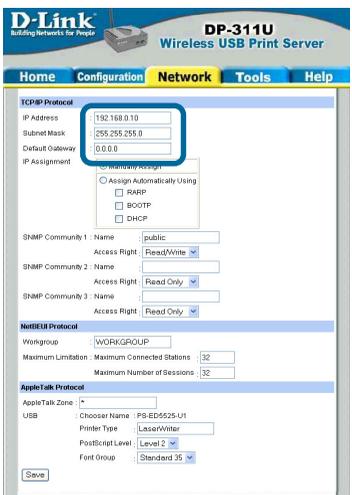

The following instructions use the print server's default IP address as an example. Make the appropriate changes if you modify the DP-311U's IP address.

2

Setting up your DP-311U for network printing in Windows XP (continued)

Click on the **Configuration** tab to view the current **Wireless Settings**.

D-Link
Building Networks for People

DP-311U
Wireless USB Print Server

Home **Configuration** Network Tools Help

System Device

Server Name : PS-ED6525

Location : _____

Admin Contact : _____

Password : New Password : _____
Confirm Again : _____

Port Setting

USB : Port Name : PS-ED6525-U1

Description : _____

P.L. Printer : No

Wireless Interface

Connection Mode : Infrastructure Ad-Hoc

ESS-ID : default

Wireless Channel : 6

Transmission Rate : Fully Automatic

WEP Key Encryption : Disable 64 bits 128 bits

WEP Key : _____ ASCII HEX

Confirm WEP Key : _____

Save

! Write down on a piece of paper the Port name that you wish to use.

1 Select your **Connection Mode**

2 Enter the **ESS-ID** of the remote access point or wireless router you wish to connect to.

3 If you would like to set **WEP Encryption**, select the encryption level and the key here.

Click **Save**

1 What is Infrastructure and Ad-Hoc Mode?

Ad-Hoc: Refers to two or more 802.11b wireless devices that communicate directly with one another without using an access point or any connection to a wired network.

Infrastructure: Refers to an 802.11 network in which wireless devices communicate with each other by first going through an Access Point (AP) or wireless router.

2 What is an SSID?

A workgroup name of your Wireless Network. All wireless devices must all have the same SSID to communicate on the Wireless Network. All D-Link Wireless devices have the default SSID of default, all lower case.

3 How does WEP Work?

64 bit WEP encryption uses a 10 hexadecimal character key. **128 bit WEP** uses a 26 hexadecimal character key. The WEP encryption key must match the WEP settings on your AP or wireless router to connect properly.

2

Setting up your DP-311U for network printing in Windows XP (continued)

For Windows XP:

Go to Start>Printers and Faxes>Add a Printer or Go to Start>Control Panel> Printers and Faxes


Double-click on the "Add Printer" icon



Click Next

Select "Local Printer."

Please make sure to deselect **Automatically detect and install my Plug and Play printer.**

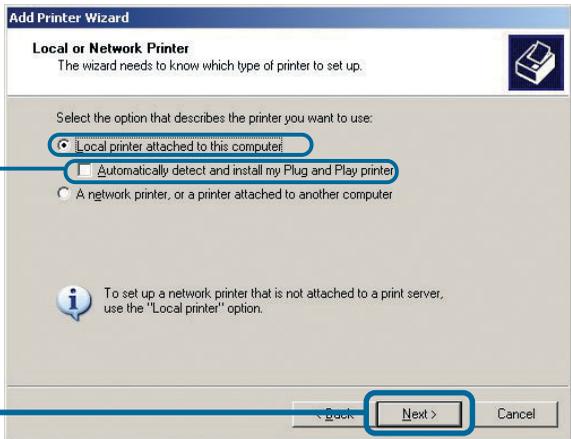


Click Next

2

Setting up your DP-311U for network printing in Windows XP (continued)

Select **“Create a new port.”**
At the pull-down menu, high-
light **“Standard TCP/IP Port.”**

Click **Next**

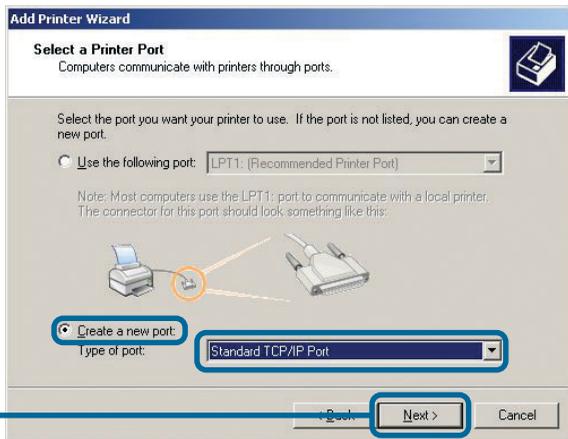


Click **Next**



Type in the IP address of the
print server. (i.e. 192.168.0.10)
The port name will automati-
cally be filled in.

Click **Next**

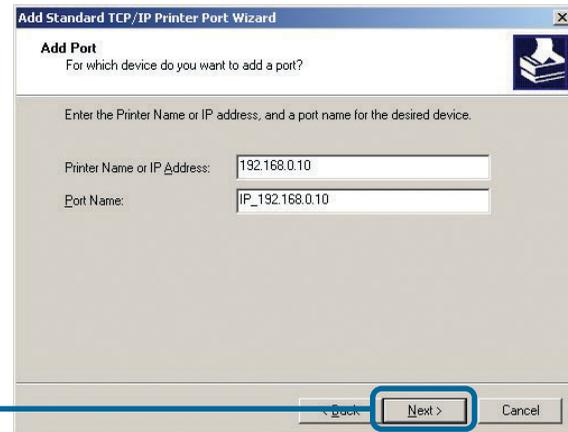

 This may take a few seconds

2

Setting up your DP-311U for network printing in Windows XP (continued)

Select **“Custom”**
Then click on **Settings**.

Click **Settings**

Select **“LPR”**


Input the port name of
the port being used by
the printer

Click **OK**

Click **Next**

2


Setting up your DP-311U for network printing in Windows XP (continued)

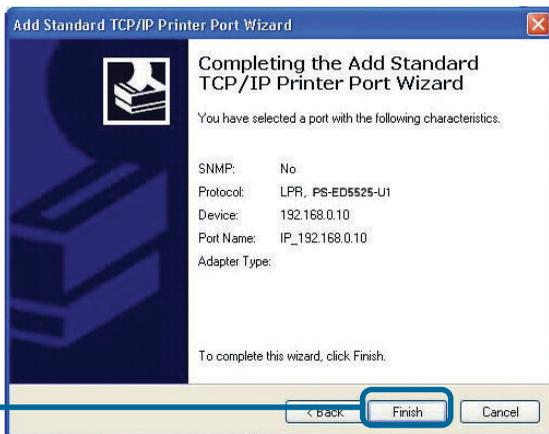


In this window, scroll down to find your printer. (If it is not listed, insert the driver CD or diskette that came with your printer.)

Click on “**Have Disk...**”

Then, scroll down and highlight the printer.

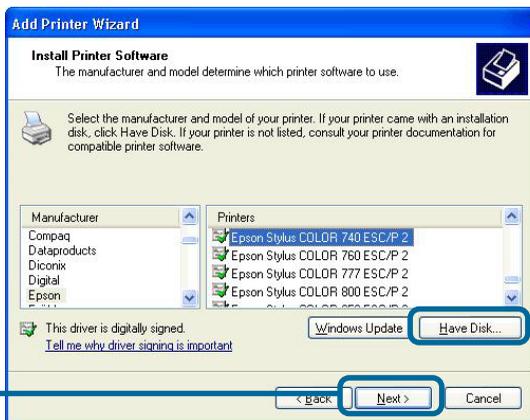


At this screen, you can input a name for this printer.

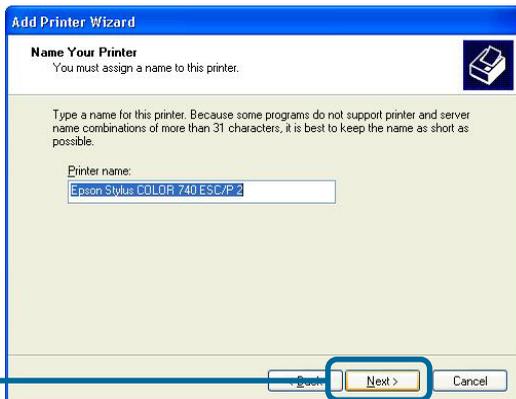

2 Setting up your DP-311U for network printing in Windows XP (continued)

Select “Yes” to print a test page

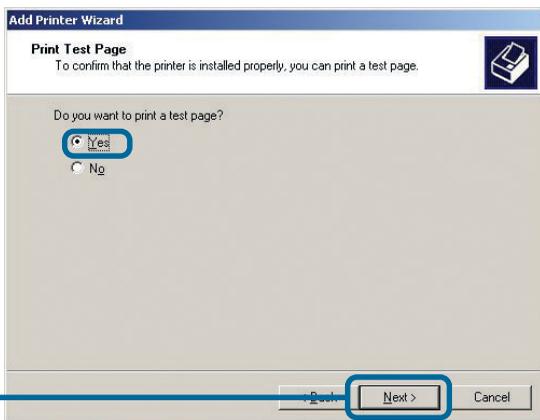

3 Your Setup is Complete!

The printer is now ready for printing with Windows XP, on your network.



Notes

Technical Support

You can find the most recent software and user documentation on the **D-Link** website.

D-Link provides free technical support for customers within the United States and within Canada for the duration of the warranty period on this product.

U.S. and Canadian customers can contact **D-Link** technical support through our website or by phone.

Tech Support for customers within the United States:

D-Link Technical Support over the Telephone:

(877) 453-5465

24 hours a day, seven days a week

D-Link Technical Support over the Internet:

<http://support.dlink.com>

email: support@dlink.com

Tech Support for customers within Canada:

D-Link Technical Support over the Telephone:

(800) 361-5265

Monday to Friday 8:30am to 9:00pm EST

D-Link Technical Support over the Internet:

<http://support.dlink.ca>

email: support@dlink.ca

