


01

If you have a **DSL** service connect the **short grey** cable to the splitter/ microfilter and the port marked "OUT" on the power supply. Connect the **grey** telephone cable to the port marked "IN" on the power supply. Connect the other end of the cable to the telephone wall socket.

If you have a **DSL** service

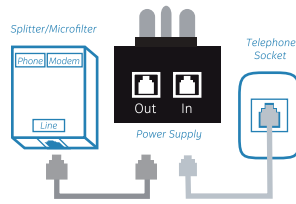


OR

01

If you have a **Fibre-to-the-Home** service, connect the yellow Ethernet cable to the blue WAN port on the back of the router. Connect the other end of the yellow cable to the LAN port of the fibre device (ONT). **Skip to Step 3.**


If you have a **Fibre** service

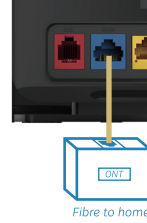

02

Connect the **red** telephone cable to the red DSL port at the back of the router and the other end into the "MODEM" port of the splitter/microfilter.


You can connect a telephone to the green phone port of the splitter/microfilter.

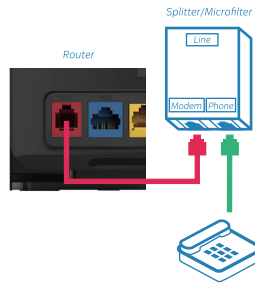

03

Connect the power connector of the power supply to the power socket at the back of the router.

Plug the power supply into the wall outlet. Switch the wall outlet and the router on.

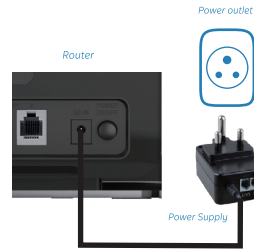

04

You can set up your router using either Wi-Fi or an Ethernet cable.

Wi-Fi:

Use the default Wi-Fi SSID and password (WPA Key) printed on the back of the router to connect your Wi-Fi enabled device to the router.

Ethernet cable:

Connect the yellow RJ-45 Ethernet cable to any yellow LAN port at the back of the router and the other end into your PC LAN port.



05

DSL and FTTH

Launch an Internet browser (Google Chrome, Firefox, Internet Explorer, Safari, etc.) on your connected device.

In the URL web address field, enter **10.0.0.2**.

When prompted, enter the default router login details. The default username is **admin** and the default password is **admin**.

The installation wizard will start automatically. Please follow the steps of the wizard to finish the configuration of the router.

URL: **10.0.0.2**


Username: **admin**

Password: **admin**

06


To connect your LTE/3G USB dongle (optional) for failover mode, simply insert your SIM card* into the slot on the 3G USB modem and connect the dongle to the back or side of the router.

*Not included

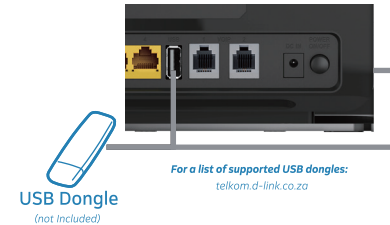


07

To add additional USB storage (optional), simply insert the device into the USB storage port at the back or side of the router.

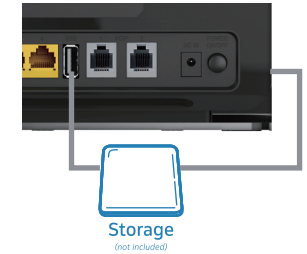

Installation Overview

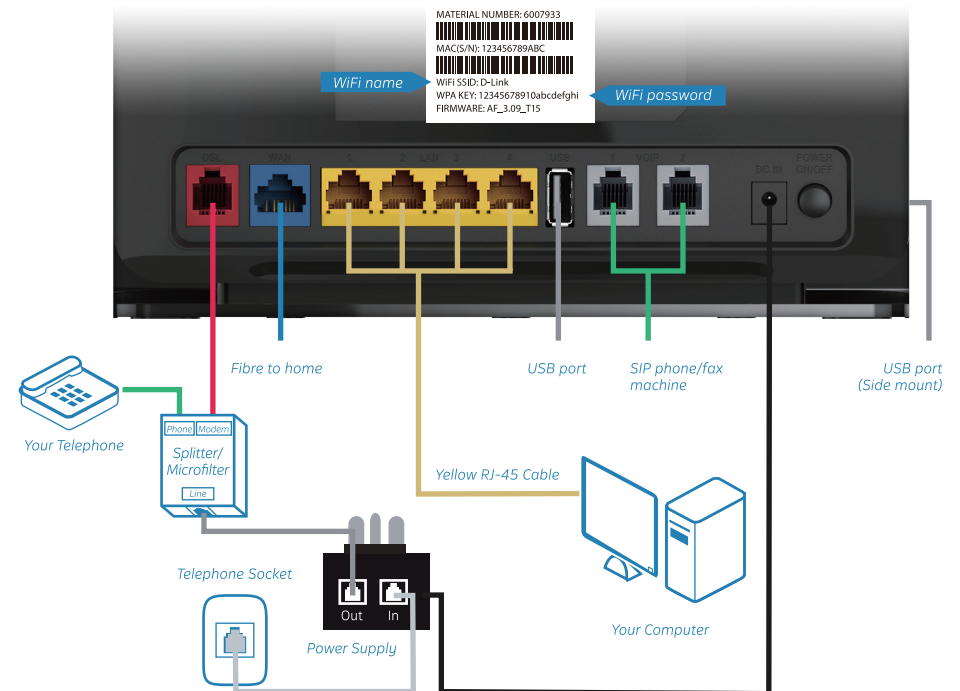

Product Support and Contact Information

A setup wizard utility is provided on the router webpage to assist with easy configuration. In the event of a problem arising, the help screens will suggest the appropriate course of action to resolve the issue.

If the wizard is unable to resolve the issue, please contact either the Telkom DSL or D-Link Modem Support line.

Please note that the operator will request the outcome of this wizard. Make sure this has been done and have resulting information available.

D-LINK MODEM SUPPORT:

012 741 2000

Operating hours:

08:00am - 21:00pm (Mon - Sun)

www.d-link.co.za

TELKOM DSL SUPPORT:

10210

Operating Hours:

06:00am - 21:00pm (Mon-Fri)

06:00am - 20:00pm (Weekends)


www.telkom.co.za

Please phone Telkom for support if

If no dongle is connected and this light is flashing amber or off

If you're using Fibre and this light is off

If you're using a DSL line & this light is flashing or off

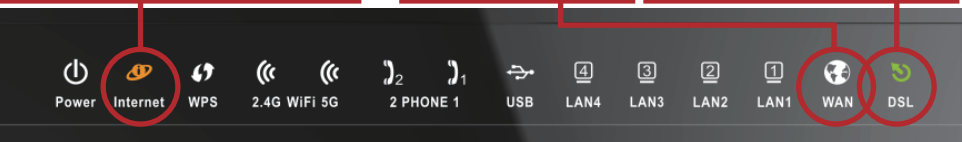

Note:

The Router and Power supply/protection, are not guaranteed against lightning or power surges.

The default IP address of the Router webpage is 10.0.0.2

The default router login account details are:

Default username: admin

Default password: admin

Note: It is a security risk to leave the default password as is. It is highly recommended that you change it to a unique password.

Telkom

PACKAGE DETAILS

DSL-G2562DG

A



DSL-G2562DG Router

B



Surge Protected Power Supply

C



2x RJ-11 Phone Cables
(Red and Grey)

D



RJ-45 Ethernet Cable
(Yellow)

E



Splitter/Microfilter