


## D-Link Africa Setup Guide Document.

### How do I setup my DSL-504T to connect to the Internet?

- Step 1 :** Change you Local Area Connection IP to a Static IP e.g. 192.168.1.45. Your default Gateway must point to the DSL-504T (Default IP is 192.168.1.1). The two DNS IP's are given to you by your ISP and they need to be entered as well.

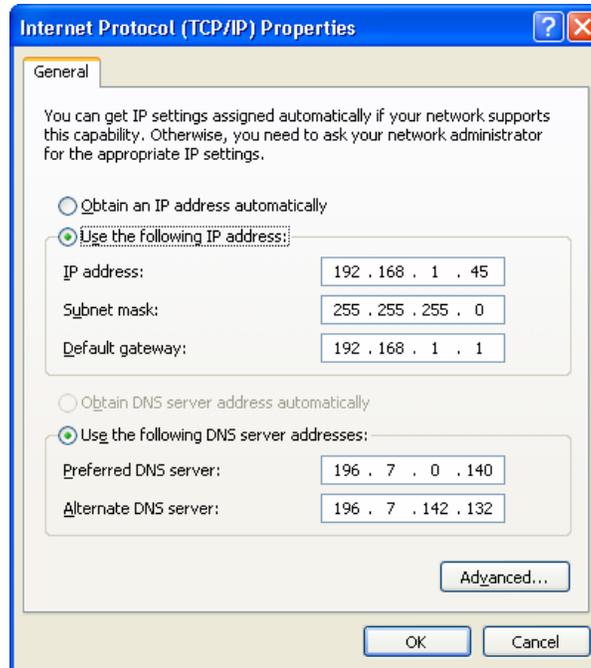


- Step 2 :** Open Internet Explorer and enter the default IP address of the DSL-504T, which is 192.168.1.1 (The default login Username and Password is **admin**)



## D-Link Africa Setup Guide Document.

**Step 3 :** Click on **Run Wizard**.

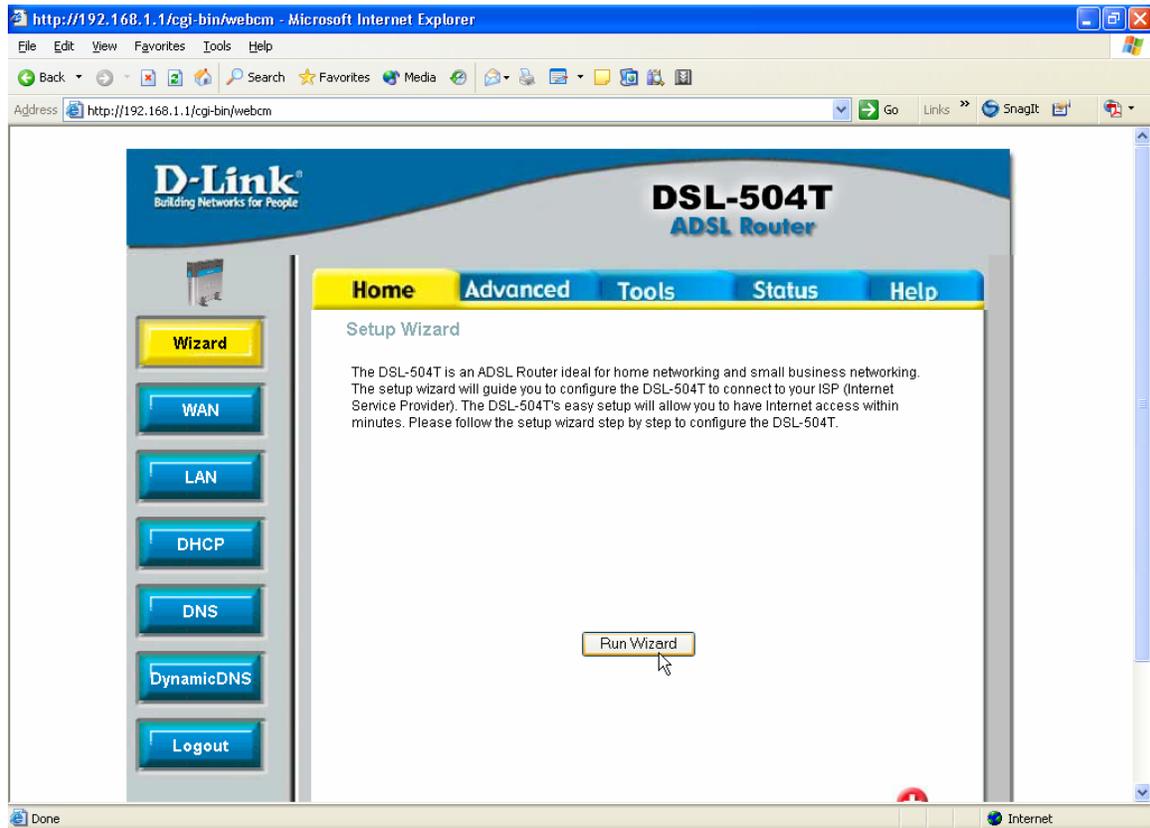


**Step 4 :** Click on **Next**.



## D-Link Africa Setup Guide Document.

**Step 5 :** Select your correct Time Zone and click Next.

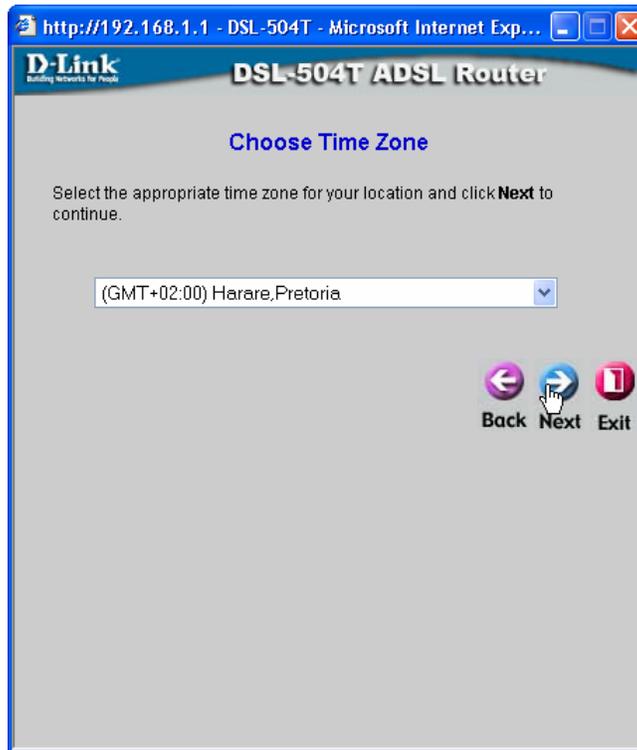


**Step 6 :** Select **PPPoE/PPPoA** and click Next.



## D-Link Africa Setup Guide Document.

- Step 7 :** Enter you Username and Password, received from you ISP for Internet connectivity, in the Username and Password block. Make sure that your **VPI is 8** and you **VCI is 35** and that the connection type is **PPPoE LLC** and click Next.

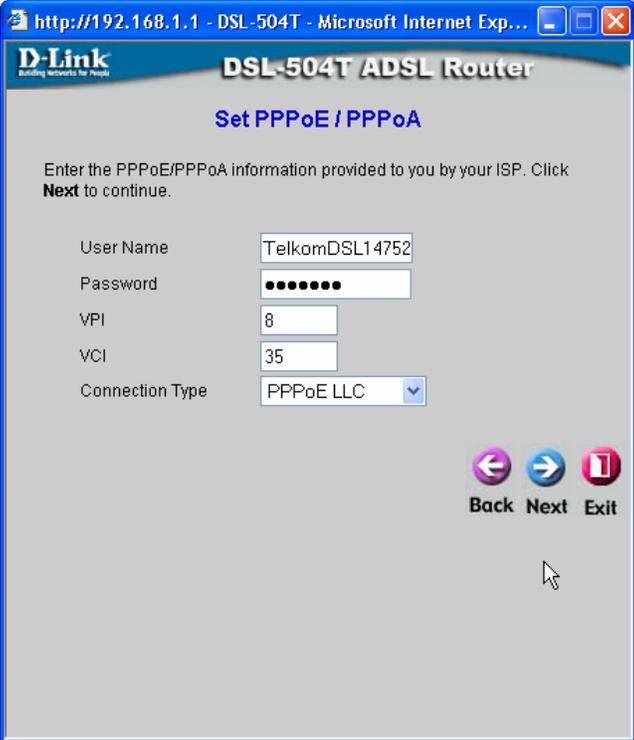

The screenshot shows a web browser window with the URL `http://192.168.1.1 - DSL-504T - Microsoft Internet Exp...`. The page title is "D-Link DSL-504T ADSL Router" and the sub-header is "Set PPPoE / PPPoA". The main text reads: "Enter the PPPoE/PPPoA information provided to you by your ISP. Click **Next** to continue." Below this, there are input fields for "User Name" (containing "TelkomDSL14752"), "Password" (masked with dots), "VPI" (containing "8"), "VCI" (containing "35"), and "Connection Type" (a dropdown menu set to "PPPoE LLC"). At the bottom right, there are three buttons: "Back" (left arrow), "Next" (right arrow), and "Exit" (stop sign).

- Step 8 :** Click on Restart.



The screenshot shows the same web browser window, but the page title is "D-Link DSL-504T ADSL Router" and the sub-header is "Setup Completed". The main text reads: "The Setup Wizard has completed. Click on **Back** to modify changes or mistakes. Click **Restart** to save the current settings and reboot the DSL-504T." Below this, there are three buttons: "Back" (left arrow), "Restart" (refresh/circular arrow), and "Exit" (stop sign).

## D-Link Africa Setup Guide Document.

The DSL-504T is going to restart and connect to your ADSL ISP. Once this is done you can click on **STATUS** to verify that you are connected. Now you should be able to view websites.

The screenshot shows the web interface of a D-Link DSL-504T ADSL Router. The browser window is titled "http://192.168.1.1/cgi-bin/webcm - Microsoft Internet Explorer". The address bar shows "http://192.168.1.1/cgi-bin/webcm". The interface features a navigation menu with tabs for Home, Advanced, Tools, Status, and Help. The Status tab is selected. On the left side, there is a sidebar with buttons for Device Info, DHCP Clients, Log, Statistics, ADSL, and Logout. The main content area displays "Device Information" with the following details:

Firmware Version : V2.01B01T01.RU.20060522

LAN	
MAC Address	00:11:95:E7:08:14
IP Address	192.168.1.1
Subnet Mask	255.255.255.0
DHCP Server	Enabled
NAT	Enabled

WAN	
Virtual Circuit	Pvc0
Status	Connected
Connection Type	pppoe
IP Address	165.145.233.56
Subnet Mask	255.255.255.255
Default Gateway	165.145.192.1
DNS Server	196.43.46.190