

## How do I setup DDNS on my DSL-504T?


Every day some ISP's update their system and in turn your Global IP changes with the update. DDNS is an option to link a domain name to a unit so that the Global IP gets updated to this domain periodically. To use DDNS you'll need to register a domain name either at [www.dyndns.org](http://www.dyndns.org) or [www.no-ip.com](http://www.no-ip.com).

- Step 1** : Open Internet Explorer and enter the default IP address of the DSL-504T, which is 192.168.1.1 (The default login Username and Password is **admin**)



- Step 2** : Click on **HOME** and **DynamicDNS** and at **DDNS Server** select your DDNS service host. Enter your Username, Password and Hostname in the appropriate spaces and click **Apply**.

## D-Link Africa Setup Guide Document.

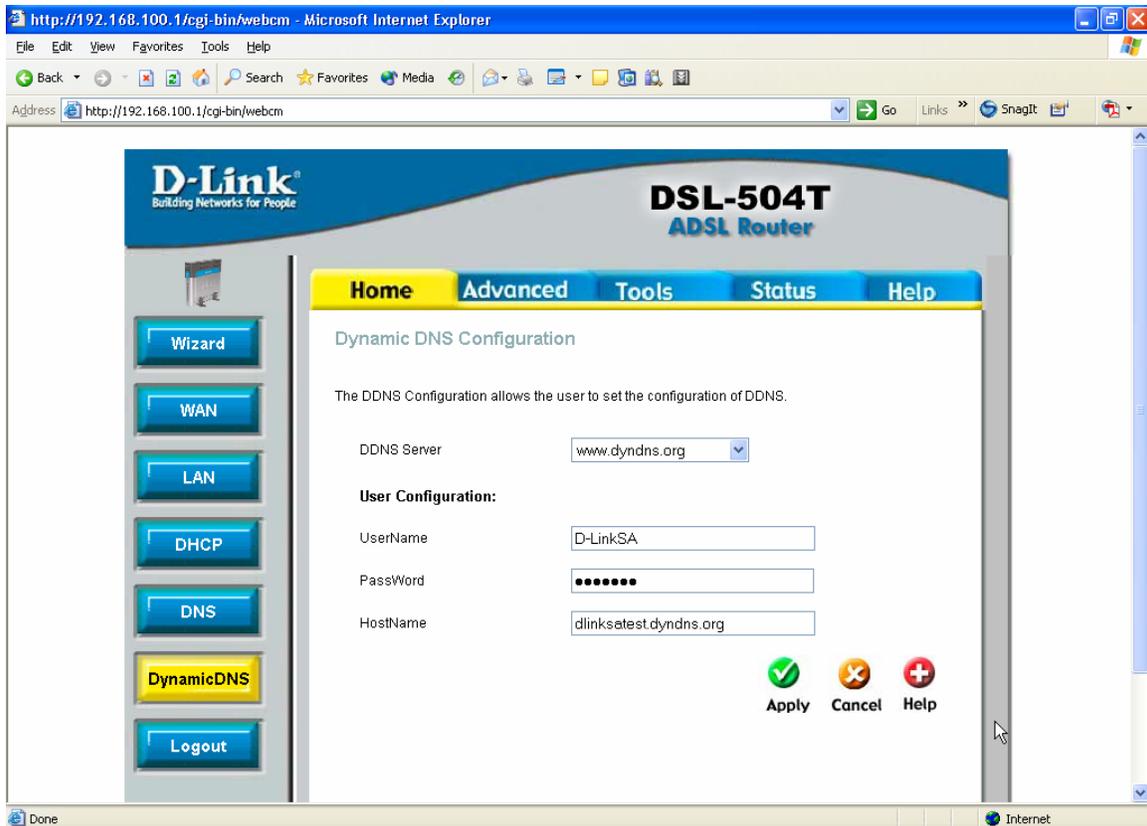

**Step 3 :** To permanently save your changes on the DSL-504T so that it won't be lost with a power Failure, click on **TOOLS** and **SYSTEM** and click on the **Save and Reboot** button.

**Step 4 :** To verify if your DDNS option is working, ping you domain used and verify if the IP resolves to the same IP indicated on your **STATUS** page of the DSL-504T.

