



D-Link Africa Setup Guide Document.

How do I recover my DSL-504T if the Status light is off?

- Step 1 :** Change you Local Area Connection IP to a Static IP e.g. 192.168.1.45 and disable your firewall.

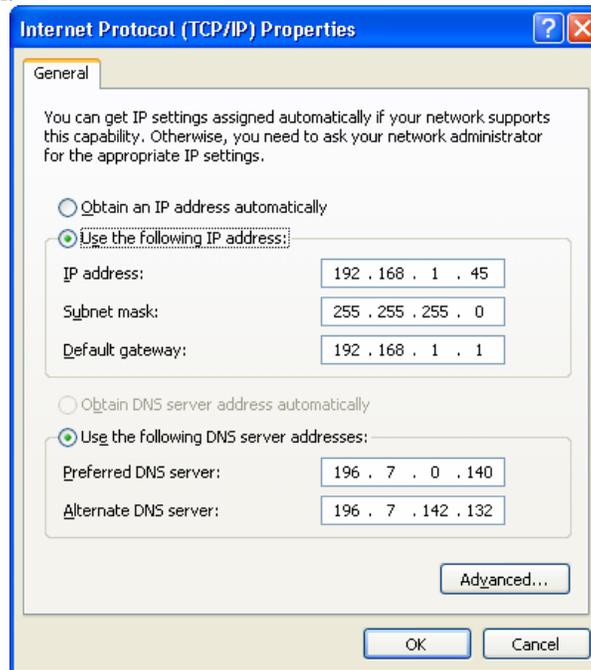


- Step 2 :** Download the firmware version V2.00B01T01.EU.20050630 from our local website http://www.dlink.co.za/dsl-504t_tech_s.php
- Step 3 :** Extract the file and run the application. (Please make sure that your DSL-504T is Connected to your PC directly or via a switch and powered on)

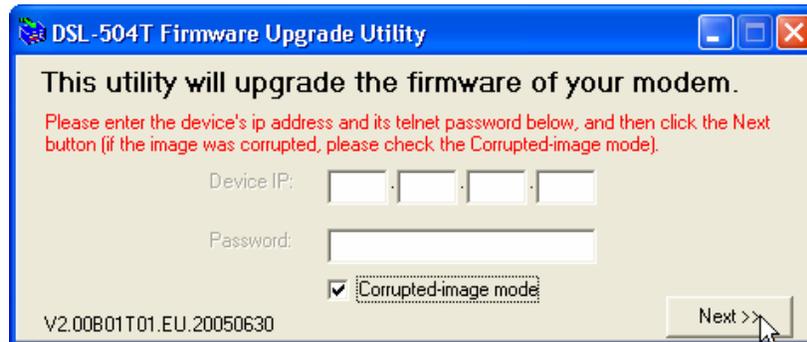

D-Link Africa Setup Guide Document.

Step 4 : Select Corrupted-image mode and click Next.

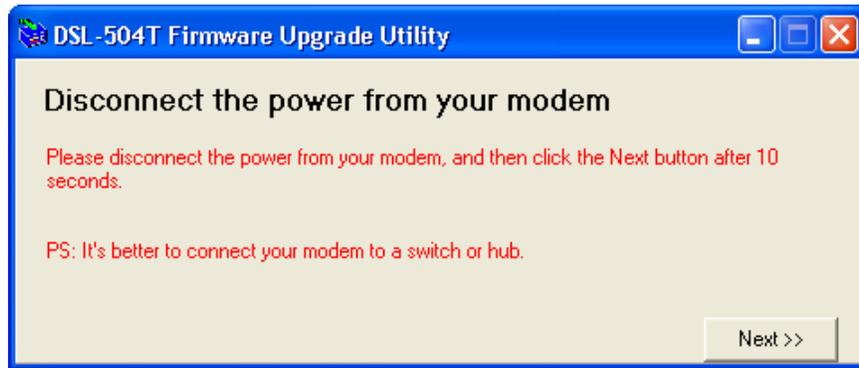


Step 5 : Please disconnect the power from your DSL-504T, and **then** click the Next button after 10 seconds.



Step 6 : Please connect the power to your DSL-504T immediately.

Step 5 : The Application will flash the EEPROM and reload the ADSL2+ firmware on your DSL-504T automatically.

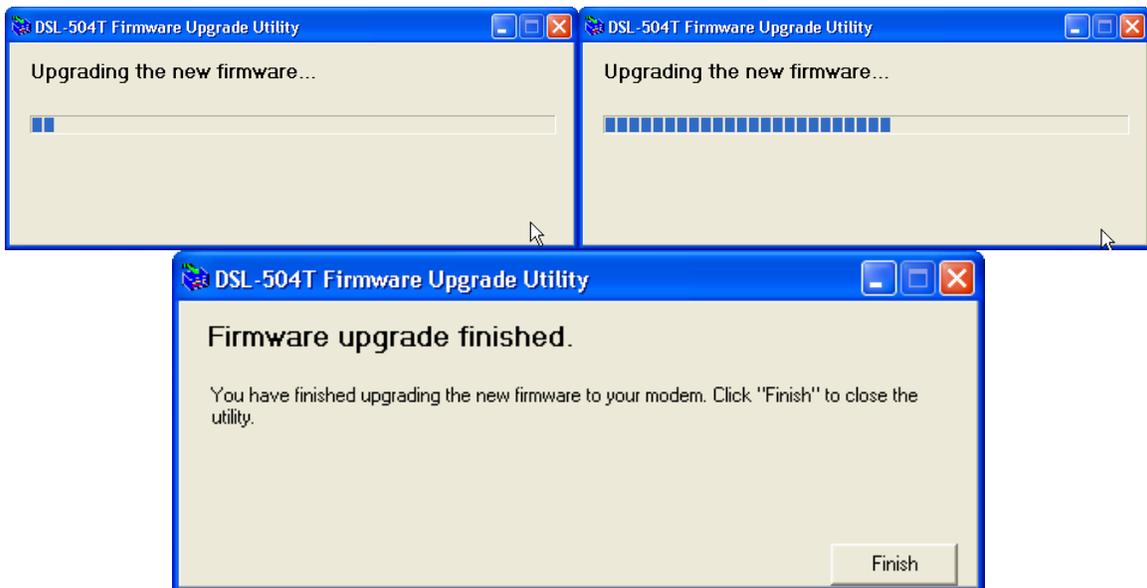

Step 6 : When done click on Finish.