

[Basic Manual Setup for DWR-957X- How to change Wi-Fi channel]

Step 1: Open your web browser and type **10.0.0.2** into the address bar, then press Enter.



If your device is connected to the router, it will take you to a blue D-Link page asking for a username and password. Default Username is admin, password is admin, unless it was updated.



Step 2: Once logged in, navigate to

Advanced Setup → Wireless

Here you will have two options for both the 2.4Ghz and the 5Ghz, you will have to change them individually.



Step 3: Look for where it says cannel, currently it should be on auto, if you click on it you will have the option to change it here. For the **2.4Ghz** we recommend using channels **1, 6 or 11** and for the 5Ghz we recommend using channels **36, 40 or 44**. Scroll down and click on apply.

Rate:	Auto
Rx Chain Power Save:	Disable
TX Power:	100%
Choose Region:	ZA
Channel:	Auto
Current Channel:	9
Auto Channel Timer:	1 Hour
Beacon Interval:	100
RTS Threshold:	2347
Fragment Threshold:	2346
DTIM Interval:	1
Short GI(Guard Interval):	<input type="checkbox"/>
WMM:	<input checked="" type="checkbox"/>
WMM APSD:	<input type="checkbox"/>
TWT:	<input type="checkbox"/>
MU-MIMO:	<input type="checkbox"/>

Apply Refresh