



[Basic Manual Setup for G413X-How to configure DDNS Account]


- 1) On a device that is connected to the router (preferably with a cable on a pc/laptop or WiFi on a phone is fine but please make sure your mobile data is off).
- 2) Open a web Browser (internet explorer/google chrome/firefox) input the IP address of your router (default is 10.0.0.2 unless it was changed), we will use Microsoft Edge in this example.

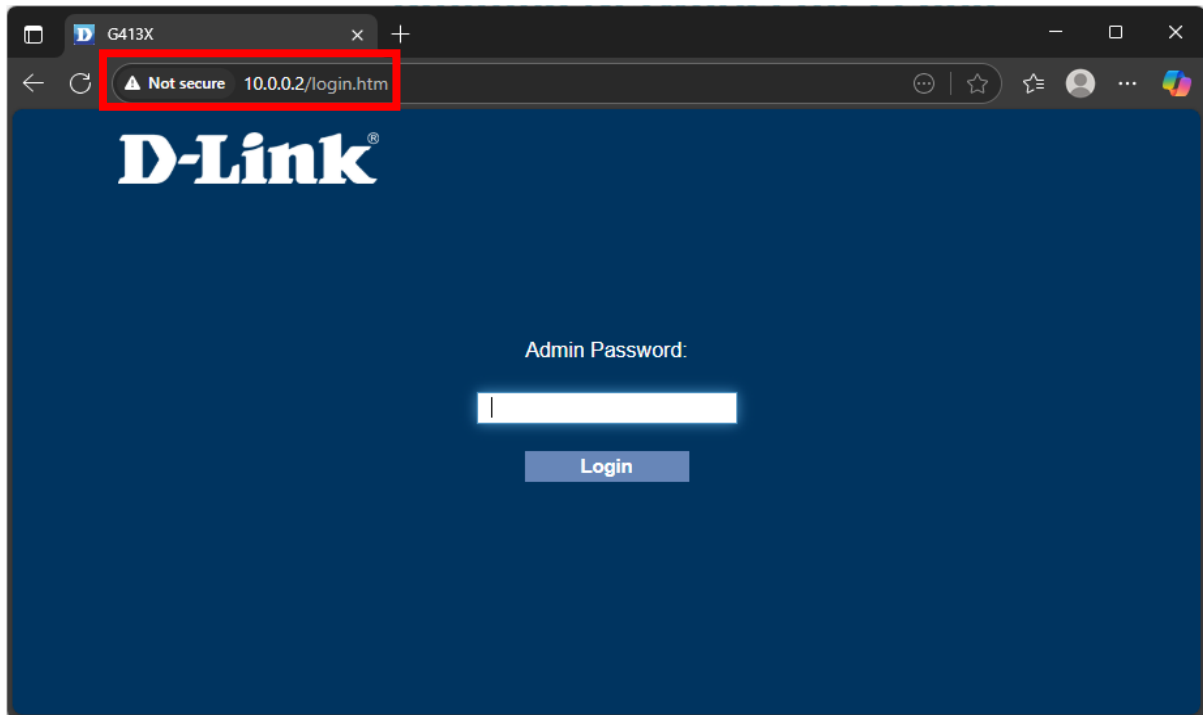

3) Login (default password is admin unless it was changed)

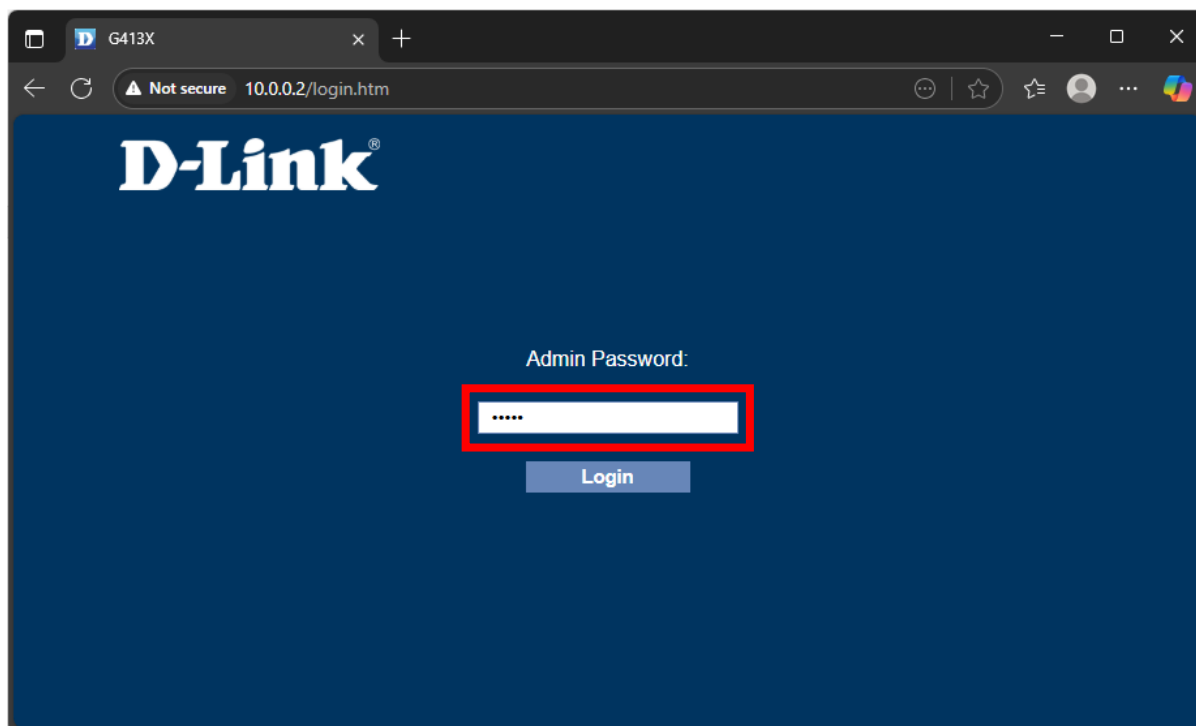

4) Go to Management (top) then DDNS (left)

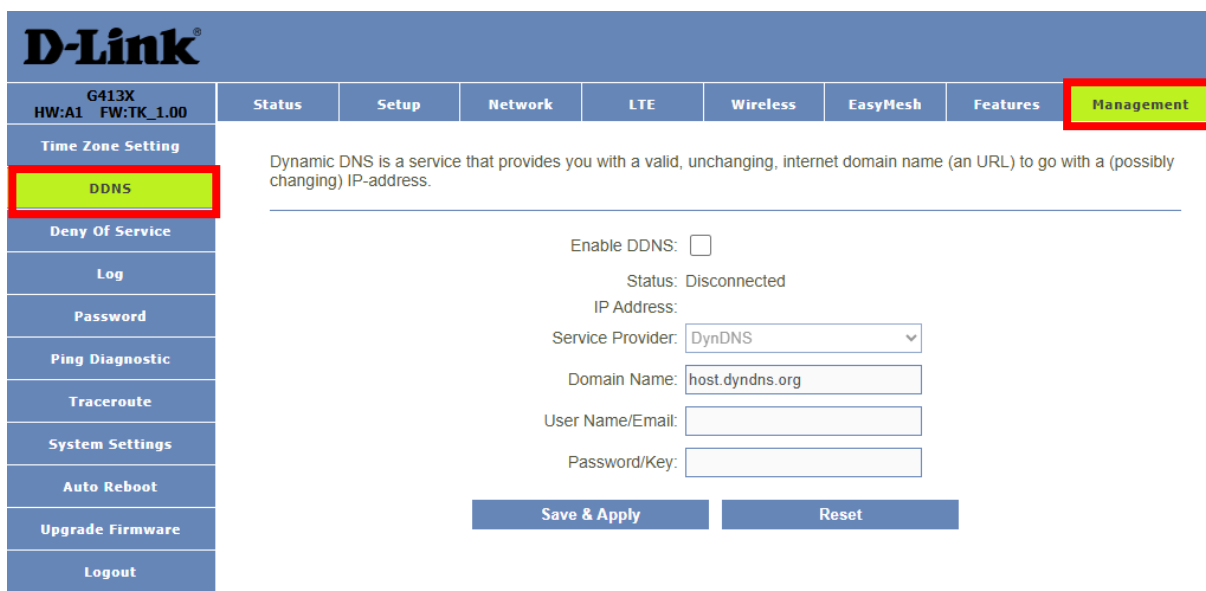


5) Enable the DDNS service

The screenshot shows the D-Link web interface for DDNS configuration. On the left is a navigation menu with options: Time Zone Setting, DDNS (highlighted), Deny Of Service, Log, Password, Ping Diagnostic, Traceroute, System Settings, Auto Reboot, Upgrade Firmware, and Logout. The main content area has a header 'Dynamic DNS is a service that provides you with a valid, unchanging, internet domain name (an URL) to go with a (possibly changing) IP-address.' Below this, the 'Enable DDNS' checkbox is checked and highlighted with a red box. Other fields include 'Status: Disconnected', 'IP Address:', 'Service Provider: DynDNS' (dropdown), 'Domain Name: host.dyndns.org', 'User Name/Email:', and 'Password/Key:'. At the bottom are 'Save & Apply' and 'Reset' buttons.

6) Click on the drop down menu next to [Service Provider] and select one of the supported DDNS service providers.

This screenshot shows the same DDNS configuration page, but the 'Service Provider' dropdown menu is open, showing a list of options: DynDNS, TZO, No-IP, and FreeDNS. The dropdown menu is highlighted with a red box. The 'Enable DDNS' checkbox remains checked. The other fields and buttons are the same as in the previous screenshot.

7) Fill in the required details for your DDNS account

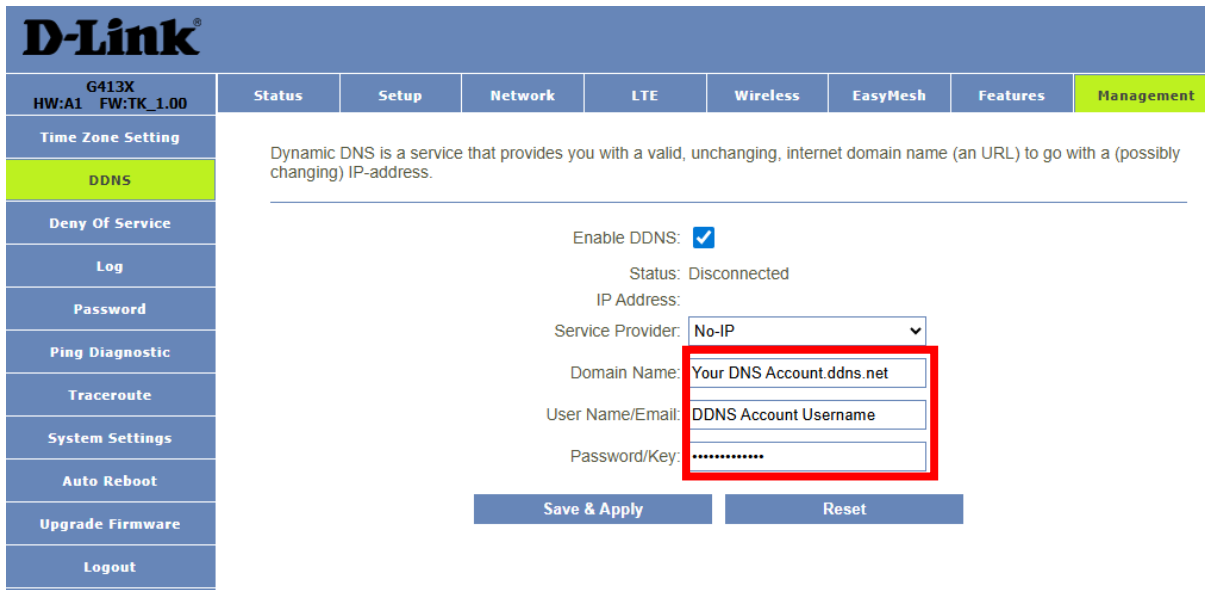

D-Link®

G413X
HW:A1 FW:TK_1.00

Status Setup Network LTE Wireless EasyMesh Features **Management**

Time Zone Setting

DDNS

Deny Of Service

Log

Password

Ping Diagnostic

Traceroute

System Settings

Auto Reboot

Upgrade Firmware

Logout

Dynamic DNS is a service that provides you with a valid, unchanging, internet domain name (an URL) to go with a (possibly changing) IP-address.

Enable DDNS: ☒

Status: Disconnected

IP Address:

Service Provider: No-IP

Domain Name: Your DNS Account.ddns.net


User Name/Email: DDNS Account Username

Password/Key:

Save & Apply Reset

- Domain Name: Input DNS host name you created on the DNS provider site.
- User Name: This is the Username used to login on the DNS provider site.
- Password: This is the Password used to login on the DNS provider site.

8) Click on Save & Apply

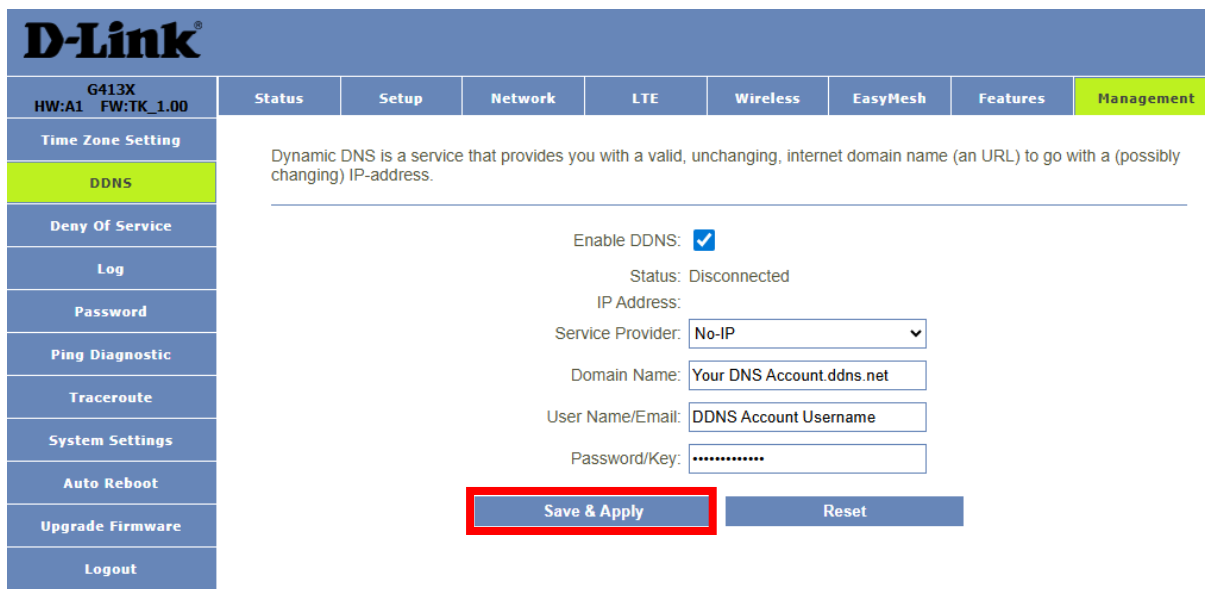

D-Link®

G413X
HW:A1 FW:TK_1.00

Status Setup Network LTE Wireless EasyMesh Features **Management**

Time Zone Setting

DDNS

Deny Of Service

Log

Password

Ping Diagnostic

Traceroute

System Settings

Auto Reboot

Upgrade Firmware

Logout

Dynamic DNS is a service that provides you with a valid, unchanging, internet domain name (an URL) to go with a (possibly changing) IP-address.

Enable DDNS: ☒

Status: Disconnected

IP Address:

Service Provider: No-IP

Domain Name: Your DNS Account.ddns.net

User Name/Email: DDNS Account Username

Password/Key:

Save & Apply Reset

9) After the count down, if the details are correct, it will show Connected.

D-Link®

G413X
HW:A1 FW:TK_1.00

StatusSetupNetworkLTEWirelessEasyMeshFeaturesManagement

Time Zone Setting

DDNS

Deny Of Service

Log

Password

Ping Diagnostic

Traceroute

System Settings

Auto Reboot

Upgrade Firmware

Logout

Dynamic DNS is a service that provides you with a valid, unchanging, internet domain name (an URL) to go with a (possibly changing) IP-address.

Enable DDNS: ☒

Status: Connected
IP Address: 192.168.100.249

Service Provider: No-IP

Domain Name: yourdnsaccount.ddns.net

User Name/Email: DDNS Account Username

Password/Key:

Save & ApplyReset

10) If it shows Disconnected, Please check the input details again.

- For LTE users, the APN may need to update to unrestricted.
Or you may need to contact your SIM ISP to unrestrict your SIM/LTE Service.

Page 5 | 5