


Print server settings for DIR-825 Blue interface.

Connect the printer to the USB port of the router and enable the print server in the router settings.




Step 1 Click **Start-> Control Panel**, and select **Devices and Printers**.

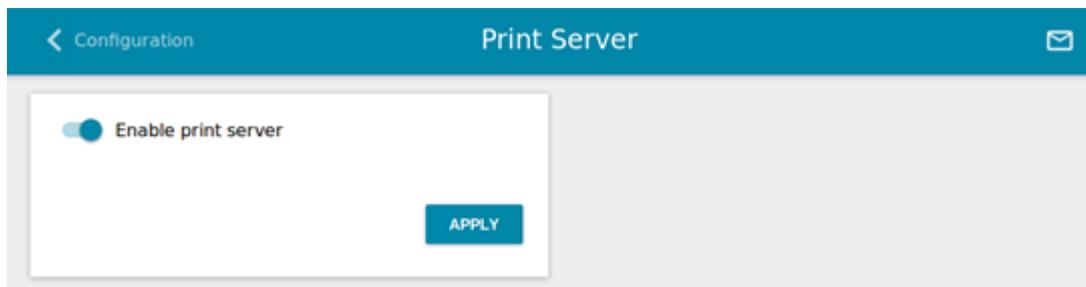


Step 2 Click **Add a printer**.





Step 3 Select **Add a local printer**.

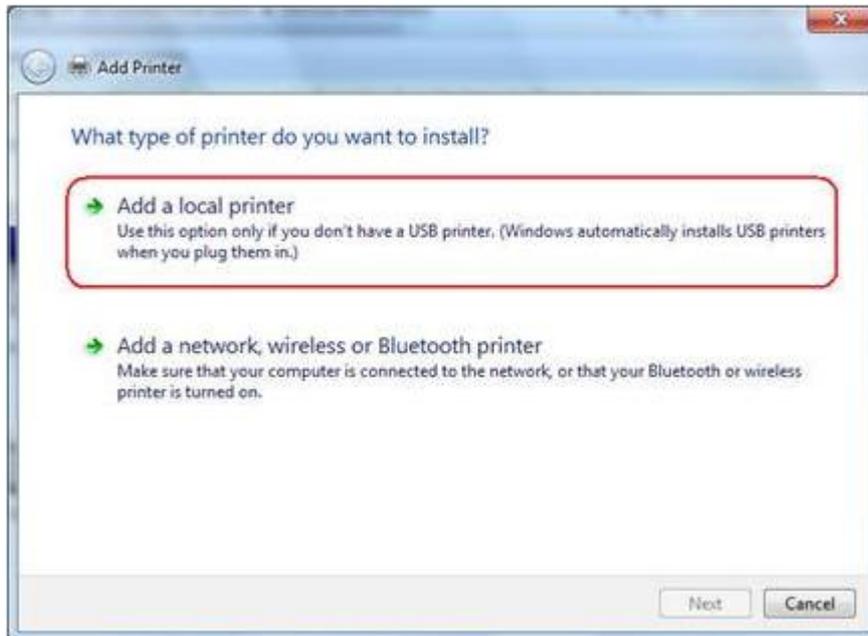

Step 4 Select **Create a new port**, and the type of port is **Standard TCP/IP Port**.

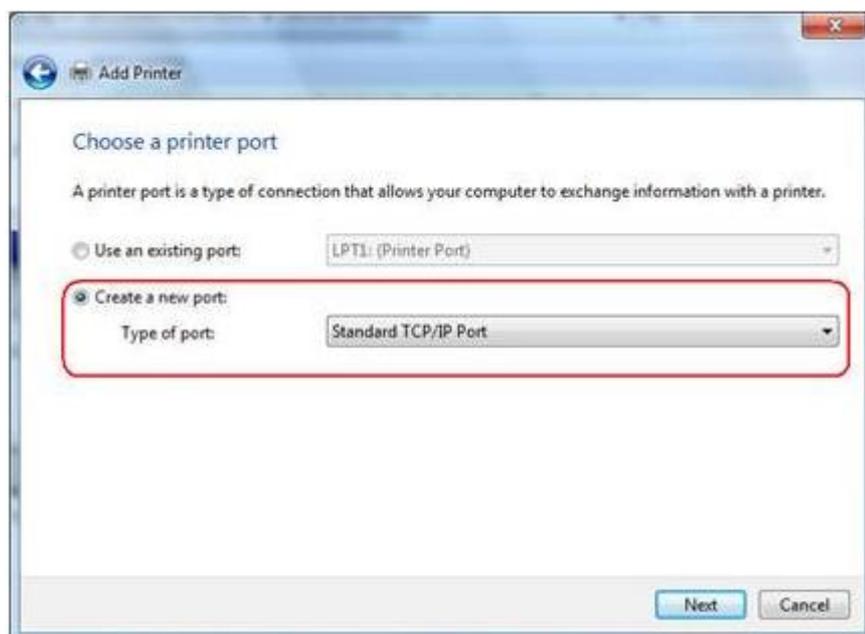


Step 5 Input the **IP address** of the router (Default 192.168.0.1) and click **Next**. The windows will detect the TCP/IP Port. Please wait for the next page.

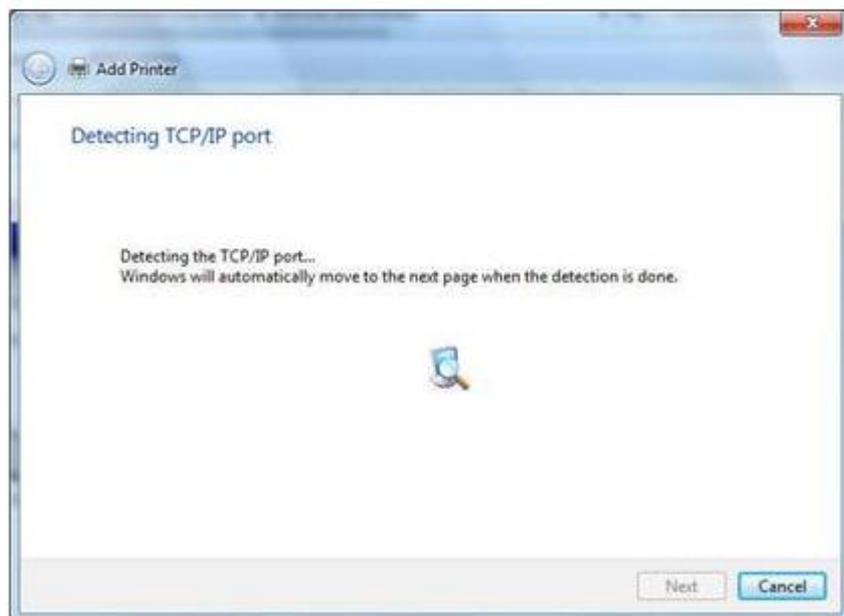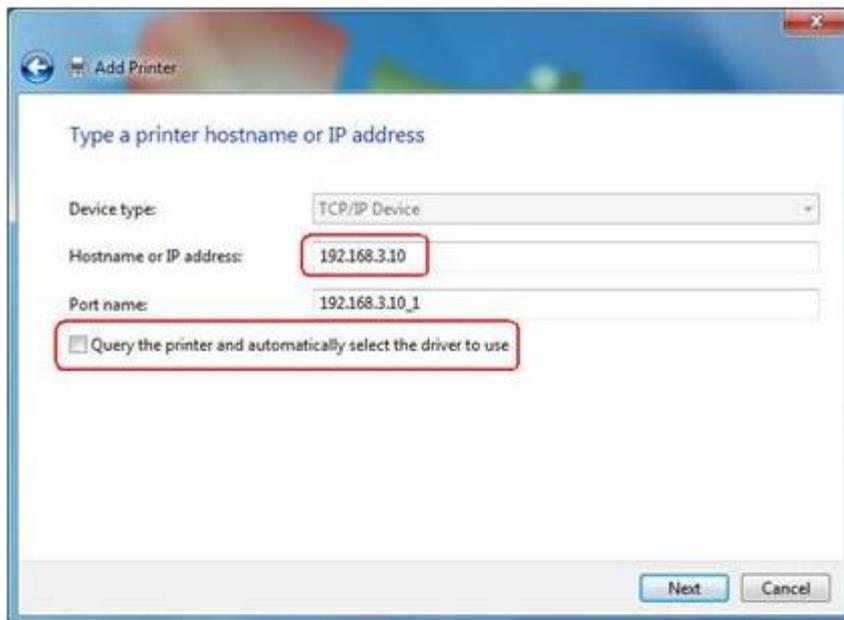

Step 6 Select **Standard** and click **Next**. Download the driver for your printer on the computer, unpack the archive and specify the path to the driver.

Step 7 It will ask you to install the driver of the printer. You can select one in the list or click **Have Disk** to install other drivers. Please follow the steps to finish the installation.

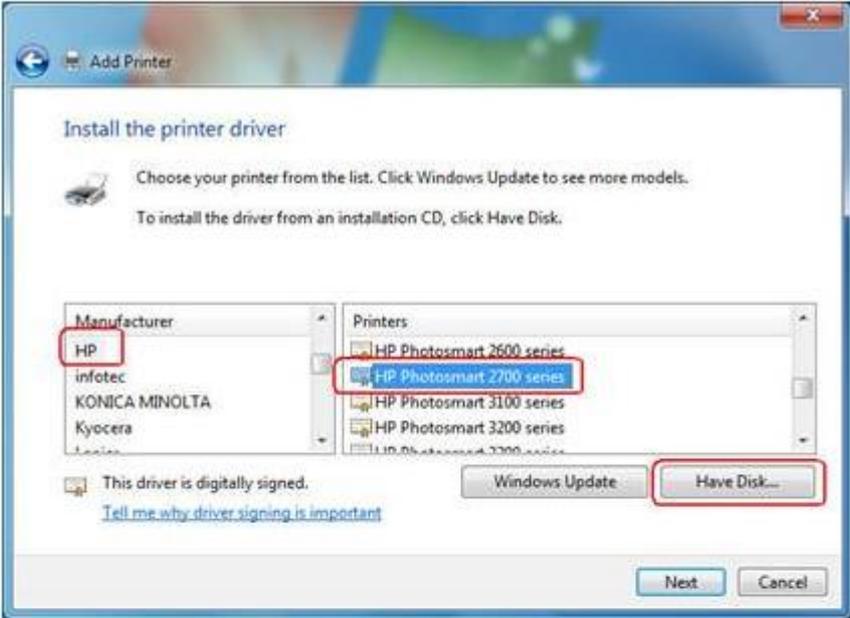



Step 8 After that, the new printer is in the list. And you can enjoy the sharing.

