



User Manual

AX1800 MESH Router

Preface

D-Link reserves the right to revise this publication and to make changes in the content hereof without obligation to notify any person or organization of such revisions or changes.

Manual Revisions

Hardware	Revision	Date	Description
A1	1.01	11/13/2023	Removed Speed Test feature

Trademarks

D-Link and the D-Link logo are trademarks or registered trademarks of D-Link Corporation or its subsidiaries in the United States or other countries. All other company or product names mentioned herein are trademarks or registered trademarks of their respective companies.

Apple®, Apple logo®, Safari®, iPhone®, and Macintosh® are trademarks of Apple Inc., registered in the U.S. and other countries. App StoreSM is a service mark of Apple Inc.

Chrome™ browser, Google Play™ and Android™ are trademarks of Google Inc.

Internet Explorer®, Windows® and the Windows logo are trademarks of the Microsoft group of companies.

Copyright © 2023 by D-Link Corporation, Inc.

All rights reserved. This publication may not be reproduced, in whole or in part, without prior expressed written permission from D-Link Corporation, Inc.

Power Usage

ErP Power Usage

This device is an Energy Related Product (ErP) that automatically switches to a power-saving Network Standby mode within 1 minute of no packets being transmitted. If it is not needed during certain periods of time, it can be unplugged to save energy.

Network Standby: 4.732W

Table of Contents

Product Overview.....	1	D-Link Cloud.....	54
Package Contents.....	1	Operation Mode.....	55
System Requirements	2	Features.....	56
Introduction	3	Parental Control	56
Features.....	3	QoS Engine.....	59
Hardware Overview	4	Firewall	61
M18 LED Indicator	4	IPv4/IPv6 Rules	63
M18 Rear	5	Port Forwarding	65
Hardware Setup	6	Virtual Server.....	66
Using the EAGLE PRO AI App	6	Static Routes.....	67
Web Based Installation	8	IPv4	67
Accessing the Web User Interface	9	IPv6	68
Home	10	Dynamic DNS	69
Internet.....	11	Quick VPN	71
M18	12	Management.....	72
Connected Clients	13	Time & Schedule	72
Extenders.....	14	Time	72
Mesh Network.....	15	Schedule	73
Settings	17	System Log.....	74
Wizard	17	System Admin	76
Internet.....	18	Admin.....	76
IPv4	18	System	78
IPv6	29	User.....	79
Internet - VLAN	42	Upgrade	80
Wireless	44	Statistics	81
Guest Zone	50		
Network.....	52		


Adding Additional Mesh Points.....	82	Wireless Basics	122
Using the EAGLE PRO AI App	82	Tips.....	125
EAGLE PRO AI	89	Technical Specifications	126
Voice Control.....	94	Regulatory Information	128
Link D-Link Cloud Service to Other Services	95		
Google Home Setup	95		
Amazon Alexa Setup	100		
Amazon Alexa Voice Commands	103		
Google Assistant Setup	104		
Google Assistant Voice Commands	106		
Connect to a Wireless Client	107		
WPS Button.....	107		
Windows 11/10.....	108		
VPN Setup Instructions.....	108		
Connect or Disconnect	110		
Android	111		
VPN Setup Instructions.....	111		
Connect or Disconnect	113		
Mac OS X.....	114		
VPN Setup Instructions.....	114		
Connect or Disconnect	116		
iOS Devices	117		
VPN Setup Instructions.....	117		
Connect or Disconnect	119		
Troubleshooting	120		

Product Overview

Package Contents



M18 AX1800 Mesh Router

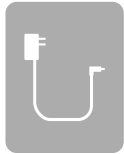

Power Adapter (12V, 1A)



Ethernet Cable (RJ45, 1m)



Quick Installation Guide

If any of the above items are missing or damaged, please contact your local reseller.

Note: *Using a power supply with a different voltage rating than the one included with the device will cause damage and void the warranty for this product.*

System Requirements

Network Requirements	• An Ethernet-based cable, DSL or fiber modem • IEEE 802.11ax/ac/n/g/b/a wireless clients • 10/100/1000 Mbps Ethernet
Web-based Configuration Utility Requirements	Computer with the following: • Windows, Macintosh, or Linux-based operating system • An installed Ethernet adapter or Wi-Fi interface Browser requirements: • Microsoft Edge • Firefox 28 or higher • Safari 6 or higher • Chrome 28 or higher
EAGLE PRO AI App Requirements	• iOS® or Android™ device (Please refer to the app's store page to check whether your device is compatible.)

Introduction

With a simple and stylish design for your modern home, the M18 offers a host of advanced Wi-Fi technologies and management features to facilitate your home connectivity. Built with Wi-Fi 6 (also known as 802.11ax) capability, it is capable of more efficient data transmission with techniques such as orthogonal frequency-division multiple access (OFDMA), overlapping basic service sets (OBSS) and beamforming to achieve higher speed and more intelligent utilization of wireless spectrum. The M18 aims to ease network management and installation whether you plan to set up wireless network for your home, office, or event venues. It features 802.11ax WLAN with speed up to 1800 Mbps* as well as one on-board Gigabit Ethernet port for wired connectivity. As the demand for high-quality video streaming and web conferencing increases, the router's 1800 Mbps throughput helps established connection reliability and stability. Furthermore, you enjoy Wi-Fi that's not only smart, but also manageable with AI-capable assistance and integrated voice assistance for Amazon Alexa and Google Assistant.

Features

- **AI-capable Wi-Fi with Smart Roaming** - Seamlessly connects your devices to the strongest signal and optimal channel as well as wireless band as you move from room to room, eliminating the need for them to disconnect and reconnect.
- **Profile-based Parental Controls** - Assign devices to family members' profiles to individually block devices and websites and set schedules for restricted access. And together with the D-Link Intelligent QoS Technology, the Internet traffic can be further optimized with traffic prioritization.
- **Expandable Network** - D-Link Wi-Fi Mesh is a scalable solution. Mesh capability comes with auto-pairing out of the box; simply add extra mesh points with our EAGLE PRO AI series of routers and extenders to scale up your wireless coverage.
- **Works with Your Existing Router or Gateway** - Simply connect to the router or gateway provided by your ISP to augment your existing network capability and coverage.
- **AI-Assisted Management** - Managing your Internet utilization has never been easier; just download the free EAGLE PRO AI for your mobile device and follow the on-screen step-by-step instructions to add your device. You also have the option to receive weekly reports on wireless network condition and Internet data usage.

* Maximum wireless signal rate derived from IEEE Standard 802.11ax, 802.11ac, 802.11n, and 802.11g/b/a specifications. Actual data throughput will vary. Network conditions and environmental factors, including volume of network traffic, building materials and construction, and network overhead, may lower actual data throughput rate. Environmental conditions will adversely affect wireless signal range.


Hardware Overview

M18 LED Indicator



1	Status LED	Solid red	The M18 is booting up or being factory reset.
		Blinking orange	The M18 is syncing to another M18 mesh point or trying to establish an uplink connection. Once set up, a blinking orange LED indicates there is no uplink connection to the device. It will also blink orange if the Internet is paused manually by an administrator.
		Blinking Orange & White Alternately	The device is undergoing the firmware upgrade process.
		Solid white	The M18 is powered on and running. Once set up, a solid white LED indicates there is an uplink connection to the device.
		Blinking white	Once set up, a blinking white LED indicates a weak connection, or that the Wi-Fi Protected Setup (WPS) is trying to establish a connection with a client device.
		Off	The M18 is powered off. If the device is powered on and Status LED is disabled, the device is working as normal. Refer to the Admin section on page 76 for more information.

M18 Rear

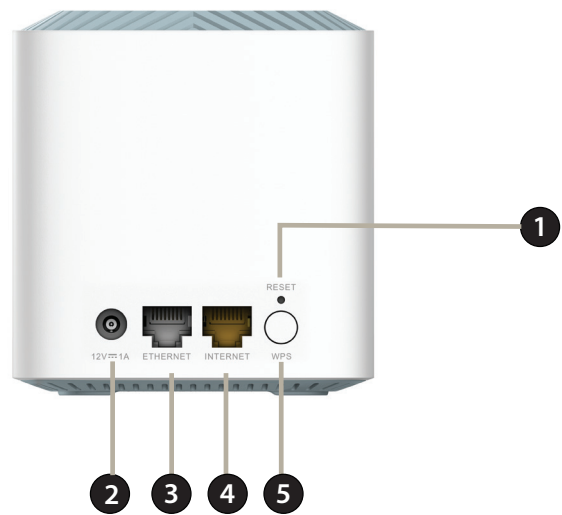

1	Reset Button	Insert a paperclip in the hole and wait for the Status LED turns solid red, then release to reset the router to default settings.
2	Power Connector	Connect the included power adapter here to power on the device.
3	Gigabit LAN Port	Connect Ethernet devices such as computers, switches, storage (NAS) devices, and game consoles.
4	Gigabit WAN Port	Using an Ethernet cable, connect your broadband modem to this port.
5	WPS	Press this button to establish an instant connection to a wireless client using Wi-Fi Protected Setup (WPS).

Hardware Setup

Using the EAGLE PRO AI App

The EAGLE PRO AI allows you to install and configure your M18 from your compatible Android or iOS device.

Note: *The screenshots may be different depending on your mobile device's OS version. However, the process is the same.*

Step 1

Search and install the free **EAGLE PRO AI** available on the App Store or on Google Play.



EAGLE PRO AI




Step 2

Launch the EAGLE PRO AI from the home screen of your device.


Step 3

Sign in to the app using one of the following methods: Facebook, Google, Apple ID, or an email account. If you do not have an account, you can tap the **Create an account** link at the bottom of the screen to sign up an account using any of the above methods. It allows you to use cloud services to control and manage your device including the third-party voice control apps.

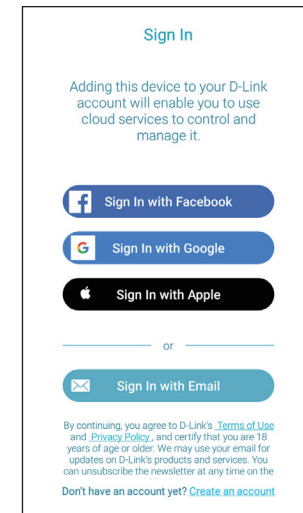

Step 4

Tap **Install New Device**. Scan the setup code on the bottom of the device. Follow the on-screen instructions to complete the setup.

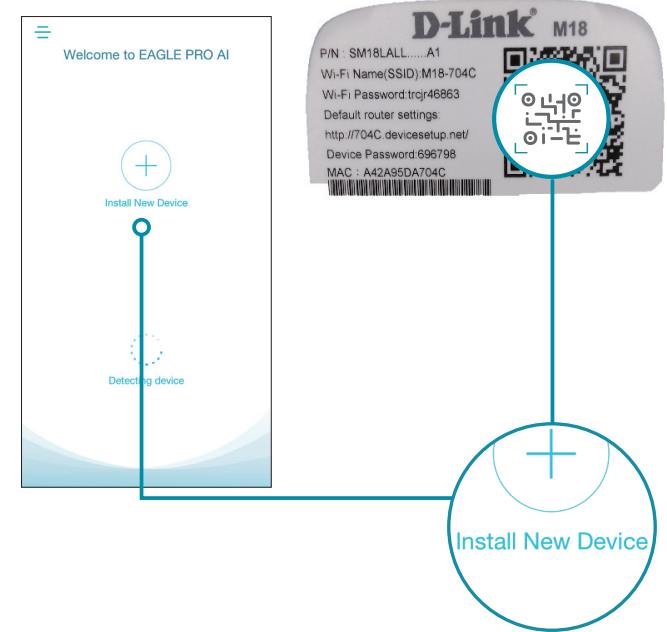


Web Based Installation

You can also set up your M18 and configure your Wi-Fi network following the instructions of the web-based user interface.

Step 1

Position the M18 close to your Internet-connected modem. Turn off and unplug the power to your cable or DSL broadband modem. This is required. In some cases, you may need to turn it off for up to five minutes. Then connect an Ethernet cable to the modem and to INTERNET Port of the M18. You can now power your modem back on.

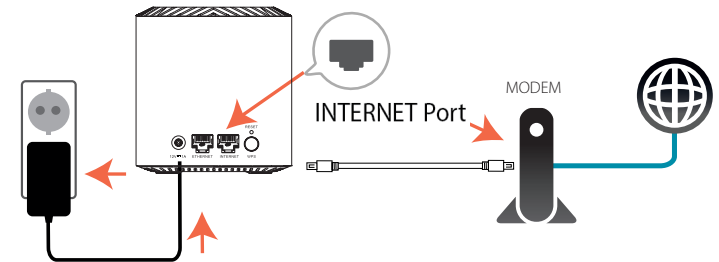

Step 2

Connect the power adapter and plug the M18 into a power outlet. Wait for the M18 to boot up. When the LED starts blinking orange, wirelessly connect your computer to the Wi-Fi name (SSID) printed on the device label on the bottom of the device. On Windows, click on the Network Settings icon ( or ) in the notification area of the Windows taskbar to view available networks.

Note: The Wi-Fi name (SSID), Wi-Fi password, and device password are printed on the device label on the bottom of the device.



Step 3

Type **http://XXXX.devicesetup.net/** into a web browser and follow the on-screen instructions to complete the setup.

Note: XXXX are the last four digits of the device's MAC address. Please refer to the device label for the MAC address.



Your M18 is now set up and ready to use. You can now configure your Wi-Fi settings using EAGLE PRO AI or the web-based user interface. Refer to the **Accessing the Web User Interface** on page 9 for more information on configuring your network using the web-based user interface.


Accessing the Web User Interface

You can access the web-based user interface using one of the following web browsers:

- Microsoft Edge
- Firefox 28 or higher
- Safari 6 or higher
- Chrome 28 or higher

1. Open a web browser.
2. Type **http://XXXX.devicesetup.net/** in the address bar. (XXXX represents the last 4 digits of the device's MAC address)
3. Specify the admin password.
 - If this is the first login, enter the device password printed on the device label on the bottom of the device.
 - If you have previously completed the initial setup, specify the password you created during initial setup.
4. Click **Log In**.


Note: The system will automatically log out after a period (*180 seconds*) of inactivity.

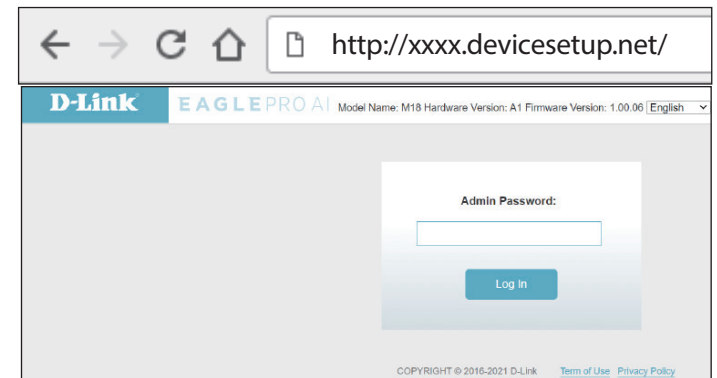

Home

The Home page displays the status of your network connectivity in the form of an interactive topology. You can click each icon to display information about components of the network at the bottom of the screen. The left navigation pane allows you to quickly navigate to other pages. Refer to the following sections for a description of these functional pages.

You can access **AI Assistant** (an AI-assisted message center) for reports on Wi-Fi condition and bandwidth utilization at the top right. Note that you need to turn on AI-assisted functions to receive messages.

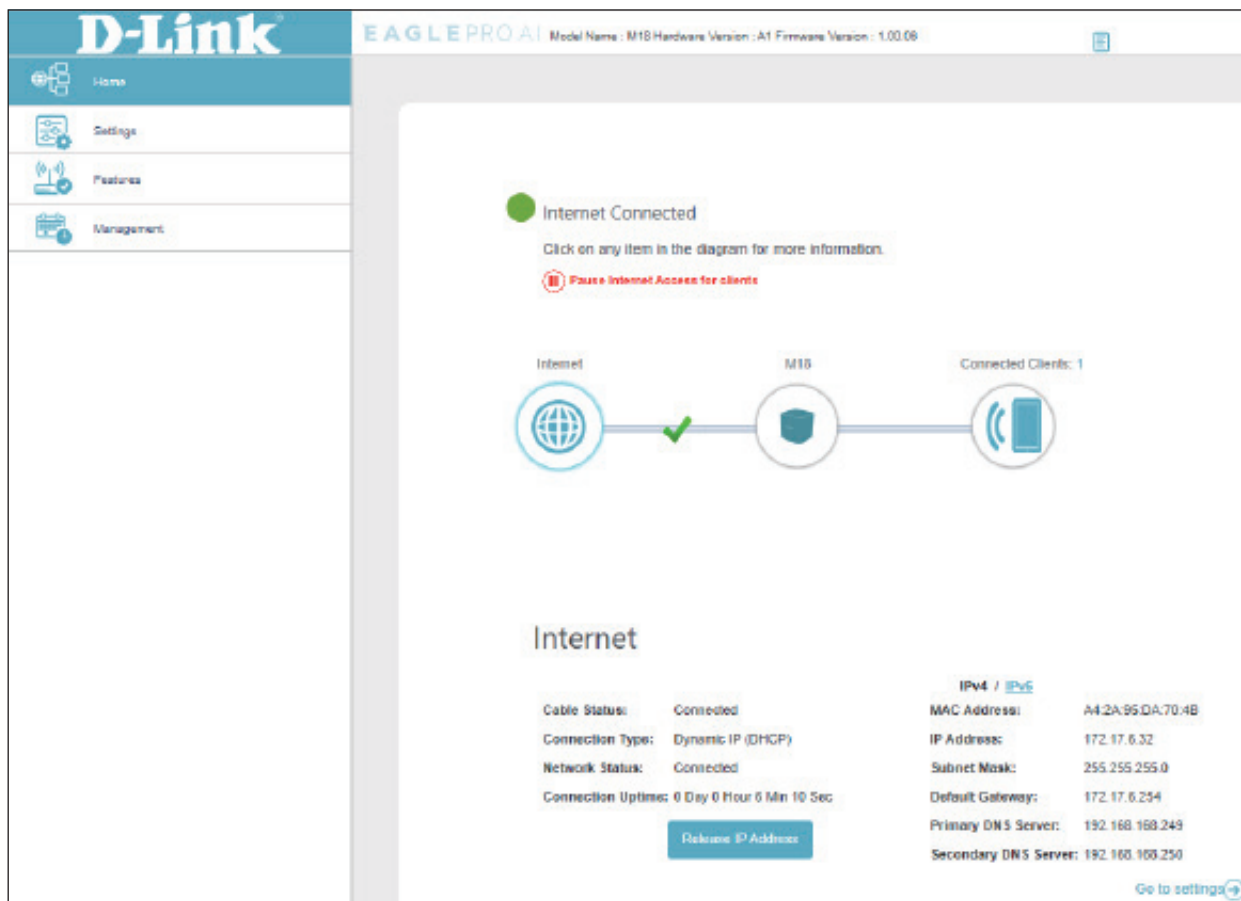

Internet

To view more details about your Internet connection, click on the **Internet** icon.

Click **IPv4** or **IPv6** to see details of the IPv4 connection and IPv6 connection respectively.

Click **Release IP Address** to disconnect from the Internet. To reconnect with a new IP address assignment, click **Renew IP Address**.

Click  **Pause Internet Access for clients** to stop Internet access for all clients.

Click **Click to repair** to bring up the setup wizard and go through the initial configuration again.

To reconfigure the Internet settings, click **Go to settings ->** at the bottom right.

Internet Connected

Click on any item in the diagram for more information.

 **Pause Internet Access for clients**





Internet M18 Connected Clients: 2

Internet

Cable Status:	Connected	IPv4 / IPv6	
Connection Type:	Dynamic IP (DHCP)	MAC Address:	A4:2A:95:DA:70:4B
Network Status:	Connected	IP Address:	172.17.6.32
Connection Uptime:	0 Day 0 Hour 16 Min 37 Sec	Subnet Mask:	255.255.255.0
		Default Gateway:	172.17.0.254
		Primary DNS Server:	192.168.168.249
		Secondary DNS Server:	192.168.168.250

[Release IP Address](#)


[Go to settings](#) 

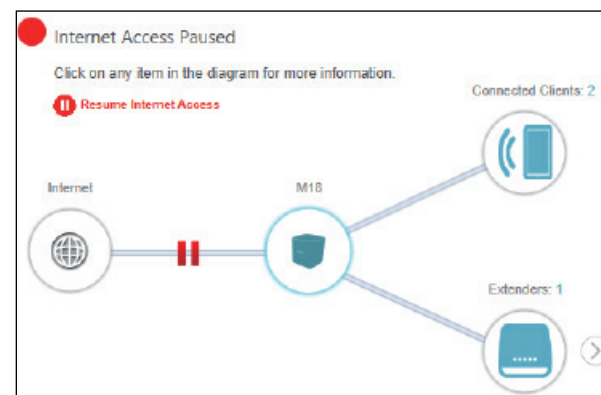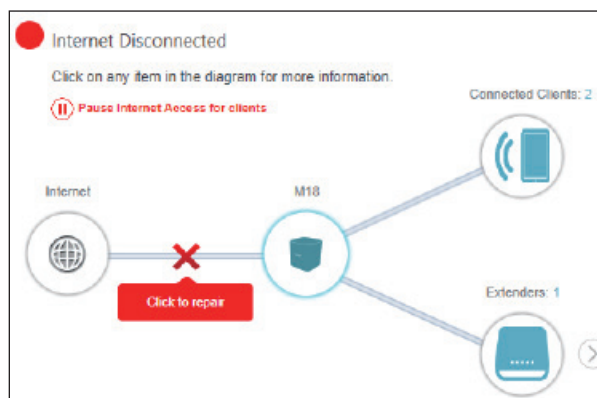

M18

Click on the **M18** icon to view details about the M18's wireless and local network settings. This includes IPv4 and IPv6 local networks, and Wi-Fi information.

To reconfigure the network or wireless settings, click **Go to settings** -> at the bottom right to access the configuration page.

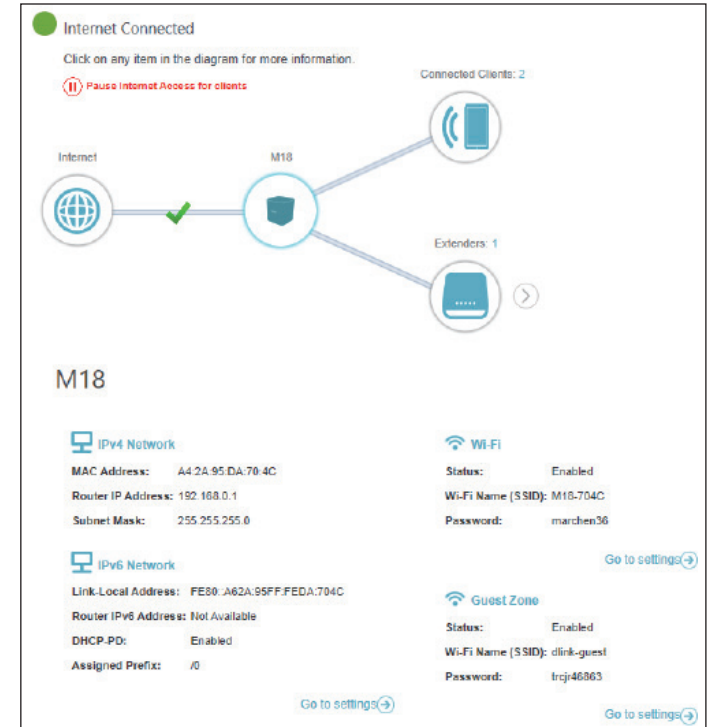


Connected Clients

Click on the **Connected Clients** icon to view details about the clients currently connected to your Wi-Fi network.

To edit each client's settings, click  on the client you want to edit.

Edit Rule	
Name	Displays the name of this client. You can edit the client's name here. The  icon shows the client is connected through a cable. The  icon shows the client is connected wirelessly.
Vendor	Displays the vendor of the device.
MAC Address	Displays the MAC address of the device.
IP Address	Displays the current IP address of this client.
Reserve IP	Enable this option to reserve an IP address for this client.
IP Address (Reserved)	Specify an IP address for the DHCP server to assign to this client.
Parental Control	Enable Parental Control and select a profile to control the client's Internet access. Make sure that this device is also on the device list of the selected profile. Refer to Parental Control on page 56 for more information.
Profile	Use the drop-down menu to select a profile to be used for Parental Control. The profile can be set to Always Block to have this client blocked from accessing the Internet, or you can create your own profiles to specify the times that the client can access the network. You can also block access to unwanted websites. Refer to Features > Parental Control on page 56 for more information. Click Save when you are done.

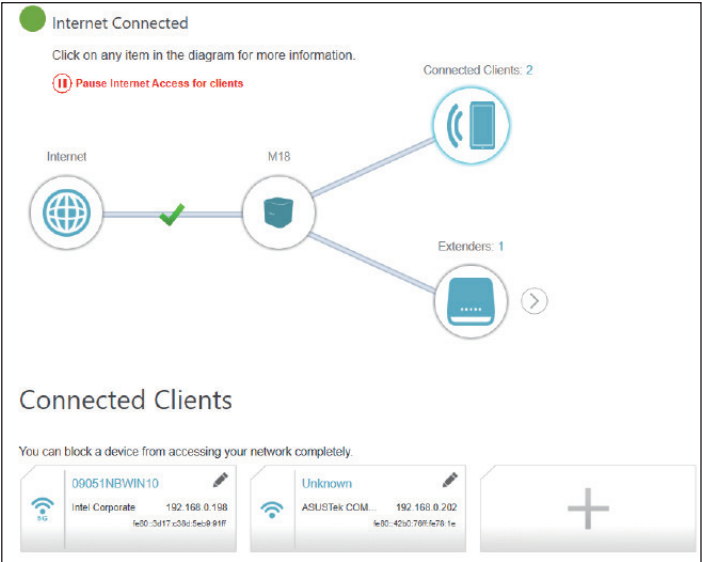




Extenders

Click on the **Extenders** icon to view details about all extenders in your Wi-Fi network.

To edit an Extender's name, click  on the top right of the Extender's card that you want to rename.

To reboot an Extender, click  on the bottom right of the Extender's card and click **Reboot**.

To remove an Extender from your Wi-Fi network, click  on the bottom right of the Extender's card and click **Remove**.

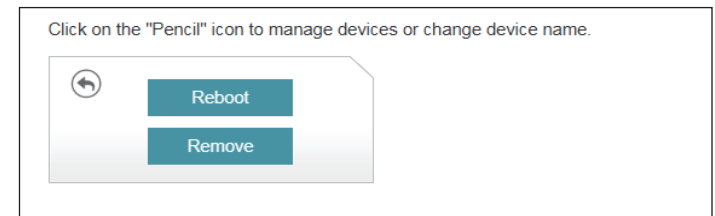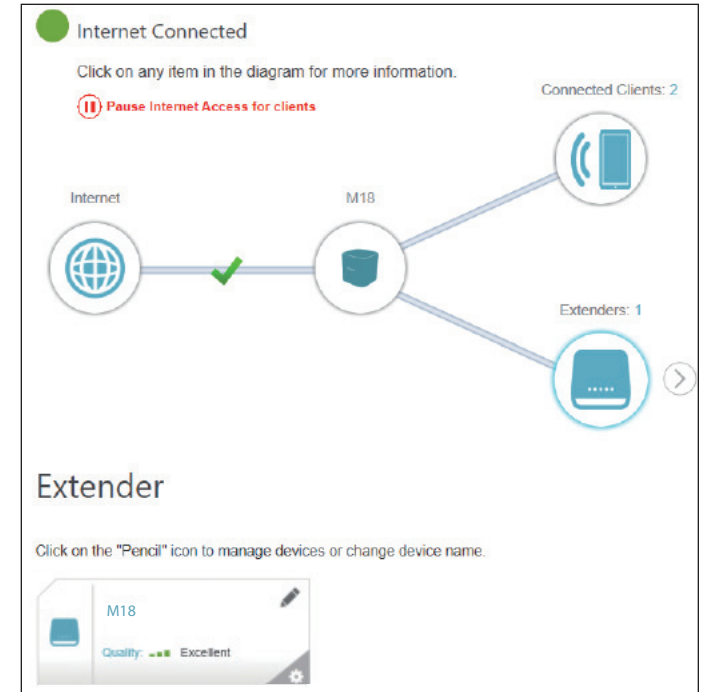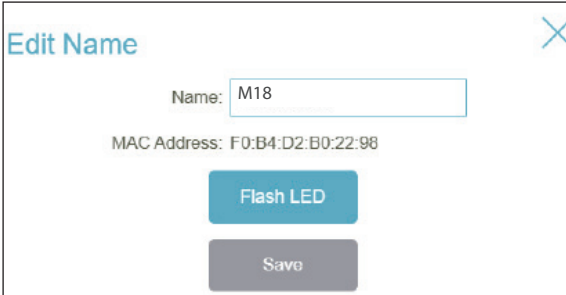Edit Name

Name:

MAC Address: F0:B4:D2:B0:22:98

Flash LED

Save

Edit Name

Name Enter a descriptive name for the extender.



MAC Address Displays the MAC address of the extender.

Flash LED Flash the Status LED of the extender.

Save Click **Save** when you are done.



Mesh Network

Click on the **Extenders** > icon to view details of the master device and the extenders in your mesh network. Click M18 to display more information about the router. Click **Identify this Extender**, your router will begin to flash the Status LED, indicating itself as the designated node of the mesh network.

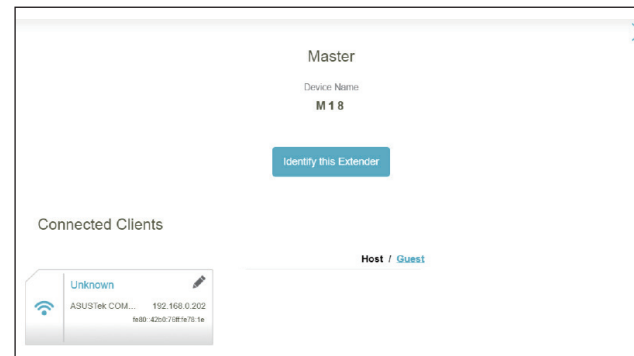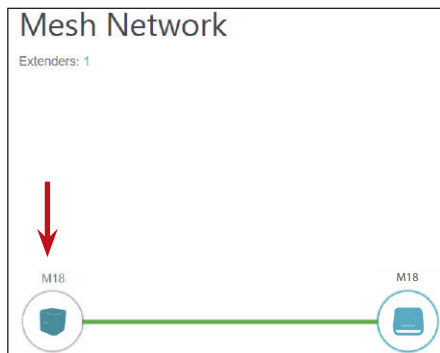

To view details of the extender, click the **Extender** icon. On this page you can see all the clients currently connected to the extender along with their IP addresses and device manufacturers.

To view more information about a client or edit a client's settings such as IP reservation and parental control, click  on the client you want to edit.

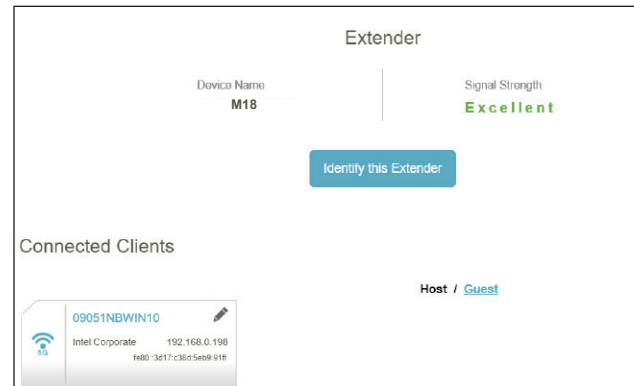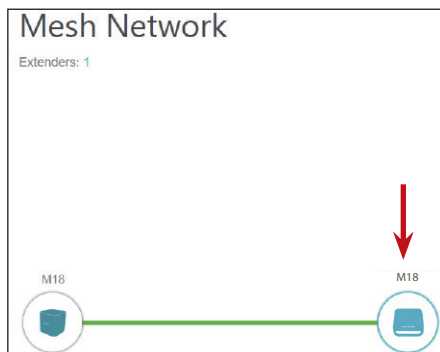

Edit Rule

- Name** Displays the name of this client. You can edit the client's name here.
- Vendor** Displays the vendor of the device.
- MAC Address** Displays the MAC address of the device.
- IP Address** Displays the current IP address of this client.
- Reserve IP** Enable this option to reserve an IP address for this client.
- IP Address (Reserved)** Specify an IP address for the DHCP server to assign to this client.
- Parental Control** Enable Parental Control and select a profile to control the client's Internet access. Make sure that this device is also on the device list of the selected profile. Refer to **Parental Control** on page **56** for more information.
- Profile** Use the drop-down menu to select a profile to be used for Parental Control. The profile can be set to **Always Block** to have this client blocked from accessing the Internet, or you can create your own profiles to specify the times that the client can access the network. You can also block access to unwanted websites. Refer to **Features > Parental Control** on page **56** for more information.
- Click **Save** when you are done.

Edit Rule

Name: 09051NBWIN10

Vendor: ONEAC CORPORATION

MAC Address: 00:20:82:70:46:29

IP Address: 192.168.0.227

Reserve IP: ☒ Enabled Remaining: 24

IP Address (Reserved):

Parental Control: ☒ Enabled


Profile: Always Block

Save

Settings Wizard

Go to **Settings > Wizard** to open the setup wizard. This is the same wizard that appears when you set up the device using the web interface for the first time.

This Wizard will also launch after you click the **Click to repair** button when no Internet connection is detected.

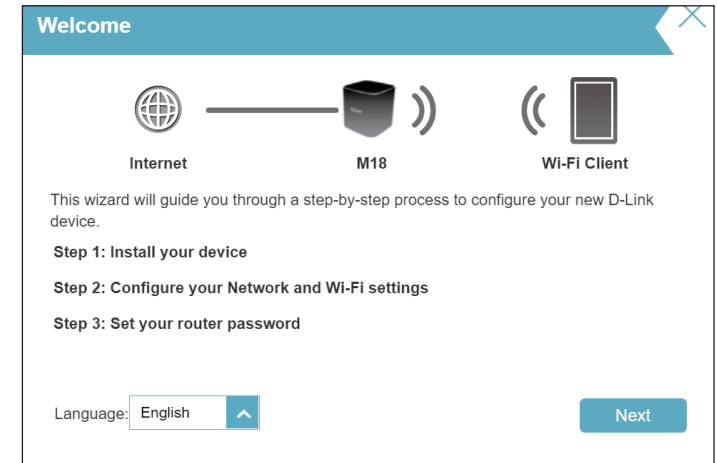

Internet IPv4

Go to **Settings > Internet** to see the Internet configuration options.

My Internet Connection Is

Choose your Internet connection type from the drop-down menu. You will be presented with options for your connection type. Click **Advanced Settings...** to expand the list and see more options.

Secure DNS

Enable this option to use public DNS with encryption via DNS-over-HTTPS (DoH). The default is disabled.

DNS over HTTP Provider

Select the public DNS service provider: Google or Cloudflare.

Allow Fall-back

Use your primary or secondary DNS server as an alternative if the configured provider is not working. The default is disabled.

Internet

Use this section to configure your Internet Connection type. There are several connection types to choose. If you are unsure of your connection method, please contact your Internet Service Provider. Note: If using the PPPoE option, you will need to remove or disable any PPPoE client software on your computers.

Settings>>Internet>>IPv4

VLAN IPv6 Save

My Internet Connection is: Dynamic IP (DHCP) Static IP Dynamic IP (DHCP) Advanced Settings...

Host Name: PPPoE

Primary DNS Server: PPTP

Secondary DNS Server: L2TP

MTU: 1500

MAC Address Clone: << MAC Address

Secure DNS: Disabled

Status: Disconnected

DNS over HTTP Provider: Google Privacy Policy

Allow fall-back: Disabled

For **Dynamic IP (DHCP)** refer to **Dynamic IP (DHCP)** on page 19.

For **Static IP**, refer to **Static IP** on page 20.

For **PPPoE**, refer to **PPPoE** on page 21.

For **PPTP**, refer to **PPTP** on page 23.

For **L2TP**, refer to **L2TP** on page 25.

For **DS-Lite**, refer to **DS-Lite** on page 27.

To configure an IPv6 connection, click the **IPv6** link (refer to page 29).

Dynamic IP (DHCP)

Select **Dynamic IP (DHCP)** to obtain IP address information automatically from your Internet Service Provider (ISP). Select this option if your ISP does not specify an IP address to use.

Advanced Settings	
Host Name	The host name is optional but may be required by some ISPs. Leave it blank if you are not sure.
Primary DNS Server	Enter the primary DNS server IP address assigned by your ISP. This address is usually filled in automatically.
Secondary DNS Server	Enter the secondary DNS server IP address assigned by your ISP. This address is usually filled in automatically.
MTU	Maximum Transmission Unit (1280~1500) - you may need to change the MTU for optimal performance with your ISP. The default is 1500.
MAC Address Clone	The default MAC address is set to the Internet port's physical interface MAC address on the device. You can replace the Internet port's MAC address with the MAC address of a connected client.

Click **Save** when you are done.

Settings>>Internet>>IPv4

VLANIPV6Save

My Internet Connection is: Dynamic IP (DHCP)

Advanced Settings

Host Name:

Primary DNS Server:

Secondary DNS Server:

MTU: 1500

MAC Address Clone: << MAC Address

Secure DNS: Disabled

Status: Disconnected

DNS over HTTP Provider: Google Privacy Policy

Allow fall-back: Disabled

Static IP

Select **Static IP** if your IP information is provided by your Internet Service Provider (ISP).

- IP Address** Enter the IP address provided by your ISP.
- Subnet Mask** Enter the subnet mask provided by your ISP.
- Default Gateway** Enter the default gateway address provided by your ISP.
- Primary DNS Server** Enter the primary DNS server IP address provided by your ISP.
- Secure DNS** Enable this option to use public DNS with encryption via DNS-over-HTTPS (DoH). The default is disabled.
- DNS over HTTP Provider** Select the public DNS service provider: Google or Cloudflare.
- Allow Fall-back** Use your primary or secondary DNS server as an alternative if the configured provider is not working. The default is disabled.

Advanced Settings

- Secondary DNS Server** Enter the secondary DNS server IP address assigned by your ISP.
 - MTU** Maximum Transmission Unit (1280~1500)- you may need to change the MTU for optimal performance with your ISP.
 - MAC Address Clone** The default MAC address is set to the Internet port's physical interface MAC address on the device. You can replace the Internet port's MAC address with the MAC address of a connected client.
- Click **Save** when you are done.

The screenshot shows the 'Settings >> Internet >> IPv4' configuration page. At the top, there are tabs for 'VLAN', 'IPv6', and a 'Save' button. Below the tabs, a dropdown menu labeled 'My Internet Connection is:' is set to 'Static IP'. The main configuration area contains several input fields: 'IP Address', 'Subnet Mask', 'Default Gateway', and 'Primary DNS Server'. To the right of these fields is a link for 'Advanced Settings...'. At the bottom, there are three settings: 'Secure DNS' (set to 'Disabled'), 'Status' (set to 'Disconnected'), and 'DNS over HTTP Provider' (set to 'Google' with a 'Privacy Policy' link next to it). The 'Allow fall-back' option is also set to 'Disabled'.

PPPoE

Select **PPPoE** if your ISP provides and requires you to enter a PPPoE username and password in order to connect to the Internet.

- Username

Enter the username provided by your ISP.
- Password

Enter the password provided by your ISP.
- Reconnect Mode

Select either **Always on**, **On Demand**, or **Manual**.
- Maximum Idle Time

Configurable when **On Demand** is selected. Enter a maximum idle time during which the Internet connection is maintained during inactivity. To disable this feature, select **Always on** or **Manual** as the reconnect mode. The default is 5 minutes.
- Secure DNS

Enable this option to use public DNS with encryption via DNS-over-HTTPS (DoH). The default is disabled.
- DNS over HTTP Provider

Select the public DNS service provider: Google or Cloudflare.
- Allow Fall-back

Use your primary or secondary DNS server as an alternative if the configured provider is not working. The default is disabled.

Advanced Settings

- Address Mode

Select **Static IP** if the following information has been provided by your ISP: IP address, MTU, and DNS server addresses. In most cases, select **Dynamic IP**.
- If you select **Dynamic IP** as the Address Mode:
- Service Name

Enter the ISP service name (optional).
- Primary DNS Server

Enter the primary DNS server IP address assigned by your ISP. This address is usually obtained automatically from your ISP.

Settings>>Internet>>IPv4

VLANIPv6Save

My Internet Connection is: PPPoE

Username:

Password:

Reconnect Mode: Always on

Advanced Settings...

Address Mode: Dynamic IP

Service Name:

Primary DNS Server:

Secondary DNS Server:

MTU: 1422

MAC Address Clone: << MAC Address

Secure DNS: Disabled

Status: Disconnected

DNS over HTTP Provider: Google

Privacy Policy

Allow fall-back: Disabled

PPPoE (continued)

- Secondary DNS Server

Enter the secondary DNS server IP address assigned by your ISP. This address is usually obtained automatically from your ISP.
- MTU

Maximum Transmission Unit (1280~1492)- you may need to change the MTU for optimal performance with your ISP. The default is 1492.
- MAC Address Clone

The default MAC address is set to the Internet port's physical interface MAC address on the device. You can replace the Internet port's MAC address with the MAC address of a connected client.

If you select **Static IP** as the Address Mode:

- IP Address

Enter the IP address provided by your ISP.
- Service Name

Enter the ISP service name (optional)
- Primary DNS Server

Enter the primary DNS server IP address assigned by your ISP.
- Secondary DNS Server

Enter the secondary DNS server IP address assigned by your ISP.
- MTU

Maximum Transmission Unit (1280~1492)- you may need to change the MTU for optimal performance with your ISP. The default is 1492.
- MAC Address Clone

The default MAC address is set to the Internet port's physical interface MAC address on the device. You can replace the Internet port's MAC address with the MAC address of a connected client.

Address Mode: Static IP

IP Address:

Service Name:

Primary DNS Server:

Secondary DNS Server:

MTU: 1492

MAC Address Clone: << MAC Address

PPTP

Choose **PPTP** (Point-to-Point-Tunneling Protocol) if your Internet Service Provider (ISP) uses a PPTP connection. Your ISP will provide you with a username and password.

- PPTP Server

Enter the PPTP server name or IP address provided by your ISP.
- Username

Enter the username provided by your ISP.
- Password

Enter the password provided by your ISP.
- Reconnect Mode

Select **Always on**, **On demand**, or **Manual**.
- Maximum Idle Time

Configurable when **On Demand** is selected. Enter a maximum idle time during which the Internet connection is maintained during inactivity. To disable this feature, select **Always on** or **Manual** as the reconnect mode. The default is 5 minutes.
- Secure DNS

Enable this option to use public DNS with encryption via DNS-over-HTTPS (DoH). The default is disabled.
- DNS over HTTP Provider

Select the public DNS service provider: Google or Cloudflare.
- Allow Fall-back

Use your primary or secondary DNS server as an alternative if the configured provider is not working. The default is disabled.

Advanced Settings

- Address Mode

Select **Static IP** if the following information is given by your ISP: IP address, subnet mask, gateway, and DNS server addresses. In most cases, select **Dynamic IP**.

Settings>>Internet>>IPv4

VLANIPv6Save

My Internet Connection is: PPTP

PPTP Server: IP or Domain name

Username:

Password:

Reconnect Mode: Always on

Advanced Settings...

Secure DNS: Disabled

Status: Disconnected

DNS over HTTP Provider: Google

Privacy Policy

Allow fall-back: Disabled

PPTP (continued)

If you select **Dynamic IP** as the Address Mode:

Primary DNS Server

Enter the primary DNS server IP address assigned by your ISP.

Secondary DNS Server

Enter the secondary DNS server IP address assigned by your ISP.

MTU

Maximum Transmission Unit (1280~1460) - you may need to change the MTU for optimal performance with your ISP. The default is 1400.

If you select **Static IP** as the Address Mode:

PPTP IP Address

Enter the IP address provided by your ISP.

PPTP Subnet Mask

Enter the subnet mask provided by your ISP.

PPTP Gateway IP Address

Enter the gateway IP address provided by your ISP.

Primary DNS Server

Enter the primary DNS server IP address assigned by your ISP.

Secondary DNS Server

Enter the secondary DNS server IP address assigned by your ISP.

MTU

Maximum Transmission Unit (1280~1460) - you may need to change the MTU for optimal performance with your ISP. The default is 1400.

The screenshot displays a configuration window for PPTP. The 'Address Mode' is set to 'Static IP'. Below this, there are input fields for 'PPTP IP Address', 'PPTP Subnet Mask', 'PPTP Gateway IP Address', 'Primary DNS Server', and 'Secondary DNS Server'. The 'MTU' is set to '1400'. In the lower section, 'Secure DNS' is 'Enabled', 'Status' is 'Disconnected', 'DNS over HTTP Provider' is 'Google' (with a 'Privacy Policy' link), and 'Allow fail-back' is 'Disabled'.

L2TP

Choose **L2TP** (Layer 2 Tunneling Protocol) if your Internet Service Provider (ISP) uses an L2TP connection. Your ISP will provide you with a username and password.

- L2TP Server

Enter the L2TP server name or IP address provided by your ISP.
- Username

Enter the username provided by your ISP.
- Password

Enter the password provided by your ISP.
- Reconnect Mode

Select **Always on**, **On Demand**, or **Manual**.
- Maximum Idle Time

Configurable when **On Demand** is selected. Enter a maximum idle time during which the Internet connection is maintained during inactivity. To disable this feature, select **Always on** or **Manual** as the reconnect mode. The default is 5 minutes.
- Secure DNS

Enable this option to use public DNS with encryption via DNS-over-HTTPS (DoH). The default is disabled.
- DNS over HTTP Provider

Select the public DNS service provider: Google or Cloudflare.
- Allow Fall-back

Use your primary or secondary DNS server as an alternative if the configured provider is not working. The default is disabled.

Advanced Settings

- Address Mode

Select Static IP if the following information is given by your ISP: IP address, subnet mask, gateway, and DNS server addresses. In most cases, select Dynamic IP.

The screenshot shows the 'Settings > Internet > IPv4' configuration page. At the top, there are tabs for 'VLAN', 'IPv6', and a 'Save' button. Below the tabs, 'My Internet Connection is:' is set to 'L2TP'. The main configuration area includes fields for 'L2TP Server' (with a hint 'IP or Domain name'), 'Username', 'Password', and 'Reconnect Mode' (set to 'Always on'). An 'Advanced Settings...' link is on the right. The 'Advanced Settings' section contains 'Address Mode' (set to 'Dynamic IP'), 'Primary DNS Server', 'Secondary DNS Server', and 'MTU' (set to '1400'). The 'Secure DNS' section has a toggle for 'Enabled' and a 'Status: Disconnected' indicator. Below that, 'DNS over HTTP Provider' is set to 'Google' with a 'Privacy Policy' link. At the bottom, 'Allow fall-back' is set to 'Disabled'.


L2TP (continued)

If you select **Dynamic IP** as the Address Mode:

Primary DNS Server Enter the primary DNS server IP address assigned by your ISP.

Secondary DNS Server Enter the secondary DNS server IP address assigned by your ISP.

MTU Maximum Transmission Unit (1280~1460) - you may need to change the MTU for optimal performance with your ISP. The default is 1400

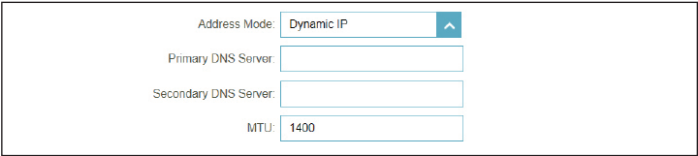

A screenshot of the L2TP configuration interface for Dynamic IP mode. It features a dropdown menu for 'Address Mode' set to 'Dynamic IP'. Below it are input fields for 'Primary DNS Server', 'Secondary DNS Server', and 'MTU' (set to 1400).

If you select **Static IP** as the Address Mode:

L2TP IP Address Enter the IP address provided by your ISP.


L2TP Subnet Mask Enter the subnet mask provided by your ISP.

L2TP Gateway IP Address Enter the gateway IP address provided by your ISP.

Primary DNS Server Enter the primary DNS server IP address assigned by your ISP.

Secondary DNS Server Enter the secondary DNS server IP address assigned by your ISP.

MTU Maximum Transmission Unit (1280~1460) - you may need to change the MTU for optimal performance with your ISP. The default is 1400.

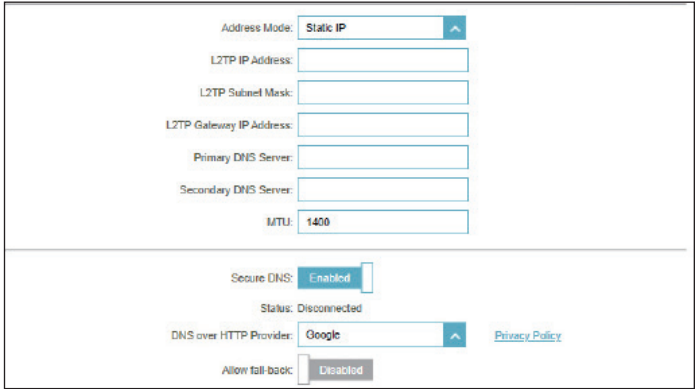

A screenshot of the L2TP configuration interface for Static IP mode. It includes input fields for 'L2TP IP Address', 'L2TP Subnet Mask', 'L2TP Gateway IP Address', 'Primary DNS Server', and 'Secondary DNS Server'. Below these is an 'MTU' field set to 1400. At the bottom, there are sections for 'Secure DNS' (set to 'Enabled'), 'Status' (set to 'Disconnected'), 'DNS over HTTP Provider' (set to 'Google' with a 'Privacy Policy' link), and 'Allow fall-back' (set to 'Disabled').

DS-Lite

DS-Lite (Dual-Stack Lite) allows local IPv4 packets to travel through an IPv6 network. Configure the following parameters for Internet connectivity using DS-Lite:

Advanced Settings

DS-Lite Configuration Select DS-Lite DHCPv6 Option to let the device allocate the AFTR IPv6 (Address Family Transition Router) address automatically. Select **Manual Configuration** to enter the AFTR IPv6 address manually.

If you select **DS-Lite DHCPv6 Option** as the DS-Lite Configuration:

B4 IPv4 Address Enter the B4 (Basic Bridging Broadband) IPv4 address that will be encapsulated into IPv6 packets to transmit over an IPv6 network.

WAN IPv6 Address Once connected, the WAN IPv6 address will be displayed here.

IPv6 WAN Default Gateway Once connected, the IPv6 WAN default gateway address will be displayed here.

If you select **Manual Configuration** as the DS-Lite Configuration:

AFTR IPv6 Address Enter the Address Family Transition Router (AFTR) IPv6 address. This is where an IPv4-in-IPv6 packet will be decapsulated.

B4 IPv4 Address Enter the B4 IPv4 address.

WAN IPv6 Address Once connected, the WAN IPv6 address will be displayed here.

IPv6 WAN Default Gateway Once connected, the IPv6 WAN default gateway address will be displayed here.

The screenshot shows the 'Internet' settings page. At the top, there's a globe icon and a note about configuring the Internet Connection type. Below this, there are tabs for 'VLAN', 'IPv6', and 'Save'. The 'My Internet Connection is' dropdown is set to 'DS-Lite'. To the right of this dropdown is a link for 'Advanced Settings...'. Below this, the 'DS-Lite Configuration' dropdown is set to 'DS-Lite DHCPv6 Option'. Underneath, there are fields for 'B4 IPv4 Address' (with the value '192.0.0.'), 'WAN IPv6 Address' (displaying 'Not Available'), and 'IPv6 WAN Default Gateway' (displaying 'Not Available'). At the bottom, there are checkboxes for 'Secure DNS' (checked/Enabled), 'Status' (displaying 'Disconnected'), 'DNS over HTTP Provider' (set to 'Google' with a 'Privacy Policy' link), and 'Allow fall-back' (set to 'Disabled').

This screenshot shows the 'Internet' settings page with the 'DS-Lite Configuration' dropdown set to 'Manual Configuration'. The 'AFTR IPv6 Address' field is empty. The 'B4 IPv4 Address' field contains '192.0.0.'. The 'WAN IPv6 Address' and 'IPv6 WAN Default Gateway' fields both display 'Not Available'. The bottom section shows 'Secure DNS' (checked/Enabled), 'Status' (displaying 'Disconnected'), 'DNS over HTTP Provider' (set to 'Google' with a 'Privacy Policy' link), and 'Allow fall-back' (set to 'Disabled').

Secure DNS Enable this option to use public DNS with encryption via DNS-over-HTTPS (DoH).

DNS over HTTP Provider Select the public DNS service provider: Google or Cloudflare.

Allow Fall-back Use your primary or secondary DNS server as an alternative if the configured provider is not working.

Click **Save** when you are done.

IPv6

Go to **Settings > Internet**, then click the **IPv6** link. To return to the IPv4 settings, click **IPv4**. To configure the VLAN connection details, click the VLAN tab.

My Internet Connection Is Choose your IPv6 connection type from the drop-down menu. You will be presented with the options for your connection type. Click **Advanced Settings...** to display more options.

For **Auto Detection**, refer to **IPv6 Auto Detection** on page 30.

For **Static IPv6**, refer to **Static IPv6** on page 32.

For **Auto Configuration (SLAAC/DHCPv6)**, refer to **Auto Configuration (SLAAC/DHCPv6)** on page 34.

For **PPPoE**, refer to **PPPoE** on page 36.

For **6rd**, refer to **6rd** on page 39.

For **Local Connectivity Only**, refer to **Local Connectivity Only** on page 41.

The screenshot shows the IPv6 configuration page. At the top, there's a title 'IPv6' and a subtitle 'All of your IPv6 Internet and network connection details are displayed on this page.' Below this is a breadcrumb 'Settings >> Internet >> IPv6' and three tabs: 'VLAN', 'IPv4', and 'Save'. The 'IPv4' tab is selected. Under 'My Internet Connection is', there's a dropdown menu set to 'Auto Detection'. Below this is the 'IPv6 DNS SETTINGS' section with a 'DNS Type' dropdown set to 'Obtain a DNS server address automatically'. The 'LAN IPv6 ADDRESS SETTINGS' section shows 'Enable DHCPv6' as 'Enabled' and 'LAN IPv6 Link-Local Address' as 'FE80::A837DFFF:FE61:C73064'. An 'Advanced Settings...' link is at the bottom right.

IPv6 Auto Detection

Select **Auto Detection** to automatically detect the IPv6 connection method used by your Internet Service Provider (ISP). If Auto Detection fails, you can manually select another IPv6 connection type. Click **Save** at any time to save the changes you have made on this page.

IPv6 DNS Settings

DNS Type Select either **Obtain DNS server address automatically** or **Use the following DNS address**.

Primary DNS Server If you select Use the following DNS address, enter the primary DNS server address.

Secondary DNS Server Enter the secondary DNS server address.

LAN IPv6 Address Settings

Enable DHCP-PD Enable or disable DHCP Prefix Delegation.

LAN IPv6 Link-Local Address Displays the device's LAN link-local address.

If **Enable DHCP-PD** is disabled, enter the following:

LAN IPv6 Address Enter a valid LAN IPv6 address in this format: x:x:x:x:x:x:x where x is a hexadecimal number from 0 to ffff.

LAN IPv6 Link-Local Address Displays the device's LAN link-local address.

Advanced Settings - Address Autoconfiguration Settings

- Enable Automatic IPv6 Address Assignment

Enable or disable automatic assignment of an IPv6 address.
- Enable Automatic DHCP-PD in LAN

Enable or disable DHCP-PD for other IPv6 routers connected to the LAN interface. This option is only available if the above **Enable DHCP-PD** is enabled.
- Autoconfiguration Type

Select **SLAAC+RDNSS**, **SLAAC+Stateless DHCP**, or **Stateful DHCPv6**.

If you select **SLAAC+RDNSS** or **SLAAC+Stateless DHCP** as the Autoconfiguration Type:

- Router Advertisement Lifetime

Enter the router advertisement lifetime (in minutes). The default is 0 minutes.

If you select **Stateful DHCPv6** as the Autoconfiguration Type:

- IPv6 Address Range (Start)

Enter the start IPv6 address for the DHCP server's IPv6 assignment.
- IPv6 Address Range (End)

Enter the end IPv6 address for the DHCP server's IPv6 assignment.
- IPv6 Address Lifetime

Enter the dynamic IP's retention time. The default is 0 minutes. This option is only available if the above **Enable DHCP-PD** is disabled.

ADDRESS AUTOCONFIGURATION SETTINGS

Enable Automatic IPv6 Address Assignment:

Enabled

Enable Automatic DHCP-PD in LAN:

Enabled

Autoconfiguration Type:

SLAAC+Stateless DHCP

Router Advertisement Lifetime:

0

minutes

ADDRESS AUTOCONFIGURATION SETTINGS

Enable Automatic IPv6 Address Assignment:

Enabled

Enable Automatic DHCP-PD in LAN:

Enabled

Autoconfiguration Type:

SLAAC+RDNSS

Router Advertisement Lifetime:

0

minutes

ADDRESS AUTOCONFIGURATION SETTINGS

Enable Automatic IPv6 Address Assignment:

Enabled

Enable Automatic DHCP-PD in LAN:

Enabled

Autoconfiguration Type:

Stateful DHCPv6

IPv6 Address Range (Start):

FE80::

IPv6 Address Range (End):

FE80::

Static IPv6

Select **Static IP** if your IPv6 information is provided by your Internet Service Provider (ISP).

- Use Link-Local Address

Enable or disable link-local address use. Enabling this feature will use your local IPv6 address as the static IP. Disable this feature to manually enter your static IPv6 address and subnet prefix length.
- IPv6 Address

If **Use Link-Local Address** is disabled, enter the address supplied by your ISP.
- Subnet Prefix Length

If **Use Link-Local Address** is disabled, enter the subnet prefix length (1~128) supplied by your ISP.
- Default Gateway

Enter the default gateway for your IPv6 connection.
- Primary DNS Server

Enter the primary DNS server address.
- Secondary DNS Server

Enter the secondary DNS server address.

 IPv6

All of your IPv6 Internet and network connection details are displayed on this page.

Settings>>Internet>>IPv6

VLAN

IPv6

Save

My Internet Connection is: Static IPv6

Use Link-Local Address: Disabled

IPv6 Address:

Subnet Prefix Length:

Default Gateway:

Primary DNS Server:

Secondary DNS Server:

LAN IPv6 ADDRESS SETTINGS

LAN IPv6 Address: /64

LAN IPv6 Link-Local Address: FE80::A463:7DFF:FE61:C730/64

Advanced Settings...

LAN IPv6 Address Settings

- LAN IPv6 Address

Enter the LAN IPv6 address for the M18.
- LAN IPv6 Link-Local Address

Displays the M18's LAN link-local address.

Static IPv6 (Continued)

Advanced Settings - Address Autoconfiguration Settings

Enable Automatic IPv6 Address Assignment Enable or disable automatic assignment of an IPv6 Address.

Autoconfiguration Type Select **SLAAC+RDNSS**, **SLAAC+Stateless DHCP**, or **Stateful DHCPv6**.

If you select **SLAAC+RDNSS** or **SLAAC+Stateless DHCP** as the Autoconfiguration Type:

Router Advertisement Lifetime Enter the router advertisement lifetime (in minutes). The default is 30 minutes.

If you select **Stateful DHCPv6** as the Autoconfiguration Type:

IPv6 Address Range (Start) Enter the start IPv6 address for the DHCP server’s IPv6 assignment.

IPv6 Address Range (End) Enter the end IPv6 address for the DHCP server’s IPv6 assignment.

IPv6 Address Lifetime Enter the dynamic IP’s retention time. The default is 10080 minutes.

Click **Save** when you are done.

ADDRESS AUTOCONFIGURATION SETTINGS

Enable Automatic IPv6 Address Assignment:

Enabled

Autoconfiguration Type:

SLAAC+Stateless DHCP

Router Advertisement Lifetime:

30

minutes

ADDRESS AUTOCONFIGURATION SETTINGS

Enable Automatic IPv6 Address Assignment:

Enabled

Autoconfiguration Type:

SLAAC+RDNSS

Router Advertisement Lifetime:

30

minutes

ADDRESS AUTOCONFIGURATION SETTINGS

Enable Automatic IPv6 Address Assignment:

Enabled

Autoconfiguration Type:

Stateful DHCPv6

IPv6 Address Range (Start):

ffff::00

IPv6 Address Range (End):

ffff::00

IPv6 Address Lifetime:

10080

minutes

Auto Configuration (SLAAC/DHCPv6)

Select **Auto Configuration (SLAAC/DHCPv6)** if your ISP assigns an IPv6 address to M18 upon request. Some ISPs require you to modify connection settings accordingly before your device can connect to the IPv6 Internet.

IPv6 DNS Settings

DNS Type Select either **Obtain DNS server address automatically** or **Use the following DNS address**.

If **Use the following DNS address** is selected:

Primary DNS Server Enter the primary DNS server address.

Secondary DNS Server Enter the secondary DNS server address.

LAN IPv6 Address Settings

Enable DHCP-PD Enable or disable prefix delegation services.

LAN IPv6 Link-Local Address Displays M18's LAN link-local address.

If **Enable DHCP-PD** is disabled, configure the following:

LAN IPv6 Address Enter a valid LAN IPv6 address.

LAN IPv6 Link-Local Address Displays M18's LAN link-local address for the local network only.

The screenshot shows the 'IPv6' configuration page. At the top, there's a header 'IPv6' with a sub-header 'All of your IPv6 Internet and network connection details are displayed on this page.' Below this, there's a breadcrumb 'Settings>>Internet>>IPv6' and three buttons: 'VLAN', 'IPv4', and 'Save'. A dropdown menu 'My Internet Connection is:' is set to 'Auto Configuration (SLAAC/DHCPv6)'. The 'IPv6 DNS SETTINGS' section shows 'DNS Type:' set to 'Obtain a DNS server address automatically'. The 'LAN IPv6 ADDRESS SETTINGS' section shows 'Enable DHCP-PD:' set to 'Enabled' and 'LAN IPv6 Link-Local Address:' as 'FE80::A463:7DFF:FE51:C730/64'. A link for 'Advanced Settings' is at the bottom right.

Auto Configuration (SLAAC/DHCPv6) (Continued)

Advanced Settings - Address Autoconfiguration Settings

Enable Automatic IPv6 Address Assignment

Enable or disable the Automatic IPv6 Address Assignment feature. Enabling this feature presents additional configuration options.

Enable Automatic DHCP-PD in LAN

Enable or disable DHCP-PD for other IPv6 routers connected to the LAN interface. This option is only available if the above **Enable DHCP-PD** is enabled.

Autoconfiguration Type

Select **SLAAC+RDNSS**, **SLAAC+Stateless DHCP**, or **Stateful DHCPv6**.

If you select **SLAAC+RDNSS** or **SLAAC+Stateless DHCP** as the Autoconfiguration Type:

Router Advertisement Lifetime

Enter the router advertisement lifetime (in minutes). The default is 30 minutes.

If you select **Stateful DHCPv6** as the Autoconfiguration Type:

IPv6 Address Range (Start)

Enter the start IPv6 address for the DHCP server's IPv6 assignment.

IPv6 Address Range (End)

Enter the end IPv6 address for the DHCP server's IPv6 assignment.

IPv6 Address Lifetime

Enter the dynamic IP's retention time. The default is 10080 minutes. This option is only available if the above **Enable DHCP-PD** is disabled.

Click **Save** when you are done.

ADDRESS AUTOCONFIGURATION SETTINGS

Enable Automatic IPv6 Address Assignment: ☒ Enabled

Enable Automatic DHCP-PD in LAN: ☒ Enabled

Autoconfiguration Type: ^

Router Advertisement Lifetime: minutes

ADDRESS AUTOCONFIGURATION SETTINGS

Enable Automatic IPv6 Address Assignment: ☒ Enabled

Enable Automatic DHCP-PD in LAN: ☒ Enabled

Autoconfiguration Type: ^

Router Advertisement Lifetime: minutes

ADDRESS AUTOCONFIGURATION SETTINGS

Enable Automatic IPv6 Address Assignment: ☒ Enabled

Enable Automatic DHCP-PD in LAN: ☒ Enabled

Autoconfiguration Type: ^

IPv6 Address Range (Start): ^

IPv6 Address Range (End): ^

PPPoE

Select **PPPoE** if your ISP requires you to enter a PPPoE username and password in order to connect to the Internet.

PPPoE Session Select **Create a new session** to start a new PPPoE session.

Username Enter the username provided by your ISP.

Password Enter the password provided by your ISP.

Address Mode Select **Static IP** if your ISP assigned you an IP address. In most cases, select **Dynamic IP**.

IP Address If you selected **Static IP** as the Address Mode, enter the IP address provided by your ISP.

Service Name Enter the ISP service name (optional).

Reconnect Mode Select either **Always On** or **Manual**.

MTU Maximum Transmission Unit (1280~1492) - you may need to change the MTU for optimal performance with your ISP. The default is 1492 bytes.

IPv6 DNS Settings

PPPoE (Continued)

DNS Type Select either **Obtain DNS server address automatically** or **Use the following DNS address**.

If **Use the following DNS address** is selected:

Primary DNS Server Enter the primary DNS server address.

Secondary DNS Server Enter the secondary DNS server address.

LAN IPv6 Address Settings

Enable DHCP-PD Enable or disable prefix delegation. This option is only available if using the Dynamic IP.

LAN IPv6 Link-Local Address Displays the M18's LAN link-local address.

If **Enable DHCP-PD** is disabled, enter the following:

LAN IPv6 Address Enter a valid LAN IPv6 address.

LAN IPv6 Link-Local Address Displays LAN link-local address of the M18.

The screenshot displays the configuration interface for IPv6 settings, organized into three main sections:

- IPv6 DNS SETTINGS:** Features a "DNS Type" dropdown menu currently set to "Obtain a DNS server address automatically".
- LAN IPv6 ADDRESS SETTINGS:** Includes an "Enable DHCP-PD" toggle switch set to "Disabled". Below this is a "LAN IPv6 Address" input field (currently empty) followed by a "/64" suffix. Underneath, the "LAN IPv6 Link-Local Address" is displayed as "FE80::AA63:7DFF:FE61:C730::64". A link for "Advanced Settings..." is located to the right.
- ADDRESS AUTOCONFIGURATION SETTINGS:** Contains an "Enable Automatic IPv6 Address Assignment" toggle switch set to "Enabled". Below it, the "Autoconfiguration Type" is set to "SLAAC+Stateless DHCP" via a dropdown menu. At the bottom, the "Router Advertisement Lifetime" is set to "30" minutes.

PPPoE (Continued)

Advanced Settings - Address Autoconfiguration Settings

Enable Automatic IPv6 Address Assignment Enable or disable the Automatic IPv6 Address Assignment feature. Enabling this feature presents additional configuration options.

Enable Automatic DHCP-PD in LAN Enable or disable DHCP-PD for other IPv6 routers connected to the LAN interface. This option is only available if the above **Enable DHCP-PD** is enabled.

Autoconfiguration Type Select **SLAAC+RDNSS**, **SLAAC+Stateless DHCP**, or **Stateful DHCPv6**.

If you select **SLAAC+RDNSS** or **SLAAC+Stateless DHCP** as the Autoconfiguration Type:

Router Advertisement Lifetime Enter the router advertisement lifetime (in minutes).The default is 30 minutes.

If you select **Stateful DHCPv6** as the Autoconfiguration Type:

IPv6 Address Range (Start) Enter the start IPv6 address for the DHCP server’s IPv6 assignment.

IPv6 Address Range (End) Enter the end IPv6 address for the DHCP server’s IPv6 assignment.

IPv6 Address Lifetime Enter the dynamic IP's retention time. The default is 10080 minutes. This option is only available if the above **Enable DHCP-PD** is disabled.

Click **Save** when you are done.

IPv6 DNS SETTINGS

DNS Type: Obtain a DNS server address automatically

LAN IPv6 ADDRESS SETTINGS

Enable DHCP-PD: Enabled

LAN IPv6 Link Local Address: FE80::AA63:7DFF:FE61:C730/64

Advanced Settings

ADDRESS AUTOCONFIGURATION SETTINGS

Enable Automatic IPv6 Address Assignment: Enabled

Enable Automatic DHCP-PD in LAN: Enabled

Autoconfiguration Type: SLAAC+Stateless DHCP

Router Advertisement Lifetime: 30 minutes

6rd

IPv6 **6rd** (rapid deployment) allows IPv6 packets to be transmitted over an IPv4 network. Configure the IPv6 **6rd** connection settings in this section.

- Assign IPv6 Prefix** Currently unsupported.
- Primary DNS Server** Enter the primary DNS server address.
- Secondary DNS Server** Enter the secondary DNS server address.

6rd Manual Configuration

- Enable Hub and Spoke Mode** Enable this feature to minimize the number of routes to the destination by using a hub and spoke method of networking.
- 6rd Configuration** Choose the **6rd DHCPv4 Option** to automatically discover and populate data values, or choose **Manual Configuration** to enter the below settings.

If you selected **Manual Configuration** as the 6rd Configuration:

- 6rd IPv6 Prefix** Enter the 6rd IPv6 network address and prefix length supplied by your ISP.
- WAN IPv4 Address** Enter the IPv4 network prefix (subnet mask) length(1~32).
- 6rd Border Relay IPv4 Address** Enter the 6rd border relay router's IPv4 address supplied by your ISP.

LAN IPv6 Address Settings

IPv6

All of your IPv6 Internet and network connection details are displayed on this page.

Settings>>Internet>>IPv6

VLAN

IPv4

Save

My Internet Connection is: 6rd

Assign IPv6 Prefix: Not Available

Primary DNS Server:

Secondary DNS Server:

6RD MANUAL CONFIGURATION

Enable Hub and Spoke Mode: Enabled

6rd Configuration: 6rd DHCPv4 Option

6RD MANUAL CONFIGURATION

Enable Hub and Spoke Mode: Enabled

6rd Configuration: Manual Configuration

6rd IPv6 Prefix:

WAN IPv4 Address: 192.168.0.229 /

6rd Border Relay IPv4 Address:

6rd (Continued)

LAN IPv6 Address Displays the M18's LAN IPv6 address.

LAN IPv6 Link-Local Address Displays the M18's LAN link-local address.

Advanced Settings - Address Autoconfiguration Settings

Enable Automatic IPv6 Address Assignment Enable or disable the Automatic IPv6 Address Assignment feature.

Autoconfiguration Type Select **SLAAC+RDNSS**, **SLAAC+Stateless DHCP**, or **Stateful DHCPv6**.

If you select **SLAAC+RDNSS** or **SLAAC+Stateless DHCP** as the Autoconfiguration Type:

Router Advertisement Lifetime Enter the router advertisement lifetime (in minutes). The default is 30 minutes.

If you select **Stateful DHCPv6** as the Autoconfiguration Type:

IPv6 Address Range (Start) Enter the start IPv6 address for the DHCP server's IPv6 assignment.

IPv6 Address Range (End) Enter the end IPv6 address for the DHCP server's IPv6 assignment.

IPv6 Address Lifetime: Enter the IPv6 address lifetime (in minutes). The default is 10080 minutes.

Click **Save** when you are done.

The screenshot shows the configuration interface for LAN IPv6 settings. The top section, titled "LAN IPv6 ADDRESS SETTINGS", displays the "LAN IPv6 Address" and "LAN IPv6 Link-Local Address: FE80::AA63:7DFF:FE61:C730/64". A link for "Advanced Settings..." is visible. The bottom section, titled "ADDRESS AUTOCONFIGURATION SETTINGS", contains three settings: "Enable Automatic IPv6 Address Assignment" is set to "Enabled"; "Autoconfiguration Type" is set to "SLAAC+Stateless DHCP" with a dropdown arrow; and "Router Advertisement Lifetime" is set to "30" minutes.

Local Connectivity Only

Local Connectivity Only allows you to set up an IPv6 connection that will not connect to the Internet.

Advanced Settings - IPv6 ULA Settings

- Enable ULA** Click here to enable Unique Local IPv6 Unicast Addresses settings.
- Use Default ULA Prefix** Enable this option to use the default ULA prefix.
- ULA Prefix** Enter your own ULA prefix if the above setting is disabled.

Advanced Settings - Current IPv6 ULA Settings

- Current ULA Prefix** Displays the current ULA prefix.
- LAN IPv6 ULA** Displays the LAN's IPv6 ULA.

Click **Save** when you are done.



Internet - VLAN


Go to **Settings > Internet**, then click the **VLAN** link to access the configuration options for the VLAN.

VLAN allows Triple-Play services to be differentiated by dividing a network into segments and allowing access to these services by devices only in the assigned segment.

To configure the IPv4 Internet connections, click the **IPv4** link. Refer to **IPv4 on page 18**.

To configure the IPv6 Internet connections, click the **IPv6** link. Refer to **IPv6 on page 29**.

Status Click to enable or disable the Triple-Play VLAN feature. More configuration options will be available if the Status is enabled.

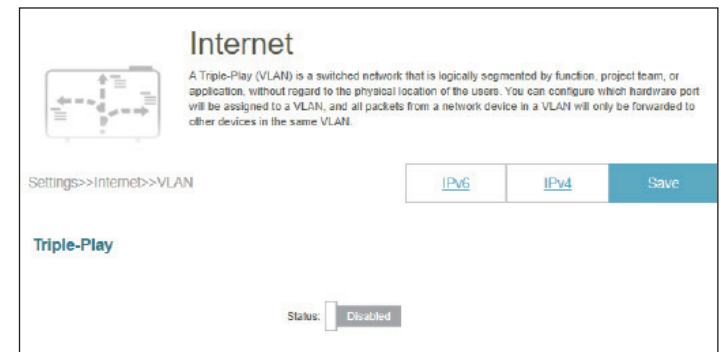

Internet - VLAN (Continued)

If Triple-Play Status is **Enabled**:

- VLAN TAG** Enable VLAN TAG to enter VLAN ID, as provided by your ISP.
- Internet VLAN ID** Enter the VLAN ID for your Internet connection, as provided by your ISP.
- IPTV VLAN ID** Enter the VLAN ID for your IPTV service, as provided by your ISP.
- VOIP VLAN ID** Enter the VLAN ID for your VoIP network, as provided by your ISP.
- Priority ID** Enable or disable traffic priority ID for the Internet, IPTV, and VoIP VLANs. Select a priority ID (0-7) from the drop-down menu to assign to the corresponding VLAN. Higher priority ID traffic takes precedence over traffic with a low priority ID tag.

Interface Traffic Type Setting

- LAN Port** Select the type of connection (Internet, IPTV, or Voice over IP) coming from the WAN connection to the LAN interface of the M18.

Triple-Play

Status: Enabled

Internet Service Provider: Others

Internet VLAN

VLAN TAG: Disabled

Internet VLAN ID:

Priority ID: 0

IPTV VLAN

VLAN TAG: Disabled

IPTV VLAN ID:

Priority ID: 0

VOIP VLAN

VLAN TAG: Disabled

VoIP VLAN ID:

Priority ID: 0

Interface Traffic Type Setting

LAN Port: Internet

Wireless

Go to **Settings > Wireless** to access the wireless network settings.

Wi-Fi Mesh

Status Enable or disable Wi-Fi Mesh if you plan to build a mesh network in your environment. The mesh network is able to find the shortest and fastest path to your gateway/router in a mesh network topology. Hence, it enhances efficiency and reliability. The default is enabled.

Smart Connect

Status Enable or disable the Smart Connect Feature. The Smart Connect feature presents a single wireless network. When connecting clients to the extended network, the clients will be automatically added to the best band, either 2.4 GHz or 5 GHz. The default is enabled.

Wireless

If Smart Connect Status is Enabled:

- Wi-Fi Name (SSID)** Enter a name for your Wi-Fi network.
- Password** Create a password for your Wi-Fi network. Wireless clients will need to enter this password to successfully connect to the network.

Wi-Fi Mesh

Status:

Enabled

Smart Connect

Status:

Enabled

Wireless

Status:

Enabled

Wi-Fi Name (SSID):

M18-704C

Password:

trqj46863

[Advanced Settings...](#)

Wireless (Continued)

Advanced Settings - Wireless

Security Mode Choose None, WPA/WPA2-Personal, WPA2-Personal (the default), WPA2/WPA3-Personal, or WPA3-Personal. WPA3 provides the highest level of encryption among these. Note that WPS will be disabled if the security mode is not WPA2-Personal or WPA/WPA2-Personal.

DFS Channel Enable Dynamic Frequency Selection (DFS) channels to use additional channel options if the router is not in an area close by an airport or a radar station. If enabled, the router will listen for radar signals, and if radar signals are detected, it will automatically switch to a new channel. The default is disabled.

Transmission Power Select the desired wireless transmission power.: High, Medium, Low. The default is high.

Schedule Select the time during which the wireless network will be available. The schedule can be set to **Always Enable** or you can add your own schedule.

To add a schedule:
Each box represents half an hour, with the clock time (0~23) at the top of each column. To add a time period to the schedule, simply click on the start time and drag to the end time. You can add multiple days and multiple periods per day to the schedule.
Click **Save** when you are done.

If Smart Connect Status is Disabled, configure the below settings for 2.4 and 5GHz individually.

Security Mode:

WPA2-Personal

DFS Channel:

Disabled

Transmission Power:

High

Schedule:

Always Enable

Name:

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	
Mon																									
Tue																									
Wed																									
Thu																									
Fri																									
Sat																									
Sun																									

Apply

Wireless (Continued)

2.4GHz/ 5GHz	
Status	Choose None, WPA/WPA2-Personal, WPA2-Personal (the default), WPA2/ WPA3-Personal, or WPA3-Personal. WPA3 provides the highest level of encryption among these. Note that WPS will be disabled if the security mode is not WPA2-Personal or WPA/WPA2-Personal.
Wi-Fi Name (SSID)	Select the desired wireless networking standards to use. The available options for the 2.4 GHz wireless network are Mixed 802.11b/g/n/ax, Mixed 802.11b/g/n, Mixed 802.11b/g, Mixed 802.11g/n, 802.11b only, 802.11g only, or 802.11n only.
Password	Create a Wi-Fi password. Wireless clients will need to enter this password to successfully connect to the network.

2.4GHz

Status:

Enabled

Wi-Fi Name (SSID):

M18-704C

Password:

trqj46863

Advanced Settings...

5GHz

Status:

Enabled

Wi-Fi Name (SSID):

M18-704C

Password:

trqj46863

Advanced Settings...

2.4GHz - Advanced Settings	
Security Mode	Choose None, WPA/WPA2-Personal, WPA2-Personal (the default), WPA2/ WPA3-Personal, or WPA3-Personal. WPA3 provides the highest level of encryption among these. Note that WPS will be disabled if the security mode is not WPA2-Personal or WPA/WPA2-Personal.
802.11 Mode (2.4GHz)	Select the desired wireless networking standards to use. The available options for the 2.4 GHz wireless network are Mixed 802.11b/g/n/ax, Mixed 802.11b/g/n, Mixed 802.11b/g, Mixed 802.11g/n, 802.11b only, 802.11g only, or 802.11n only.
Wi-Fi Channel (2.4GHz)	Select the desired channel:1-11. The default is Auto (recommended).
Transmission Power	Select the desired wireless transmission power: High, Medium, or Low. The default is high.

2.4GHz

Status:

Enabled

Wi-Fi Name (SSID):

M18-704C

Password:

marchen36

Advanced Settings...

Security Mode:

WPA2-Personal

802.11 Mode:

Mixed 802.11b/g/n/ax

Wi-Fi Channel:

Auto

Transmission Power:

High

Wireless (Continued)

Channel Width
(2.4GHz)

The availability of channel width depends on the selected 802.11 mode. Wider channel width increases data rate but more likely to experience interference from other channels. If you have a mix of ax/n and 802.11b/g devices, you can select either Auto 20/40 MHz or 20 MHz only; choose 20 MHz for high-density deployments to minimize interference.

Channel Width

Auto 20/40 MHz

^

HT20/40 Coexistence

Enabled

Visibility Status

Visible

^

Schedule

Always Enable

+

HT20/40
Coexistence
(2.4GHz)

Enable or disable the existence of both 20 MHz and 40 MHz channel width. Keep it enabled to achieve the maximum operability of wireless products using different standards in your environment. However, it might prevent your 802.11ax/n devices from reaching the maximum performance.

Visibility Status

The default setting is Visible. Select Invisible if you do not want to broadcast the SSID of your wireless network.

Schedule

Select the time during which the wireless network will be available. The schedule may be set to Always Enable or you can add your own schedule.

To add a schedule:
Each box represents half an hour, with the clock time (0~23) at the top of each column. To add a time period to the schedule, simply click on the start time and drag to the end time. You can add multiple days and multiple periods per day to the schedule.

5GHz - Advanced Settings

Security Mode

Choose None, WPA/WPA2-Personal, WPA2-Personal (the default), WPA2/WPA3-Personal, or WPA3-Personal. WPA3 provides the highest level of encryption among these. Note that WPS will be disabled if the security mode is not WPA2-Personal or WPA/WPA2-Personal.

5GHz

Status

Enabled

Wi-Fi Name (SSID)

M18-704C

Password

merchen36

Advanced

Security Mode

WPA2-Personal

^

802.11 Mode

Mixed 802.11a/n/ac/ax

^

Wi-Fi Channel

Auto

^

DFS Channel

Disabled

Transmission Power

High

^

Channel Width

Auto 20/40/80 MHz

^

Visibility Status

Visible

^

Schedule

Always Enable

+

Wireless (Continued)

802.11 Mode (5GHz)

Select the desired wireless networking standards to use.

The available options for the 5 GHz wireless network are Mixed 802.11a/n/ac/ax, Mixed 802.11a/n/ac, Mixed 802.11a/n, 802.11ac only, 802.11a only, or 802.11n only.

Wi-Fi Channel (5GHz)

Select the desired channel: 36, 40, 44, 48, 149, 153, 157, 161, or 165. The default is Auto (recommended).

DFS Channel (5GHz)

Enable Dynamic Frequency Selection (DFS) channels to use additional channel options if the router is not in an area close by an airport or a radar station. If enabled, the router will listen for radar signals, and if radar signals are detected, it will automatically switch to a new channel. The default is disabled.

Transmission Power

Select the desired wireless transmission power: High, Medium, or Low. The default is high.

Channel Width (5GHz)

Select Auto 20/40/80 MHz if you are using 802.11ax, 802.11ac, 802.11n, and 802.11a devices, select Auto 20/40 if you are using 802.11n and 802.11a devices, or select 20 MHz if you are using 802.11a devices for optimal throughput.

Visibility Status

The default setting is Visible. Select Invisible if you do not want to broadcast the SSID of your wireless network.

Schedule

Select the time during which the wireless network will be available. The schedule may be set to Always Enable or you can add your own schedule.

To add a schedule:

Each box represents half an hour, with the clock time (0~23) at the top of each column. To add a time period to the schedule, simply click on the start time and drag to the end time. You can add multiple days and multiple periods per day to the schedule.


The screenshot shows the following settings in the Wireless configuration interface:

- Security Mode: WPA2-Personal
- 802.11 Mode: Mixed 802.11a/n/ac/ax
- Wi-Fi Channel: Auto
- DFS Channel: Disabled
- Transmission Power: High
- Channel Width: Auto 20/40/80 MHz
- Visibility Status: Visible
- Schedule: Always Enable

Wireless (Continued)

AI Wi-Fi Optimizer

AI-assisted Wi-Fi Optimizer intelligently assists in Wi-Fi environment optimization in your home or office network. It automatically adopts the "cleanest" channel using the mesh beamforming technology, which in turn optimizes the overall mesh network. It also provides push notifications about weekly bandwidth consumption and optimization performed when network congestion occurs. And with AI Traffic Optimizer, you can further prioritize clients to maintain the overall Internet quality. Refer to **EAGLE PRO AI on page 88** for more information.

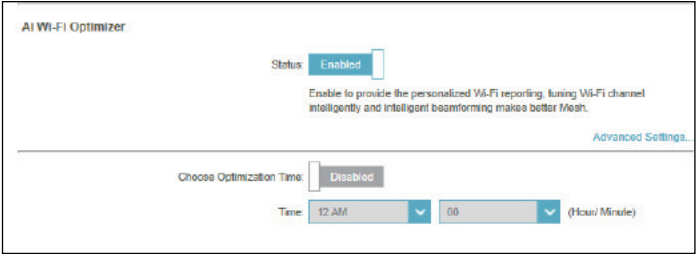

- AI Wi-Fi Optimizer** Enable or disable AI Wi-Fi Optimizer functionality.
- Choose Optimization Time** Enable or disable scheduled optimization. Select the time at which the AI Wi-Fi Optimizer will start.

Once this is turned on, you will start receiving weekly reports on Wi-Fi conditions through AI Assistant.

Wi-Fi Protected Setup

The easiest way to connect your wireless devices to your device is with Wi-Fi Protected Setup (WPS).

- WPS-PBC Status** Enable or disable WPS-PBC (Push Button Configuration) functionality. Press to establish a connection with another WPS compatible device.



Guest Zone

The **Guest Zone** feature allows you to create a temporary wireless network that can be used by guests to access the Internet. This zone will be separate from your main Wi-Fi network.

If Smart Connect is Enabled in the previous Wi-Fi settings, configure the following for both radio frequencies. If it is Disabled, configure the following for 2.4GHz and 5GHz individually.

Wireless

Status

Enable or disable the Guest Wi-Fi network. The status is disabled by default.

Wi-Fi Name (SSID)

Create a name for your wireless network using up to 32 characters.


Password

Create a password for wireless connection.

Schedule

Select the time during which the wireless network will be available. The schedule may be set to Always Enable or you can add your own schedule.

To add a schedule:
Each box represents half an hour, with the clock time (0~23) at the top of each column. To add a time period to the schedule, simply click on the start time and drag to the end time. You can add multiple days and multiple periods per day to the schedule.

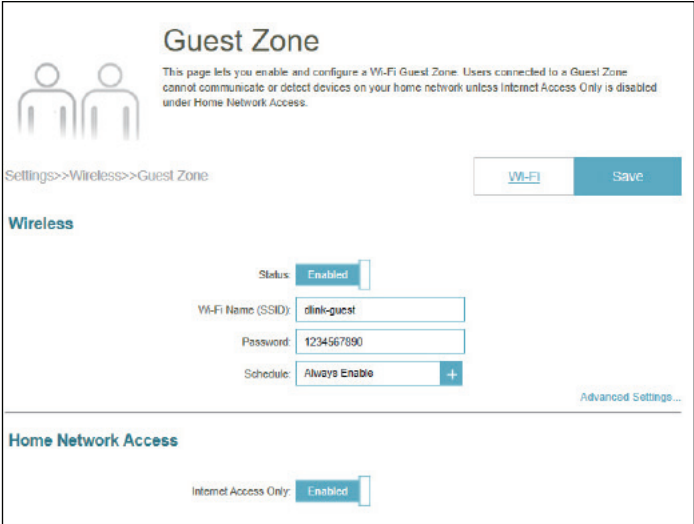

Advanced Settings

Security Mode Choose None, WPA/WPA2-Personal, WPA2-Personal (the default), WPA2/WPA3-Personal, or WPA3-Personal. WPA3 provides the highest level of encryption among these.

Home Network Access

Internet Access Only Enabling this option will confine connectivity to the Internet and prevent guests from accessing other local network devices.

Security Mode: WPA2/WPA3-Personal


Home Network Access

Internet Access Only: Enabled

Network

This section will allow you to change the local network settings of the M18 and configure the DHCP settings. Go to **Settings > Network** to access this configuration page. Click **Advanced Settings...** to expand the configuration items.

Network Settings	
LAN IP Address	Enter the IP address of the router. The default IP address is 192.168.0.1 . If you change the IP address, once you click Save , you will need to enter the new IP address in your browser to get back into the configuration utility.
Subnet Mask	Enter the subnet mask of the device. The default subnet mask is 255.255.255.0 .
Management Link	The default address to access the router's configuration is <code>http://M18-xxxx.local/</code> (where xxxx represents the last 4 digits of your device's MAC address). You can replace M18-xxxx with a name of your choice.
Local Domain Name	Enter the domain name (optional).
Enable DNS Relay	Disable this option to transfer the DNS server information from your ISP to your devices. If enabled, your devices will use the router's settings for DNS service (refer to Primary and Secondary DNS Server settings for each Internet connection type).

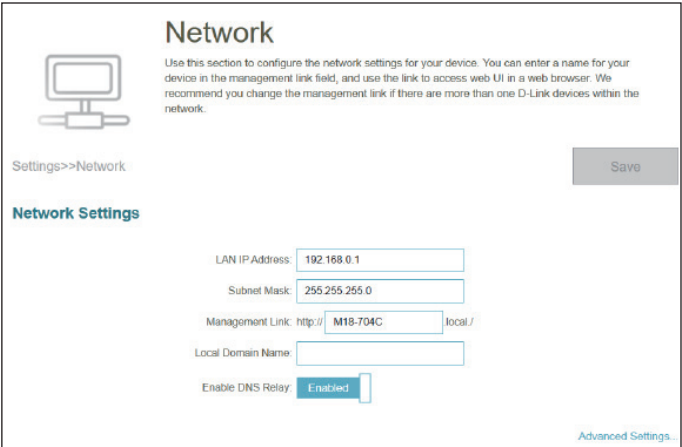

Network (Continued)

DHCP Server	
Status	Enable or disable the DHCP server.
DHCP IP Address Range	Enter the start and end IP addresses for the DHCP server's IP assignment. Note: <i>If you have reserved static IP addresses to client devices, make sure the IP addresses are outside of this range or you might have an IP conflict. Refer to Connected Clients on page 13 for how to reserve IP addresses for clients.</i>
DHCP Lease Time	Enter the length of time for IP address lease in minutes. The default is 10080 minutes.
Always Broadcast	Enable this feature to broadcast your network's DHCP server to LAN/ WLAN clients.

Advanced Settings...

DHCP Server

Status: ☒ Enabled

DHCP IP Address Range: 192.168.0. to 192.168.0.

DHCP Lease Time: minutes

Always Broadcast: ☐ Disabled
(compatibility for some DHCP Clients)

Advanced Settings

WAN Port Speed: ▼

UPnP: ☒ Enabled


IPv4 Multicast Streams: ☒ Enabled

IPv6 Multicast Streams: ☒ Enabled

Advanced Settings	
WAN Port Speed	You may set the port speed of the Internet port to 10 Mbps , 100 Mbps , 1000 Mbps , or Auto (recommended).
UPnP	Enable or disable Universal Plug and Play (UPnP). PnP provides compatibility with networking equipment, software, and peripherals. This is enabled by default.
IPv4 Multicast Streams	Allow or disallow IPv4 multicast traffic to pass through the device from the Internet. This is enabled by default.
IPv6 Multicast Streams	Allow or disallow IPv6 multicast traffic to pass through the device from the Internet. This is enabled by default. Click Save when you are done.

D-Link Cloud

Go to **Settings > D-Link Cloud** to see your D-Link Cloud Service details. This page lists whether you are registered with D-Link Cloud Service and email address associated with the account. It enables you to manage your router anytime, anywhere and check the status of your router. Use EAGLE PRO AI to find out more about D-Link Cloud's features.

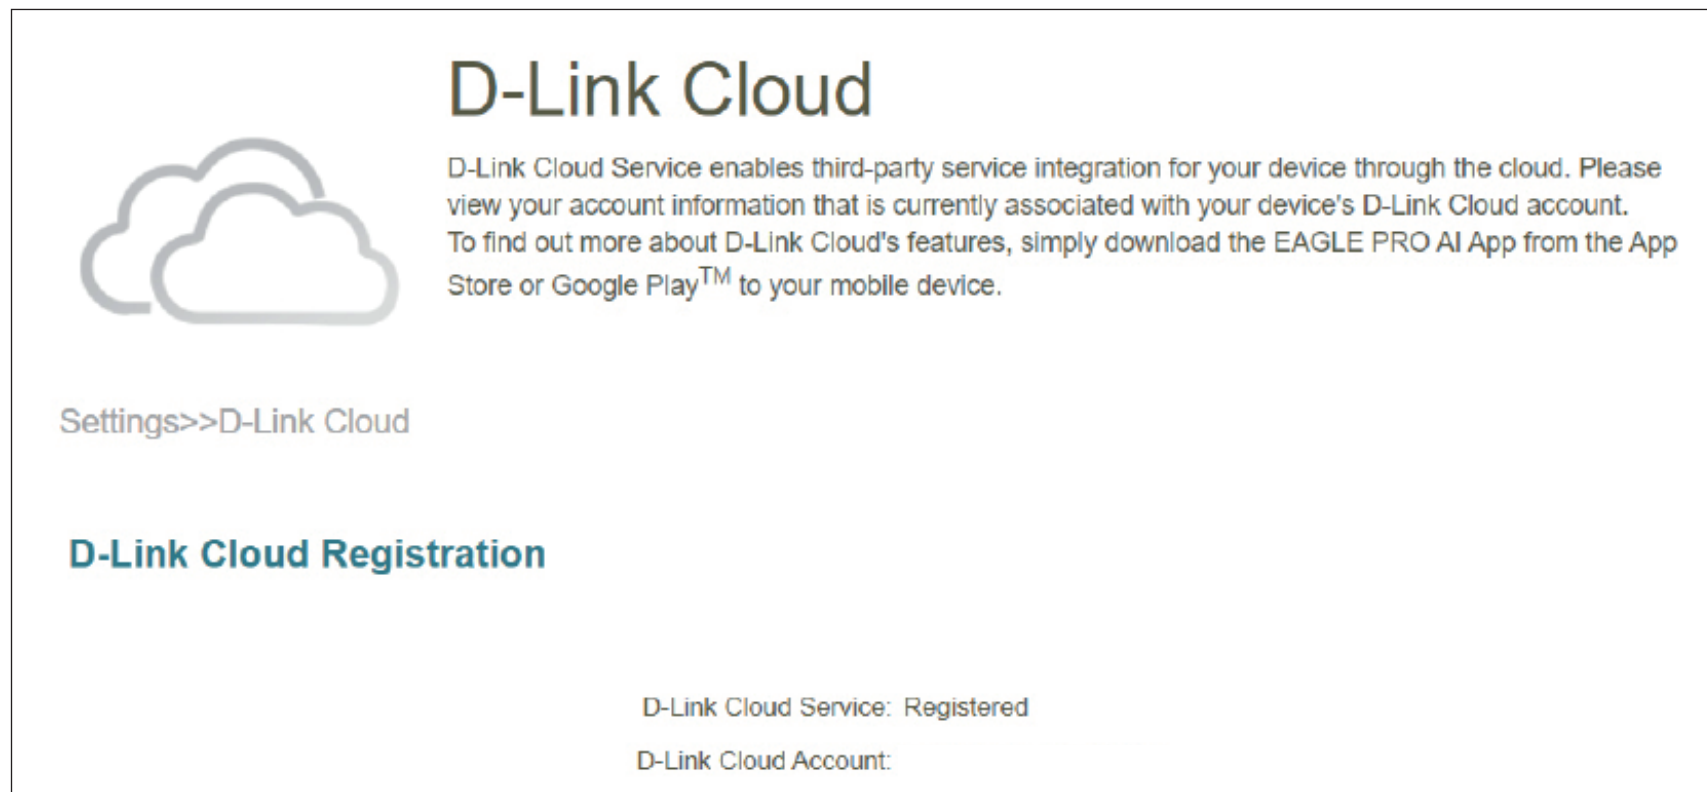

Operation Mode

Go to **Settings > Operation Mode** to select your operation mode. Depending on your network architecture, you can configure the M18 to function as one of the following types of network device: router, extender, or bridge.

Operation Mode Settings

Router Mode

In this mode, the M18 directly connects to the Internet provided by your ISP (Internet Service Provider). All client devices from a network group are connected and managed under this router. This is the default mode.

Extender Mode

In this mode, the M18 acts as an extender to connect your wireless devices, expanding Wi-Fi coverage. It provides connectivity between various wireless devices. This can be useful if you already have an existing wireless router. You can then manage the extender through the main router under this mode.

Bridge Mode

In this Mode, the M18 extends your existing network and improves overall Wi-Fi coverage, meaning that you already have a router on the premises. Under this mode, the DHCP Server, Parental Control, QoS, and Firewall related settings rely on the existing router.

Click **Save** when you are done.

Your device operation mode is: Router Mode

In Router mode, the device directly connects to the Internet provided by your Internet Service Provider. All client devices from a network group under this router.

The device operates under Router mode by default.

Internet Your Device Wi-Fi Client

Your device operation mode is: Extender Mode

This device acts as an extender to connect your wireless devices, but does not provide routing functionality. It works as a connection between various wireless devices. This can be useful if you already have an existing wireless router.

Switching this device to Extender Mode will disconnect joined mesh devices.

Internet Existing Router Your Device Wi-Fi Client

Your device operation mode is: Bridge Mode

In Bridge Mode, your device extends your existing network and improves overall Wi-Fi coverage. Under this mode, the Parental Controls, QoS and Firewall settings rely on the existing router.

Internet Existing Router Your Device Client


Features

Parental Control

Go to **Features > Parental Control** to configure parental control policies. You can configure schedules that set time limits for Internet access and prevent access to certain websites.

This page displays a list of profiles with the following information:

- Profile Name** The name describes this profile.
 - Device Count** The number of devices that this policy will be applied to.
 - State** Displays the current status of Internet accessibility, i.e. Normal, Schedule Paused, or Paused on Demand.
 - Edit** Edit the access profile.
 - Delete** Remove this access profile.
- A maximum of 12 profiles can be defined.

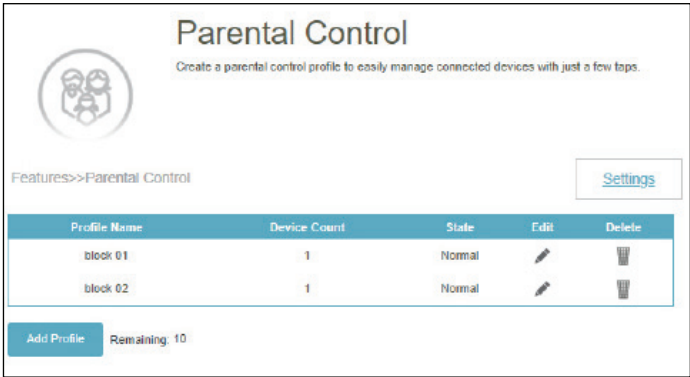


To add a profile, configure the following:

- Profile Name** Enter a name for this profile.

Schedule

- Allow Internet Access Time** Click **Enabled** and define the schedule to allow Internet access. Select the time during which the Internet will be available.

To add a schedule:
Each box represents half an hour, with the clock time (0~23) at the top of each column. To add a time period to the schedule, simply click on the start time and drag to the end time. You can add multiple days and multiple periods per day to the schedule.

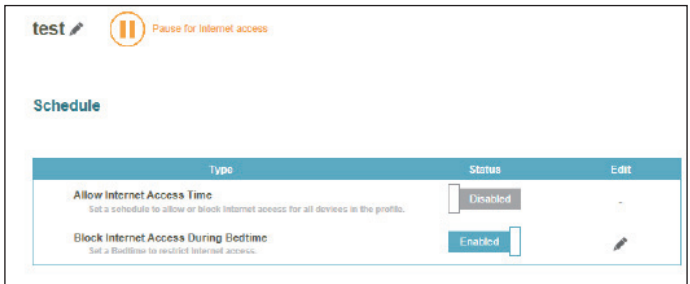

Block Internet Access During Bedtime

Click **Enabled** and define the schedule to block Internet access during bedtime.

To add a bedtime schedule:

Select the time during which bedtime schedule will be active. Select the days of the week, then select the pause time and the resume time for the period during which Internet access will be blocked. To specify different time periods for days of the week, click **Add another Bedtime schedule...** A maximum of 2 schedules can be defined.

Click **Apply** when you are done.

Website Filter

Click **Add Rule** to add a new website to be blocked:

Website Name

Enter the name for the website. This blocks access to websites based on website addresses. For example, enter "ABC.com" or "www.ABC.com."




URL Keyword

Use keywords with matching URLs to restrict access to unwanted websites. For example, use "ABC" to block "www.ABC.com" and "xxx.ABC.com" and other URLs containing ABC. Enter the same website name as the above in this field to block only the specific URL.

You can also modify or delete an existing rule by clicking **Edit** or **Delete** respectively. A maximum of 24 rules can be defined.

Device

Click **Add Device** to add devices to be in the defined profile. Select the devices from the list of connected devices to which the access policy should be applied, then click **Apply** to close the screen. Click **Save** to save your profile settings and the new profile will be added to the profile list. You can also modify or delete an existing profile by clicking **Edit** or **Delete** respectively. On the **Edit** page for a selected profile, you can click  **Pause for Internet access** to pause Internet access to specified devices of the profile immediately.

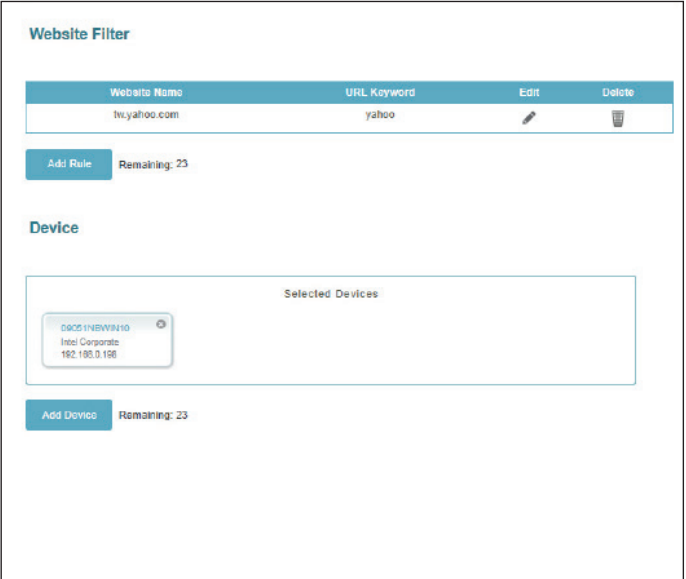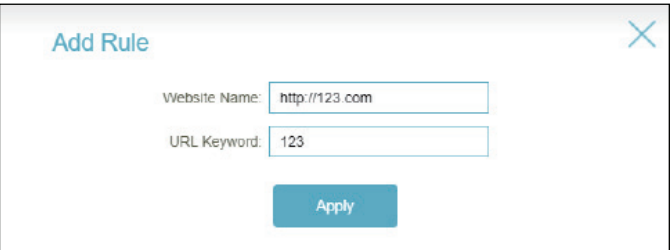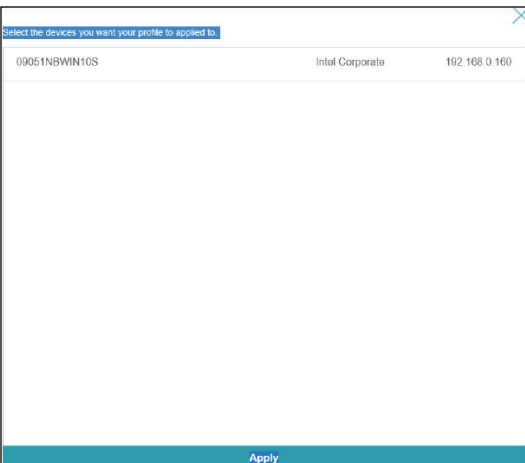Click **Settings** to view the messages displayed to the device users whose Internet access has been restricted.

Blocked Webpage Message

For these access controls: **Manual Pause Control**, **Website Filter**, **Custom Schedule**, and **Bedtime Schedule**, you can view and customize the messages as well as the titles:

- Title** Enter the title of the message in the text box.
- Description** State the message to inform the user about the restricted access.
- Reset this message** Click this button to reset the modified message to its factory default.
- Preview this message** Display the presentation of the message on a new webpage.

Blocked Webpage Message

Manual Pause Control

Preview this message

Title: Internet access is paused.

Description: Your access to the Internet is currently paused by the network administrator. Please check with your network administrator for more info on this restriction.

Reset this message

Website Filter

Preview this message

Title: Access to this website is restricted.

Description: Your attempt to access this website was denied. Please check with your network administrator for more info on this restriction.

Reset this message

Custom Schedule

Preview this message

Title: Internet access is unavailable at this time.

Description: Internet access is scheduled to be unavailable at this time by the network administrator. Please check with your network administrator for more info on this restriction.

QoS Engine

Go to **Features > QoS Engine** to configure clients' Internet access priorities. It aims to optimize Internet traffic to enhance the overall user experience.

AI Traffic Optimizer

The intelligent QoS Engine is capable of allocating appropriate bandwidth to prioritized devices to maintain quality online experience.

Once this is turned on, you will start receiving weekly reports on Internet usage through AI Assistant.

Upload Speed


The rate at which the content is being transferred to the Internet in megabit per second. You can also enter this value manually.

Download Speed

The rate at which the content is being transferred to the M18 in megabit per second. You can also enter this value manually.

Upload/download speeds can be obtained from your Internet Service Provider.

Click **Save** after filling in the above information.

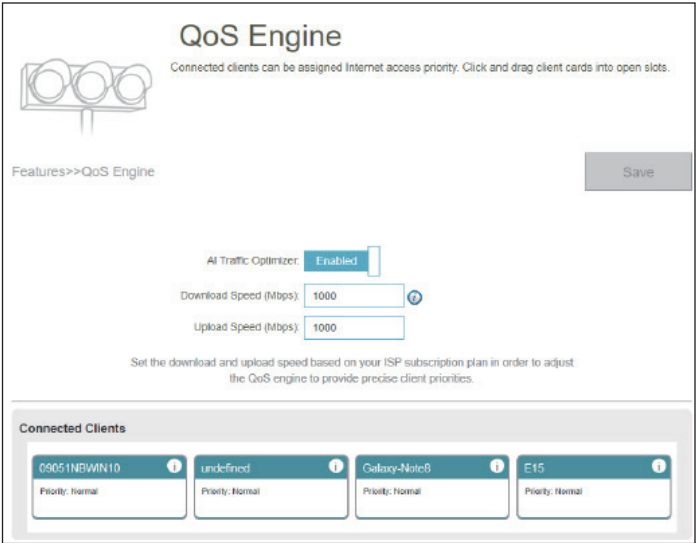

QoS Engine (Continued)

This **Quality of Service (QoS) Engine** allows you to prioritize particular clients over others, so that these clients receive higher bandwidth. For example, if one client is streaming a movie and another is downloading a bulk of files, you might want to assign the former device a higher priority than the latter so that the movie streaming is not disrupted.

Under **Connected Clients**, you will see device cards representing each connected client.


To assign a priority level to a device, enable **AI Traffic Optimizer** first. Then click the client to open its information page. It shows the following information:

- Device Name

The name that describes the client device.
- MAC Address

The MAC address of the client device.
- IPv4/IP v6 Address

The IP address in IPv4 and IPv6 addressing mechanism of the client device.

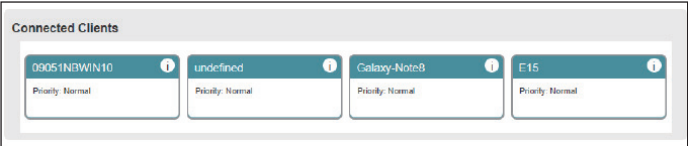

Select the priority and duration for the client device in the following categories:

- Priority

Normal

High: Always Enable, 1 Day, 4 Hours, 2 Hours, or 1 Hour.

Low: Always Enable, 1 Day, 4 Hours, 2 Hours, or 1 Hour.
- Traffic Statistics

It shows traffic statistics for these activities: TCP flow, UDP flow, and Download and Upload speeds in Mbps.
- Real-Time & Weekly Traffic

Real-time Traffic shows real-time data speeds in MB/s or KB/s whereas the Weekly Traffic shows daily download and upload data volume for the past week in KB or MB.



Click **Save** when you are done.

Firewall

Go to **Features > Firewall** to configure the firewall settings. The firewall feature helps protect your network from malicious attacks over the Internet.

To configure the IPv4/IPv6 firewall rules, click the **IPv4 Rules** or **IPv6 Rules** tab. Refer to **IPv4/IPv6 Rules on page 63**.

Enable DMZ Enable or disable Demilitarized Zone (DMZ). This completely exposes the client to threats over the Internet. This is not recommended unless they are servers that must be exposed to the WAN.

DMZ IP Address If you enabled DMZ, enter the IP address of the client you wish to expose, or use the drop-down menu to quickly select it.

Enable SPI IPv4 Enabling Stateful Packet Inspection (SPI) or dynamic packet filtering helps prevent cyber attacks by tracking more states per session to validate that the traffic passing through the session conforms to the protocol.

Enable Anti-Spoof Checking Enable this feature to help protect your network from certain kinds of “spoofing” attacks.

IPv6 Simple Security Enable or disable IPv6 simple security. A simple firewall configuration that denies access directly to computers behind the router.

IPv6 Ingress Filtering Enable or disable IPv6 ingress filtering for incoming packets to prevent suspicious senders.

Click **Save** when you are done.

Firewall Advanced (Continued)

Advanced Settings - Application Level Gateway (ALG) Configuration


Different ALGs provide special handling for specific protocols or applications. A number of ALGs for common applications are enabled by default as stated below.

PPTP Allows multiple machines on the LAN to connect to their corporate network using the PPTP protocol.

IPSec (VPN) Allows multiple VPN clients to connect to their corporate network using IPSec. Some VPN clients support traversal of IPSec through NAT. This Application Level Gateway (ALG) may interfere with the operation of such VPN clients. If you are having trouble connecting with your corporate network, try turning this ALG off. Please check with the system administrator of your corporate network whether your VPN client supports NAT traversal.

RTSP Allows applications that uses Real Time Streaming Protocol (RTSP) to receive streaming media from the Internet.

SIP Allows devices and applications using VoIP (Voice over IP) to communicate across NAT. Some VoIP applications and devices have the ability to discover NAT devices and work around them. This SIP ALG (Session Initiation Protocol Application Layer Gateway) may interfere with the operation of such devices. If you are having trouble making VoIP calls, try turning this ALG off.

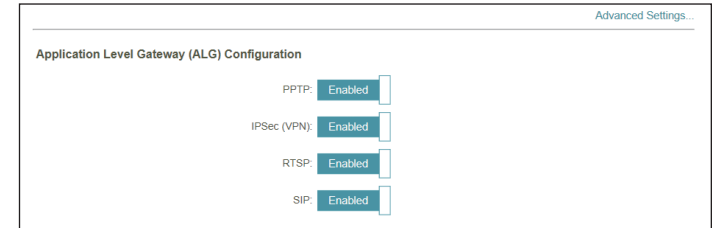


IPv4/IPv6 Rules

Go to **Features > Firewall**, then click the **IPv4 Rules** tab or the **IPv6 Rules** tab to configure rules for traffic filtering.

To configure the Firewall Advanced settings, click the **Advanced** link. Refer to **Firewall on page 61**.

To begin, use the drop-down menu to select whether it is an **ALLOW** or **DENY** rule. You can also choose to turn filtering **OFF**.

If you want to remove a rule, click  in the Delete column. If you wish to edit a rule, click  in the Edit column. If you wish to create a new rule, click the **Add Rule** button.

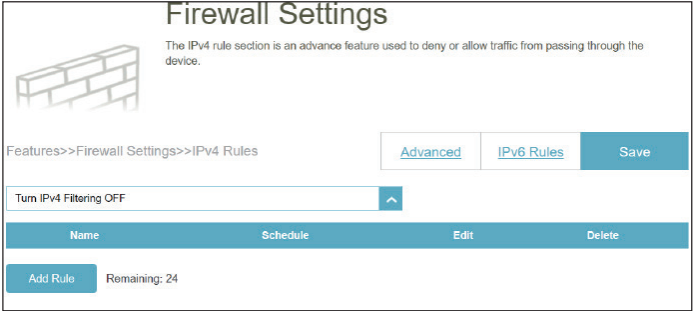

If you click **Edit** or **Add Rule**, the following options will appear:


- Name**

Enter a name for the rule.
- Source IP Address Range**

Enter the source IP address range (e.g. 1.1.1.1-1.1.1.2 for IPv4 or 2001::1-2001::2 for IPv6) that the rule will apply to. Using the drop-down menu, specify whether it is a **WAN** or **LAN** IP address. Both a single IP address and a range of IP addresses can be entered.
- Destination IP Address Range**

Enter the destination IP address range (e.g. 1.1.1.1-1.1.1.2 for IPv4 or 2001::1-2001::2 for IPv6) that the rule will apply to. Using the drop-down menu, specify whether it is a **WAN** or **LAN** IP address. Both a single IP address and a range of IP addresses can be entered.
- Protocol & Port Range**

Select the protocol of the traffic to allow or deny (**Any, TCP, or UDP**) and then enter the range of ports (e.g. 21-23) that the rule will apply to. Select **Any** to allow/deny all types of traffic regardless of the port number.

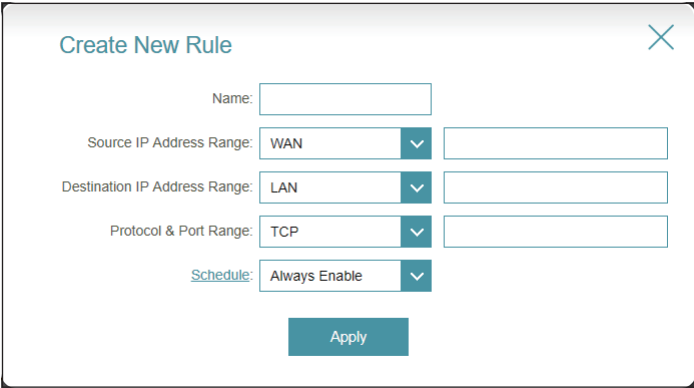

Schedule Use the drop-down menu to select the time schedule during which the rule will be active. The schedule may be set to **Always Enable** or you can create your own schedules in the **Schedules** section. Refer to **Time & Schedule - Schedule on page 73** for more information.

Click **Apply** when you are done. A maximum of 24 rules can be defined.

Port Forwarding



Go to **Features > Port Forwarding** to specify a port or range of ports to open for specific devices on the network. This might be necessary for certain applications to connect through the router. For example, access from the Internet can be redirected to a DMZ host using Port Forwarding.

To configure the Virtual Server settings, click the **Virtual Server** link. Refer to **Virtual Server on page 66**.

If you want to remove a rule, click  in the Delete column. If you wish to edit a rule, click  in the Edit column. If you wish to create a new rule, click the **Add Rule** button.

If you edit or create a rule, the following options will appear:

- Name** Enter a name for the rule.
 - Local IP** Enter the IP address of the device on your local network to which the port will be forwarded. Alternatively, select the device from the drop-down menu.
 - TCP Port** Enter the TCP ports that you want to forward. You can enter a single port or a range of ports. Separate ports with a comma (for example: 24,1009,3000-4000).
 - UDP Port** Enter the UDP ports that you want to forward. You can enter a single port or a range of ports. Separate ports with a comma (for example: 24,1009,3000-4000).
 - Schedule** Use the drop-down menu to select the time schedule that the rule will be enabled on. The schedule may be set to **Always Enable**, or you can create your own schedules in the **Schedule** section. Refer to **Time & Schedule - Schedule on page 73** for more information.
- Click **Apply** when you are done. A maximum of 24 rules can be defined.

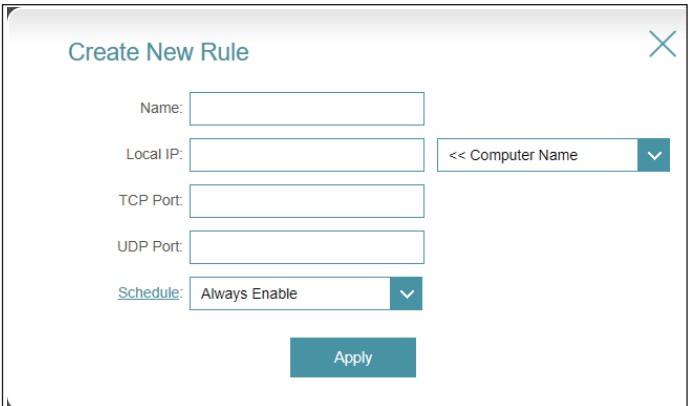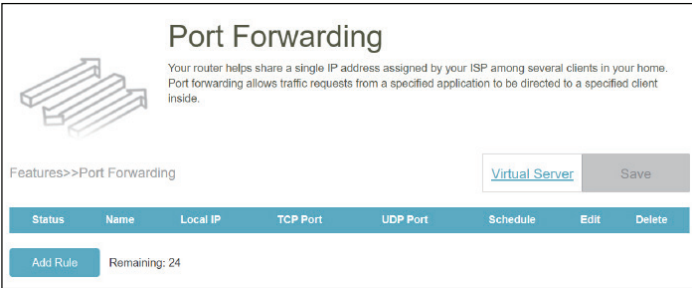

Virtual Server

The virtual server allows you to specify a public port on the M18 for redirection to an internal LAN IP address and private LAN port. To configure the virtual server, from the Port Forwarding page click **Virtual Server**.

If you want to remove a rule, click  in the Delete column. If you wish to edit a rule, click  in the Edit column. If you wish to create a new rule, click the **Add Rule** button.

If you edit or create a rule, the following options will appear:

Name Enter a name for the rule. Alternatively, select the protocol/ Application Name from the drop-down menu. Depending on the requested service, the router redirects the external service request to the appropriate internal host.

Local IP Enter the IP address of the computer on your local network that you want to direct the incoming service to. Alternatively, select the device from the drop-down menu.

Protocol Select the protocol of the traffic to allow or deny (**TCP**, **UDP**, **Both**, or **Other**).

Protocol Number If you entered **Other** above, enter the protocol number. Refer to <https://www.iana.org/assignments/protocol-numbers/protocol-numbers.xhtml> for Assigned Internet Protocol Numbers.

External Port Enter the public port for this service.

Internal Port Enter the private port for this service.

Schedule Use the drop-down menu to select the time schedule that the rule will be enabled for. The schedule may be set to **Always Enable**, or you can create your own schedules in the **Schedules** section. Refer to **Time & Schedule - Schedule on page 73** for more information.

Click **Apply** when you are done. A maximum of 24 rules can be defined.



Static Routes

IPv4


Go to **Features > Static Routes** to define custom routes to control how traffic moves from network to another.

To configure the Static Route IPv6 settings, click the **IPv6** tab. Refer to **IPv6** on page **68**.

If you wish to remove a rule, click  in the Delete column. If you wish to edit a rule, click  in the Edit column. If you wish to create a new rule, click the **Add Rule** button.

If you click on Edit or Add Route, the following options will appear:

- Name** Enter a name for the route.
 - Destination Network** Enter the destination IP address of the subnetwork.
 - Mask** Enter the subnet mask of the destination address.
 - Gateway** Enter the IP address of the next hop, which is the gateway to the remote network.
 - Metric** The route metric is a value from 1 to 16 that indicates the cost (or number of hops) of using this route. A value of 1 is the lowest cost and 16 is the highest cost.
 - Interface** Select the interface that the IP packet must use to transit out of the device when this route is used.
- Click **Apply** when you are done. A maximum of 24 rules can be defined.

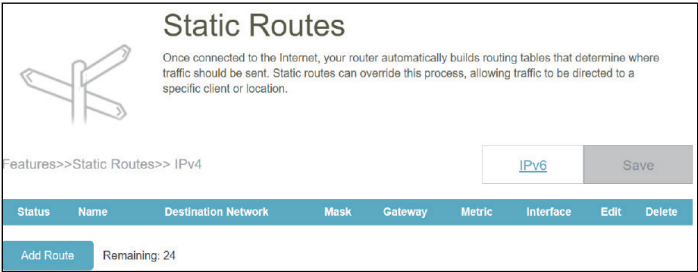

Create New Route

Name:

Destination Network:

Mask:

Gateway:

Metric:

Interface:

WAN

Apply

IPv6

Go to **Features > Static Routes**, then click **IPv6** to configure the IPv6 Static Routes.


To configure the Static Route IPv4 settings, click the **IPv4** tab. Refer to **IPv4** on page **67**.

If you wish to remove a rule, click  in the Delete column. If you wish to edit a rule, click  in the Edit column. If you wish to create a new rule, click the **Add Rule** button.

If you click on Edit or Add Route, the following options will appear:

- Name** Enter a name for the route.
- DestNetwork** Enter the destination IPv6 address of the subnetwork or the prefix, for example, 2010:db9:abcd:1234::
- PrefixLen** Enter the prefix length, which is the number of prefix bits of the IPv6 address. Enter a value between 64 and 128.
- Gateway** Enter the IP address of the next hop, which is the gateway to the remote network.
- Metric** The route metric is a value that indicates the cost of using this route. A value of 1 is the lowest cost and 128 is the highest cost.
- Interface** Select the interface that the IP packet must use to transit out of the device when this route is used.

Click **Apply** when you are done. A maximum of 24 rules can be defined.

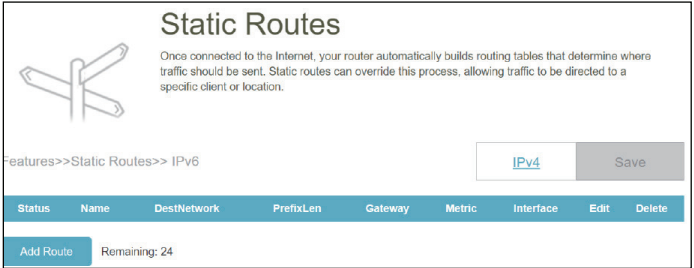

Create New Route

Name:

DestNetwork:

PrefixLen:

Gateway:

Metric:

Interface:

WAN

Apply

Dynamic DNS

Most Internet Service Providers (ISPs) assign dynamic (changing) IP addresses. Using a dynamic DNS service provider, people can enter your domain name in their web browser to connect to your server no matter what your IP address is. This feature is helpful when running a virtual server.

Go to **Features > Dynamic DNS** to access this page.

- Enable Dynamic DNS

Enable or disable dynamic DNS. Enabling this feature will reveal further configuration options.
- Status

Displays the current dynamic DNS connection status.
- Server Address


Select the DDNS service provider from the drop-down menu.
- Host Name

Enter the host name that you registered with your dynamic DNS service provider.
- User Name

Enter your dynamic DNS username.
- Password

Enter your dynamic DNS password.
- Time Out

Enter a timeout value (in hours) to indicate how often the router should update its Dynamic DNS settings. The default is 24 hours.
- Click **Save** when you are done.

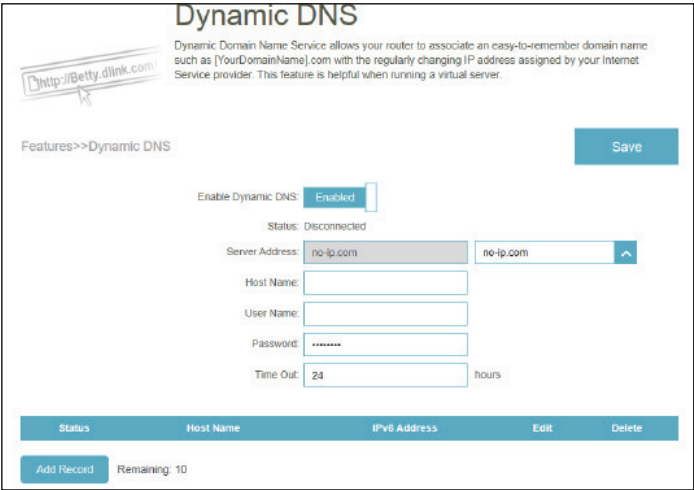

Dynamic DNS (Continued)

The IPv6 host settings can be found at the bottom of the Dynamic DNS page. If you wish to remove a record, click  in the Delete column. If you wish to edit a record, click  in the Edit column. If you wish to create a new record, click the **Add Record** button.

If you edit or create a rule, the following options will appear:

- Host Name

Enter the host name that you registered with your dynamic DNS service provider.
- IPv6 Address

Enter the IPv6 address of your host or server for DDNS configuration. Alternatively, select a network interface from LAN devices for DDNS configuration.
- Click **Apply** when you are done. A maximum of 10 records can be defined.

Status	Host Name	IPv6 Address	Edit	Delete
Add Record		Remaining: 10		

Create New Record

Host Name:

IPv6 Address:

<< Computer Name

Apply

Quick VPN

Go to **Features > Quick VPN**. This page will help you configure the Quick VPN service on the M18. For more information, refer to **VPN Setup Instructions** on page **108**. Before proceeding, ensure that your Internet connection is working properly. We recommend configuring Dynamic DNS before proceeding with Quick VPN setup. If your router is assigned an IP address from your ISP using DHCP, it may frequently change, requiring connection parameters to be set accordingly and a DDNS address can avoid this hassle.

To configure the User settings and grant users with VPN permission, go to **Management > User**. Refer to **User** on page **79**.

L2TP over IPSec Enable or disable the Quick VPN server. Quick VPN uses L2TP protocol.

Username Enter a username.

Password Enter a password containing both numbers and letters with 8 to 64 characters in length.

PSK Enter a pre-shared key containing both numbers and letters with 8 to 64 characters in length.

VPN Profile for iOS Device and MAC OS X Click **Export** to save the VPN profile settings file for iOS devices or Mac OS X.

Advanced Settings

Authentication Protocol Choose the authentication protocol type: **MSCHAPv2**, **PAP**, or **CHAP**. **MSCHAPv2** is the default.

MPPE Select the encryption cipher strength for Microsoft Point-to-Point (MPPE) Encryption: **None**, **RC4-40**, or **RC4-128**. **None** is the default.

Quick VPN
Quickly and easily create a profile for secure remote access to a Local Area Network (LAN). This profile can be used to configure other devices to connect to your LAN via a secure VPN tunnel.

Features >> Quick VPN

[User](#) [Save](#)

General

L2TP over IPSec: ☒ Enabled

Username:

Password:

PSK:

VPN Profile for iOS Device and Mac OS X: [Export](#)

[Advanced Settings...](#)

Advanced

Authentication Protocol:

MPPE:

Management

Time & Schedule

Time

The **Time** page allows you to configure, update, and maintain the correct time on the internal system clock. From here you can set the time zone and the Network Time Protocol (NTP) server. Go to **Management > Time & Schedule** to access the **Time** page.



To configure the Schedule settings, click the **Schedule** tab. Refer to **Schedule** on page 73.

Time Configuration

- Time Zone** Select your time zone from the drop-down menu.
- Time** Displays the current date and time of the router.

Automatic Time Configuration

- NTP Server** Select from the drop-down menu to use one of the following servers to synchronize the time and date for your router:
D-Link NTP Server or Google NTP Server.
Choose Manual to set the NTP server's IP address or domain name manually.
- Click **Save** when you are done.

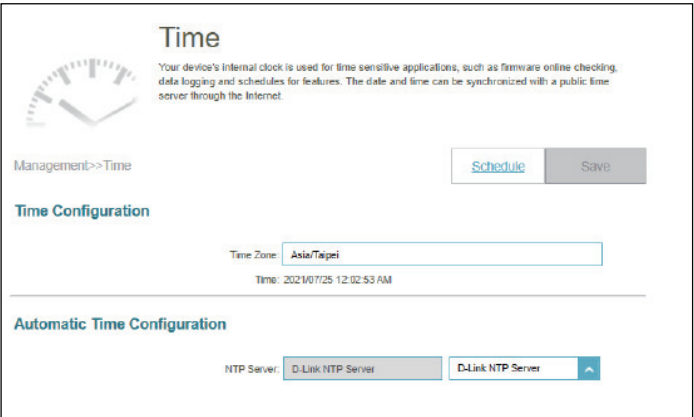

Schedule

Go to **Management > Time & Schedule**, then click the **Schedule** tab. The **Schedule** page allows you to control some of the functions using a pre-configured schedule, for example, Port Forwarding in **Features > Port Forwarding** and Firewall Settings in **Features > Firewall** as well as sending Syslog via email in **Management > System Log**.

To configure the Time settings, click the **Time** tab. Refer to **Time** on page 72.



If you wish to remove a schedule, click  in the Delete column. If you wish to edit a schedule, click  in the Edit column. If you wish to create a new schedule, click the **Add a Schedule** button.

On the Schedule creation page, enter the name of your schedule in the **Name** field.

Each box represents half an hour, with the clock time (0~23) at the top of each column. To add a time period to the schedule, simply click on the start time and drag to the end time. You can add multiple days and multiple periods per day to the schedule.

To remove a time period from the schedule, click on the cross icon.

Click **Apply** to save and close the page. Then click **Save** when you are done creating schedules.

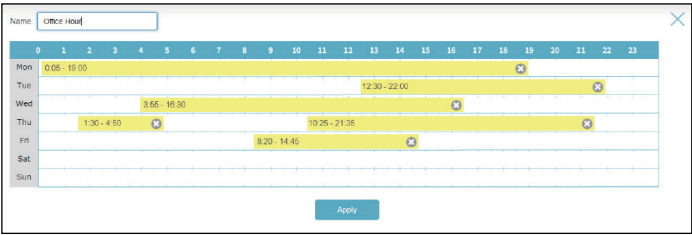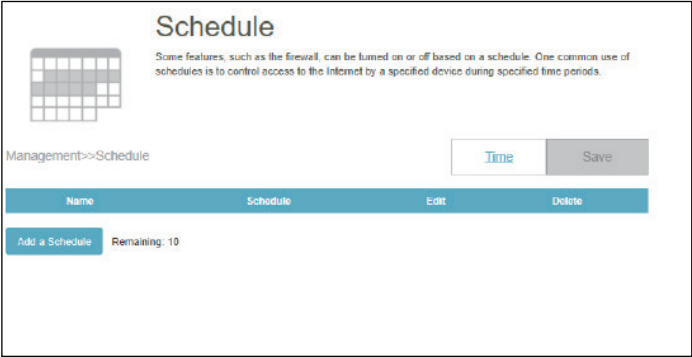

System Log

The router keeps a running log of events. This log can be sent automatically to a Syslog server, or to your email address.

Go to **Management > System Log** to access this page.

Log Settings

System Log Click the **Check System Log** button to download a text file containing the system log. You can view the log entries by opening with any text editing applications such as WordPad on Windows.

SysLog Settings

Enable Logging to Syslog Server Check this box to send the logs to a SysLog Server.

If **Logging to Syslog Server** is enabled:


Syslog Server IP Address Enter the IP address of the Syslog server. If the Syslog server is connected to the router, select it from the drop-down menu to automatically populate the field.

E-mail Settings

Enable E-mail Notification Enable this option if you want the logs to be automatically sent to an email address.

If **E-mail notification** is enabled:

From E-mail Address Enter the sender's email address of the SysLog messages.

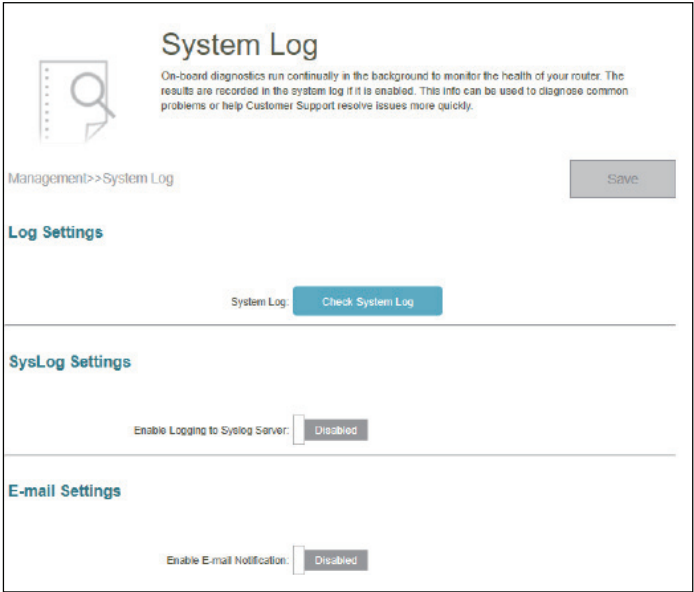

System Log (Continued)

To E-mail Address	Enter the recipient's email address.
SMTP Server Address	Enter the SMTP server address.
SMTP Server Port	Enter the SMTP server port. The default is 25.
Enable Authentication	Enable this if your SMTP server requires authentication. Please refer to your email provider's help information for related SMTP settings.
Account Name	Enter your SMTP account name.
Password	Enter your SMTP account password.

E-mail Settings

Enable E-mail Notification: ☒

From E-mail Address:

To E-mail Address:

SMTP Server Address:

SMTP Server Port:

Enable Authentication: ☒

Account Name:

Password:

E-mail Log When Full or On Schedule

Send When Log Full: ☒

Send on Schedule: ☒

Schedule:

Always Enable

E-mail Log When Full or On Schedule	
Send When Log Full	If enabled, this option will set the device to send the log when the log buffer is full. The email account for sending logs is configured in the above section.
Send on Schedule	If enabled, this option will set the router to send the log according to a set schedule periodically, so the administrator is always up to date on the operation of the router. The email account for sending logs is configured in the above section.
Schedule	If you enable Send On Schedule, use the drop-down menu to select a schedule to apply. The schedule may be set to Always Enable, or you can create your own schedules on the Schedule page. Refer to Time & Schedule - Schedule on page 73 for more information.
Click Save when you are done.	

System Admin Admin


This page will allow you to change the administrator (Admin) password and enable the HTTPS service. Go to **Management > System Admin**. To configure the System settings, click the **System** tab. Refer to **System** on page 78.

Admin Password

Password Enter a new password for the administrator account. You will need to enter this password whenever you configure the router using a web browser or add the router to EAGLE PRO AI.

Advanced Settings - Administration

- Enable HTTPS Management** Enable router management using an encrypted HTTP connection.
- Enable HTTPS Remote Management** Enable remote management over the Internet. Turn on the **Use HTTPS** option below if encrypted communication should be enforced.
- Remote Admin Port** The port number used for accessing the device's web management interface. The default is 8081.
- Use HTTPS** If this is enabled, you must use an encrypted connection to access the web management interface via Hypertext Transfer Protocol Secure (HTTPS).

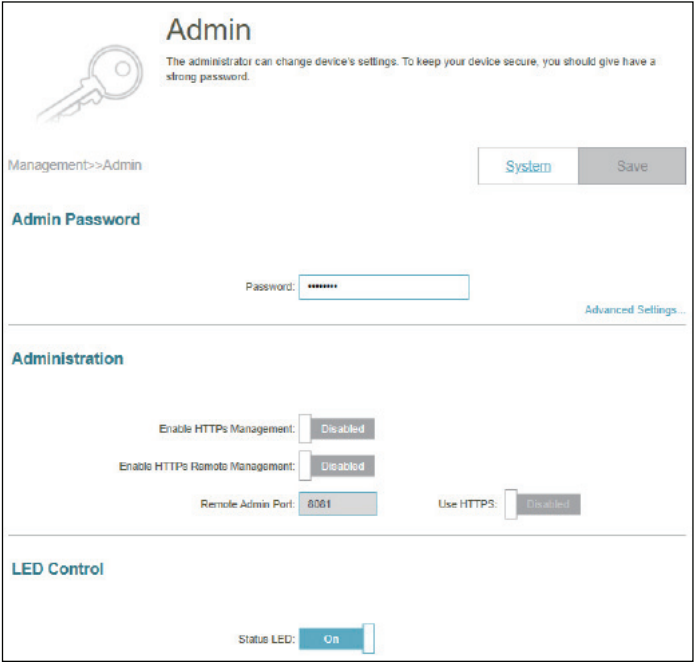

Admin (Continued)

Advanced Settings - LED Control

Status LED Choose to enable or disable the status indicator LED. When disabled, the LED will no longer light up solid white during normal operation and will instead turn off.

The LED will still light up in the corresponding color and mode with respect to the following circumstances:

Conditions	LED Behavior
Firmware upgrade	Flashing orange & white alternately
Device reboot	Solid red
Establishing a WPS connection	Flashing white
Weak uplink signal	Flashing white
No uplink signal	Flashing orange

Click **Save** when you are done.



System

This page will allow you to back up or restore settings from a previous backup. It also allows you to set up a reboot schedule for automatic reboot. Go to **Management > System Admin**, then click **System** to access this page.

System

Save Settings To Local Hard Drive

Click **Save** to download a backup of your current configuration settings to your local hard drive. This backup can later be used to restore your settings.

Load Settings From Local Hard Drive

Click **Select File** to browse your local hard drive for a configuration file to restore your configuration settings from. Once selected, click **Restore** to apply the settings from the configuration backup.

Restore To Factory Default Settings

Click **Restore** to restore all configuration settings back to the settings that were in effect at the time the device was shipped from the factory. Any settings that have not been saved will be lost, including any rules that you have created.

Auto Reboot Configuration



Reboot the Device

Click the **Reboot** to reboot the device immediately.

Auto Reboot

Use the drop-down menu to select a schedule for the device to reboot automatically. The schedule may be set to **Never**, **Daily**, or **Weekly**. Depending on your selection, choose the start time and a day of the week for the auto reboot schedule.

Click **Save** when you are done.

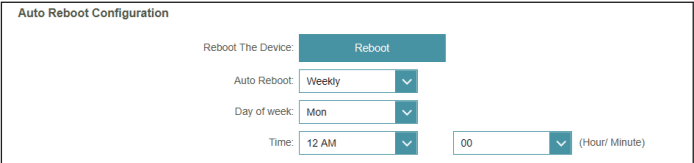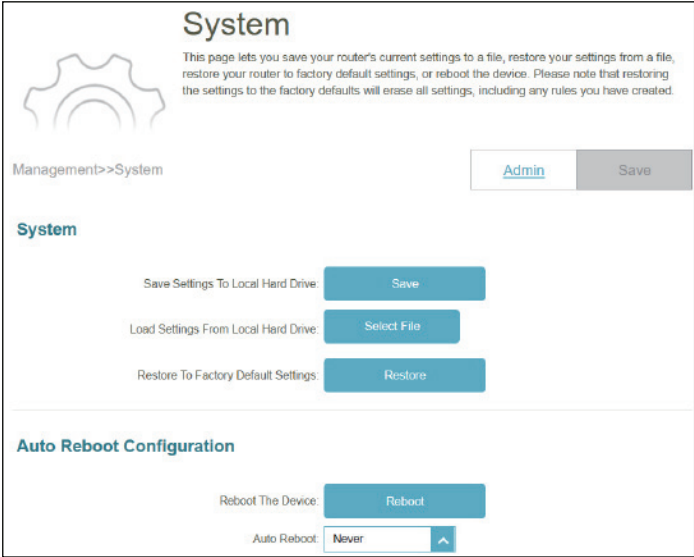

User

Go to **Management > User**. The User page is used to create, manage, and delete user accounts with VPN connection permission.

If you wish to remove a user, click  in the Delete column. If you wish to edit a user, click  in the Edit column. If you wish to create a new user, click the **Create User** button.




To create a user, click **Create User** and configure the following:

- User Name** Enter a username for the new user account.
Maximum length: 20 characters. Note that symbols are not allowed.
- Password** Enter a password for the new user account.
The password must contain 8 to 15 characters and must contain both letters and numbers.

VPN	
Status	Enable or disable Virtual Private Network (VPN) functionality for this user.

A maximum of 9 users (not including the Admin) can be created. Click **OK** to close the screen.

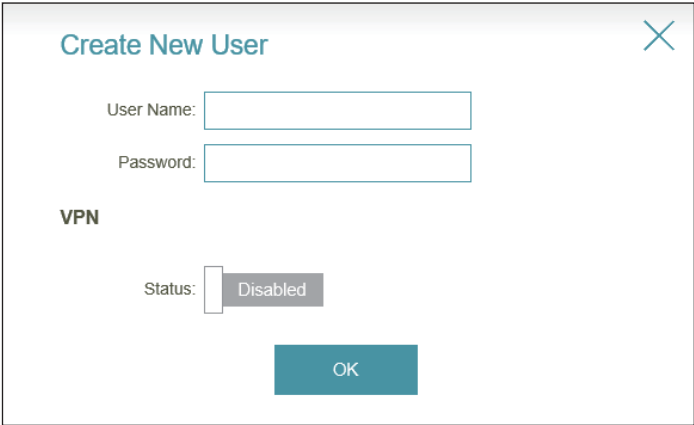

Upgrade

This page allows you to upgrade the router's firmware, either automatically or manually. To manually upgrade the firmware, you must first download the firmware file from <http://support.dlink.com>. Go to **Management > Upgrade** to access this page.

Firmware Information

- Master** Displays the name of the master router.
- Current Firmware Version** Displays the current firmware version for both the main router as well as the extenders.
- Check for New Firmware** Click this button to prompt the router to check for a new firmware version automatically for both main router and extenders. Click **Upgrade Firmware** to download and install the new firmware if a newer version is found.
Please do not close the browser while the firmware is being downloaded!


Warning: Please do not close the web browser or unplug the power during the upgrade process. Interrupting software upgrade will result in malfunction of the device.

Automatic Firmware Upgrade

- Automatic Upgrade** If enabled, the router will automatically upgrade to the newest firmware. The system will automatically upgrade to the latest firmware every day at 3:30-4:00 AM.
- Choose Upgrade Time** Enable this function to set the device to automatically upgrade its firmware at a set time every day.
- Upgrade Time** Configurable if **Choose Upgrade Time** is enabled. Set the hour and minute to automatically upgrade the device.

Advanced Settings - Upgrade Manually

- Device Name** Select the device in the mesh network for manual update.
- Select File** To upgrade manually, first download the firmware file, then click the **Select File** button and locate the file to install the new firmware.

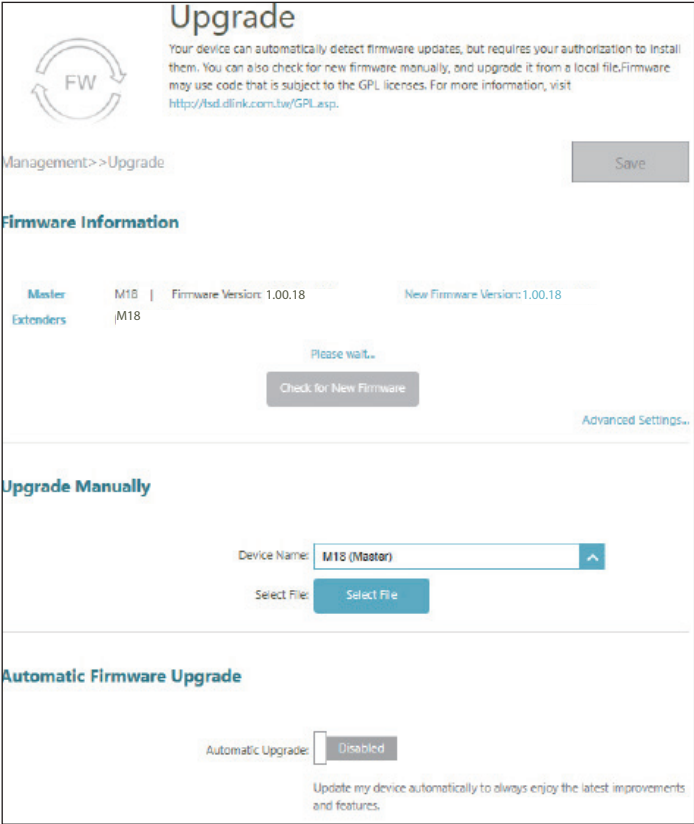


Statistics

Go to **Management > Statistics**. On the Statistics page you can view the amount of packets that pass through the the Internet and LAN interfaces as well as the traffic from Wi-Fi 2.4 GHz and Wi-Fi 5GHz networks.

Router

You can view the **Internet**, **LAN**, **Wi-Fi 2.4 GHz**, or **Wi-Fi 5 GHz** by clicking the respective tab at the top. The real-time graph of network traffic in KB/s will be shown. The table below for each interface and radio frequency shows the total number of packets and data that are sent and received through the interface. The traffic counter will reset if the device is rebooted.

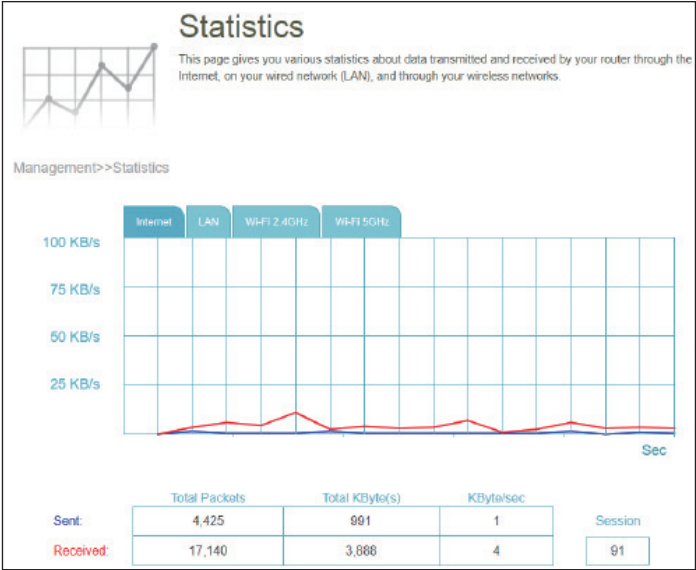

Adding Additional Mesh Points

The M18 is a scalable solution for your whole-home wireless network. You can add additional mesh points with our EAGLE PRO AI series mesh routers and extenders at any time to increase coverage in your home whenever you need to. Adding more mesh points is quick and convenient using the guided setup with the EAGLE PRO AI app.


Using the EAGLE PRO AI App

Refer to **Hardware Setup** on page **6** for instructions on app installation. Then use the following procedure to add mesh devices in your network.

Note: *The screenshots may be different depending on your mobile device's OS version. However, the process is the same.*

Step 1

Open EAGLE PRO AI, tap the main router, then tap + at the top right to add a new device.

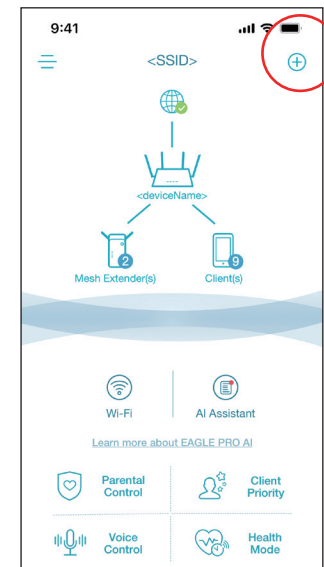


Step 2

The **Scan the Setup code** screen appears. Scan the QR code to be guided through a step-by-step process for setting up the new mesh point. Simply follow the on-screen steps to complete the installation process as the following steps illustrate. Repeat this process to add additional mesh points.



Step 3


Tap **Extend My Network** to extend the mesh network.

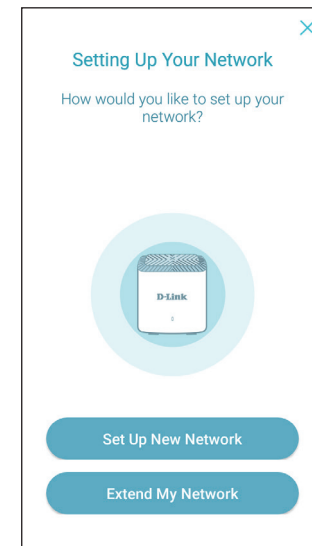

Step 4
Tap **Extend** to continue.




Step 5
Connect your mobile device to your home network that you wish to extend.

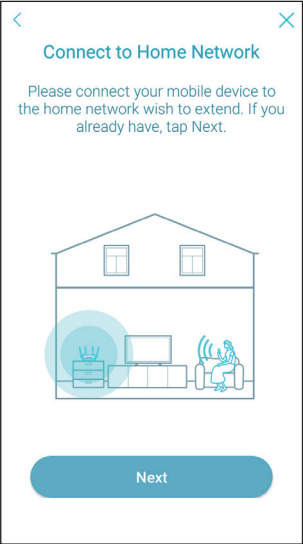


Step 6

Select either **Wirelessly** or **Wired** to extend the mesh network wirelessly or with Ethernet cables.

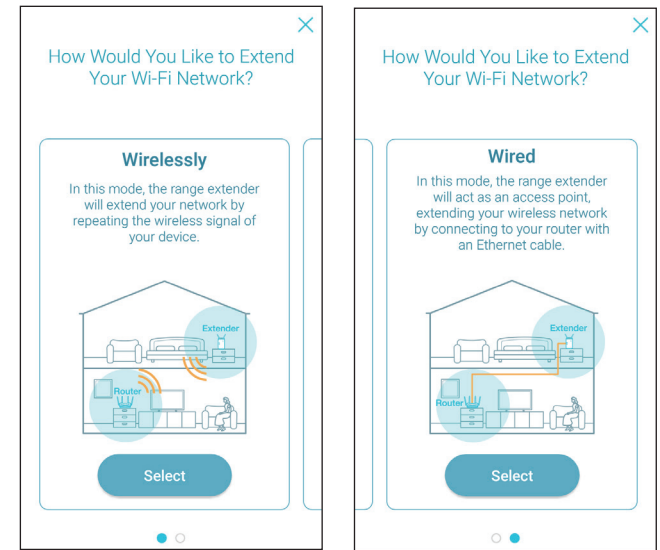


Step 7

Depending on your selection above, follow the on-screen instruction to place your device for connecting with the main router.

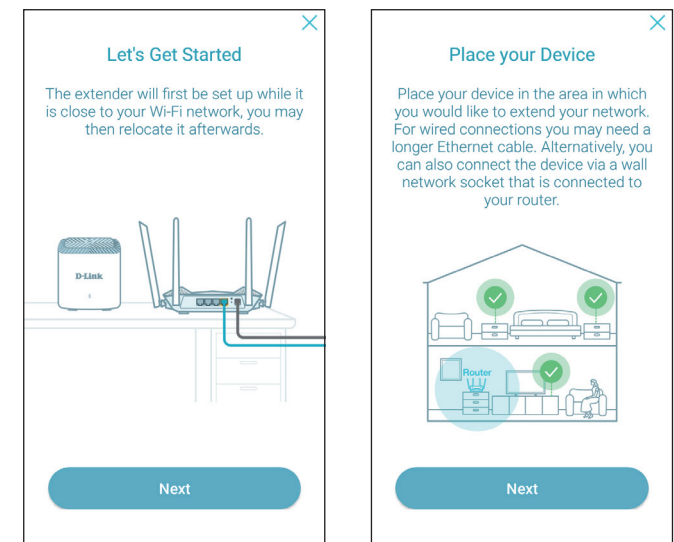


Step 8

Power on your device and wait for the device's status LED turns solid red, then tap **Next**.

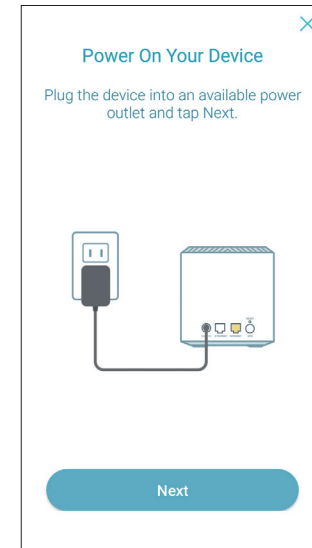


Step 9

Tap **Next** when the status LED flashes orange.

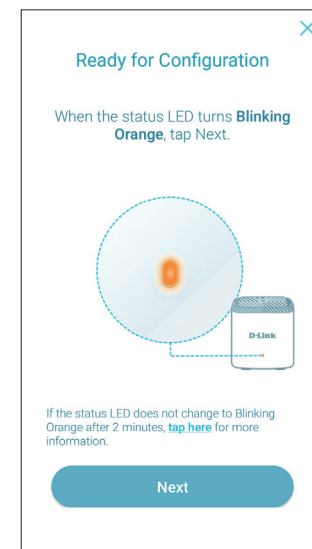

Step 10

Connect your mobile device to the indicated default Wi-Fi network of your device.

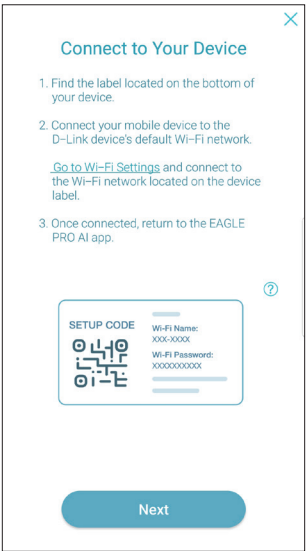


Step 11

Enter the Device Password printed on the device label on the bottom of the device, then tap **Next**.



Step 12

Place your device in the area where you want extended coverage.

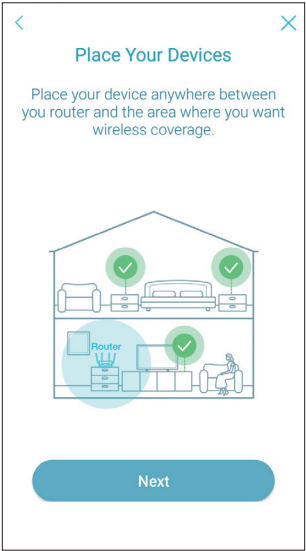

Step 13

The additional mesh point is set up successfully.



EAGLE PRO AI

With EAGLE PRO AI on your smart devices, you can get the M18 up and running quickly. Just plug in the router, open the app and build your home network by following the easy instructions on the screen. The new EAGLE PRO AI is especially designed to ease your management work with the following features:

AI Wi-Fi Optimizer: Enable this feature to always connect to the cleanest Wi-Fi Channel using the breakthrough beamforming technology and receive information about automatic optimization for continuous improvement in the Wi-Fi environment.


AI Traffic Optimizer: The QoS engine controls traffic flows according to assigned priorities to improve the overall user experience. It also generates data about Internet usage.

AI Assistant: The message center reports the overall Wi-Fi condition and Internet traffic volume as well as high Internet usage at night in the weekly report. Moreover, every improvement made by the Wi-Fi Optimizer will also be recorded to inform administrators about conditions of the wireless environment.

AI Parental Control: The Parental Control provides the highest flexibility of Internet accessibility control and website filtering. It allows administrators to control the availability of Internet access on individual devices during the designated time periods.


AI Wi-Fi Optimizer:

To enable this function, open the app. From the home screen, tap **Wi-Fi** and tap  . Then tap the slider for **AI Wi-Fi Optimizer**. Turn on Wi-Fi Optimizer to have your wireless connection adopting an interference-free channel automatically and receive weekly Wi-Fi environment reports every Monday at 8 AM local time.

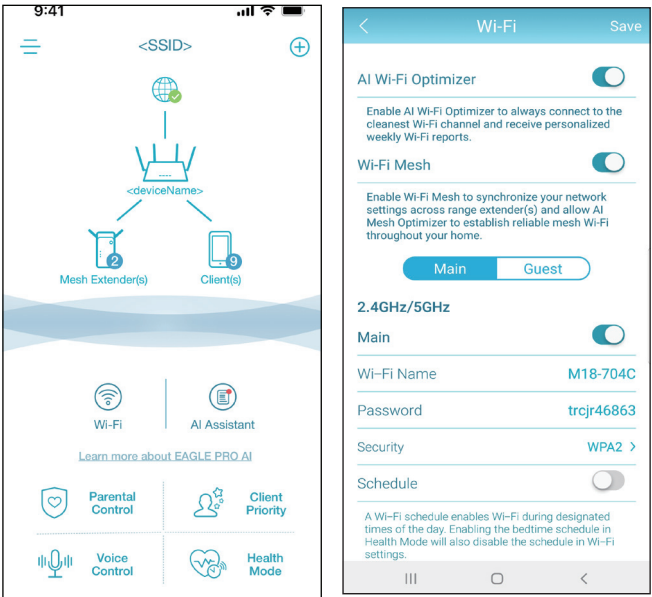

AI Traffic Optimizer:

To enable this function, open the app. From the home screen, tap the main router, scroll down the **Device Info** screen to **Settings**, and tap **QoS**. Then tap the slider for **AI Traffic Optimizer**. Before you start the AI Traffic Optimizer, you can input the download and upload speeds to assist the QoS engine in distributing the bandwidth to prioritized clients. To prioritize clients, tap **Client Priority** from the **Home** screen. Tap a client device and assign a priority level with effective duration to this device. High priority devices running online games, video conferences, or other real-time programs will have the best access.

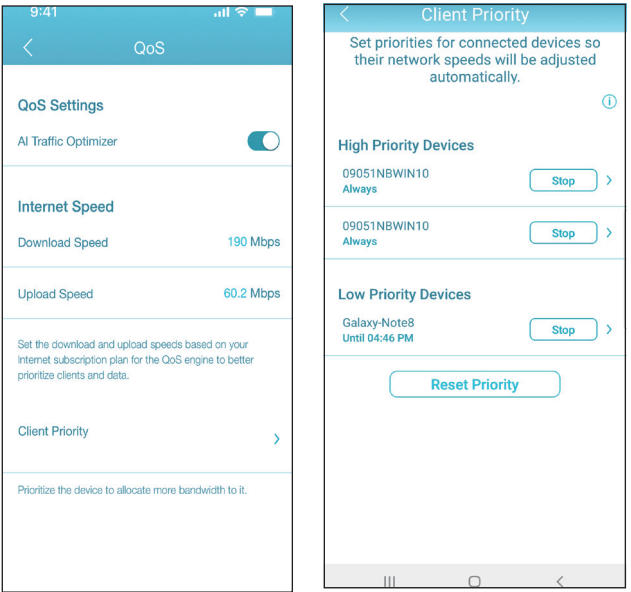


AI Assistant:

Tap **AI Assistant** to display weekly reports on Wi-Fi conditions. Weekly reports also inform you about automatic optimization in action when congestion occurs and provide qualitative rating on your Wi-Fi environment. In addition to Wi-Fi condition reports, the **Internet Traffic Report** informs you about the Internet data usage. The **Night Time Internet Activity Report** informs you about the overly active Internet access during nighttime.

This app enables you to improve sleep quality proactively by restricting Internet access during nighttime. Tap **Health Mode** from the Home screen to set the bedtime during which Internet access will be blocked on *all* devices within the network.

Note: The Bedtime scheduling also restricts local access by disabling Wi-Fi connectivity. However, remote management through the Internet is allowed.

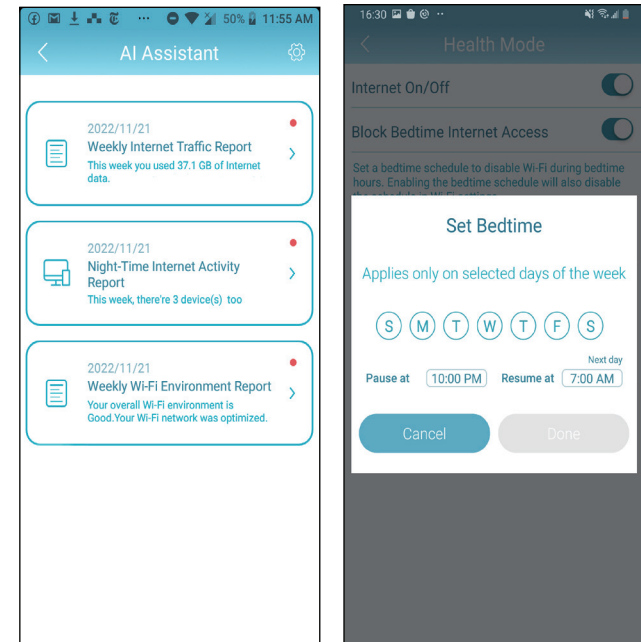

AI Parental Control:

To enable this function, open the app. From the home screen, tap **Parental Control**.





Then use the following procedure to add a new control profile:

1. Tap **Start**.
2. Name this profile. Then tap **Next** to continue.
3. Select client devices to which the profile will be applied.
4. Tap **Done** to proceed.
5. The profile summary will be displayed. On this page you can tap **Pause** to pause Internet immediately to the devices specified in the profile.

You can set schedules to restrict Internet access.

Use **Block Bedtime Internet Access** to block Internet access during the specified days with time periods. Up to two schedules can be defined. Use **Allow Scheduled Internet Access** to allow Internet access only during the specified days and times. Users cannot access the Internet except during the hours that you specify. Note that bedtime restriction takes precedence over the allowed schedules here. A maximum of 12 profiles can be defined.

You can also block specific websites on this page to prevent the specified devices from accessing these websites. To do this, tap **Website Filter**, tap **Add Website**, then enter the website name and the domain keyword, for example, enter *violent.com* to block all access to this site and *violent* to block domain names that contain this keyword. Then tap **Add** at the top right.

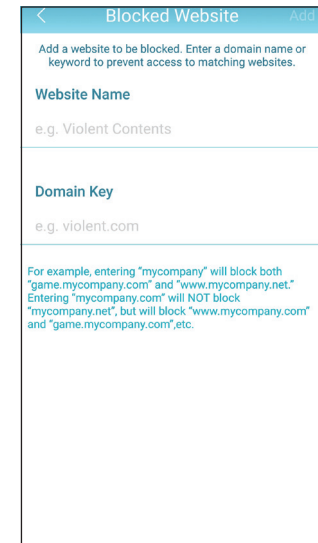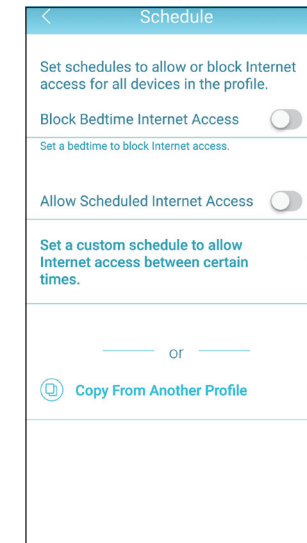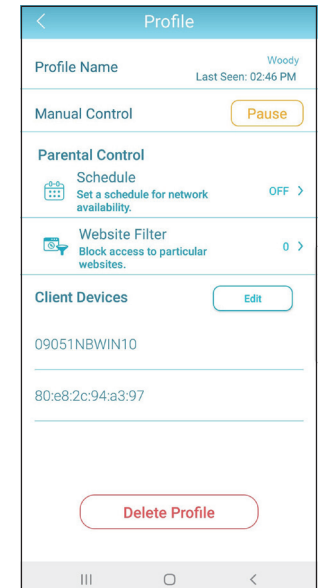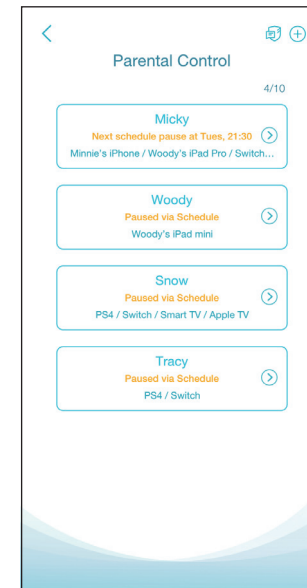

Other Features

Advanced Mode

The advanced mode provides links to the web management interfaces of the device. Note that this feature is only available with local access (i.e. connected within the same Wi-Fi network). To access, go to **Home > Advanced Mode**.

Device Information and Settings



From **Home**, tap the **device (main router)** of the mesh network topology to view its information and settings: name, IP and MAC address, hardware and firmware version, time zone, and model number. You can also configure the Internet connection method and change the device password on this page. It also provides basic device maintenance functions: reboot, LED indicator on/off, firmware update, and device identification with flashing LED.

Client Information and Statistics

From **Home**, tap the **device (Clients)** of the mesh network topology to view the clients currently online and blocked. Tap a device to obtain its information: name, IP and MAC address, and parental control profile. It also displays real-time traffic statistics as well as weekly traffic for information on both download and upload data transmissions for each day of the past week. The Priority function allows you to assign a High/Low priority for this device with effective duration: Always, 1 Day, 4 Hours, 2 Hours, 1 Hour.


Extender Information

From **Home**, tap the **device (Extenders)** of the mesh network topology to view the extenders currently connected with the following information: name, IP and MAC address, and hardware and firmware version. Tap **Clients** to view its currently connected clients. You can also identify the device by flashing an LED indicator and restart the device on this screen.

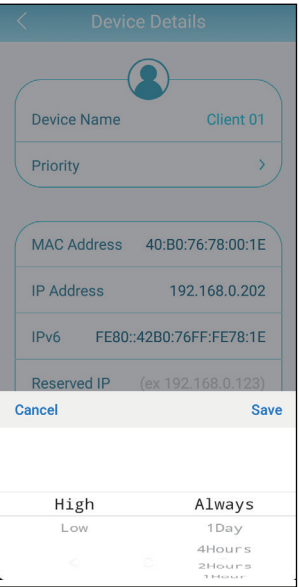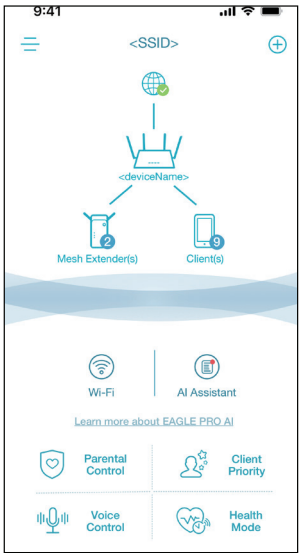

Voice Control

With the M18, you can command your router’s functionality with your voice through Amazon Alexa and the Google Assistant, enabling you to control your network with voice commands. Features include enabling and disabling your Wi-Fi guest zone without logging in to the web interface, rebooting the router, and checking your router for firmware upgrades. In order to use third-party services to control and manage your device, please register your device with D-Link Cloud Service first (refer to **Using the EAGLE PRO AI App** on page 6 and **D-Link Cloud** on page 54).

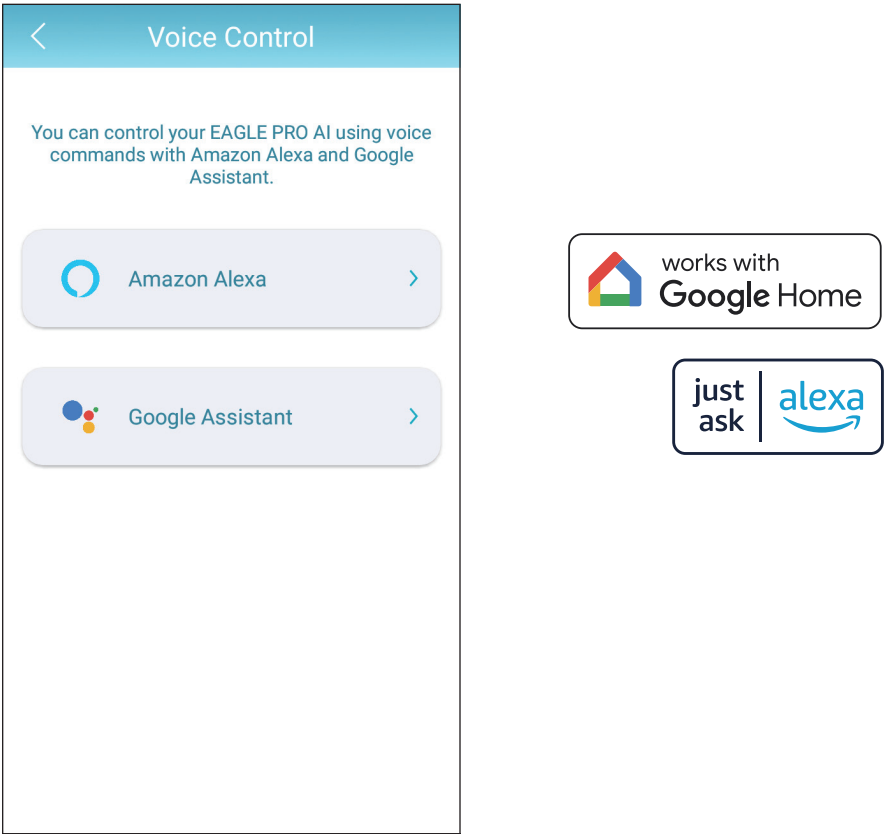

Link D-Link Cloud Service to Other Services

Google Home Setup

In order to use third-party apps to control and manage your device, you will first need to link your registered D-Link account with apps such as Google Assistant or Amazon Alexa.


Step 1

Launch **EAGLE PRO AI** and sign in using your registered D-Link account, then go to the **Home** screen.




Step 2

Tap **Voice Control** from the **Home** screen.

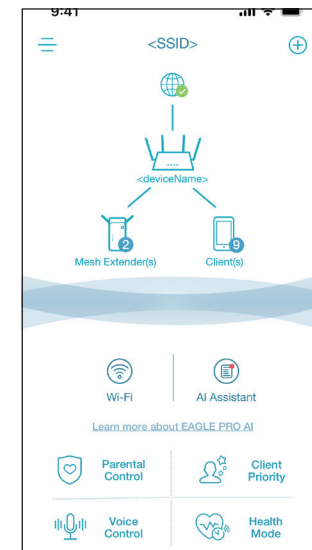


Step 3

Choose the cloud service (e.g. Google Assistant).

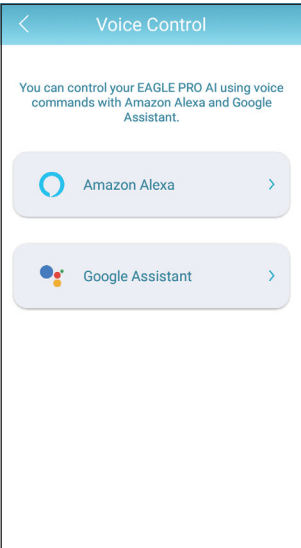


Step 4

Link with the Google Assistant.

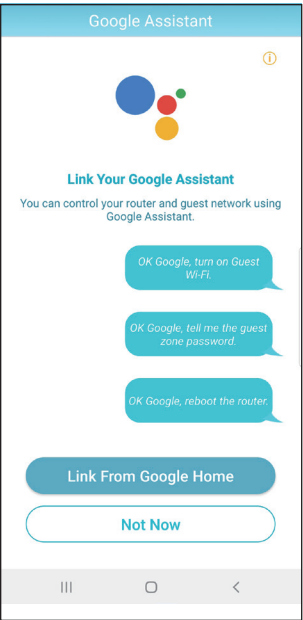

Step 5


The Google Home app will be launched or tap to open with Google Home.

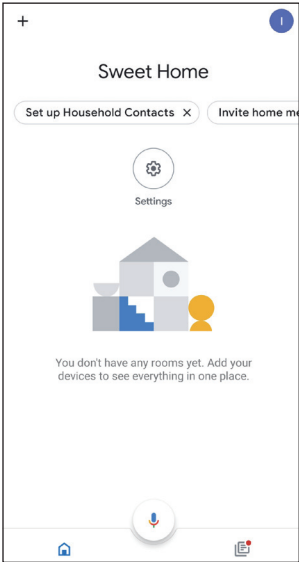

Step 6


Link your registered account with Google. Depending on your system, note that if the account link page does not display, please tap "+" at the top left from the above step to add the device manually:

Tap + **Set up device**, choose **Works with Google**, and search for EAGLE PRO AI. Then sign in using your registered D-Link account.

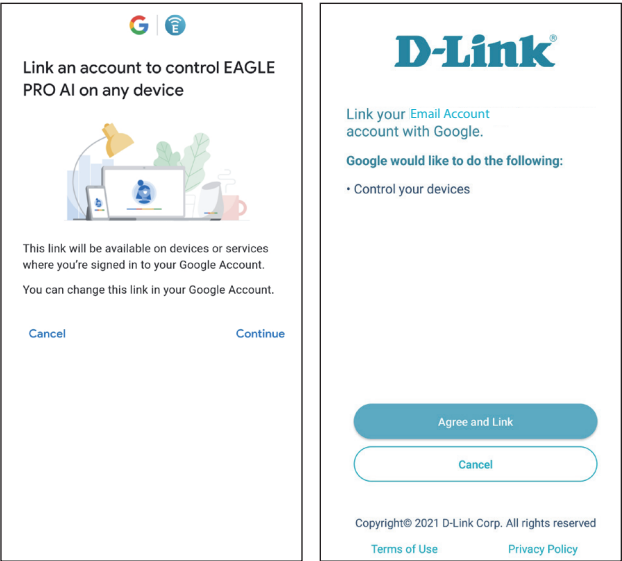


Step 7

Choose your device to add it as a smart home device.

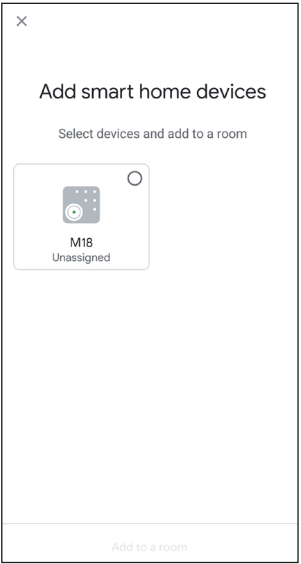


Step 8

Choose a home or add to a room.

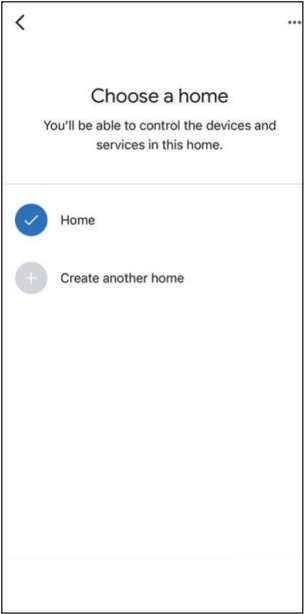


Step 9

Choose a location for your device.

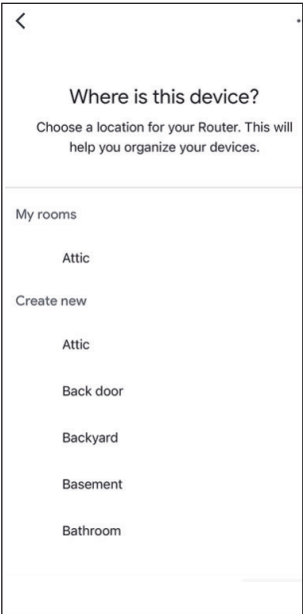

Step 10

Device is now successfully set up with the Google Home.

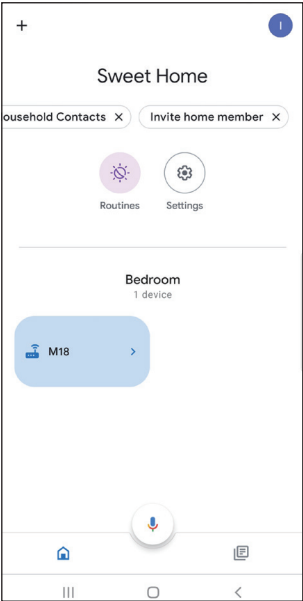

Amazon Alexa Setup

You will need the Amazon Alexa app, an Amazon account, and a D-Link account to use this feature.

Note: *The screenshots may be different depending on your mobile device's OS version. However, the process is the same.*

Step 1


Launch the **Amazon Alexa** app.




Amazon Alexa

Step 2


Tap **Browse Skills**.

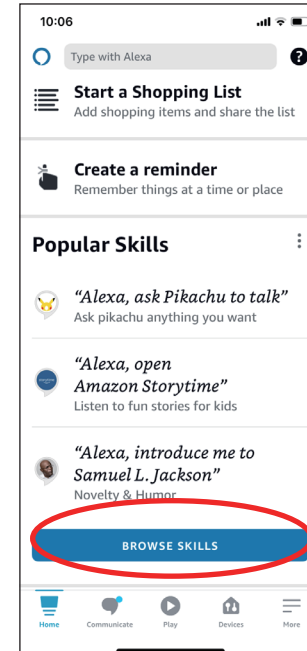

Step 3
Search EAGLE PRO AI for **Skills & Games**.

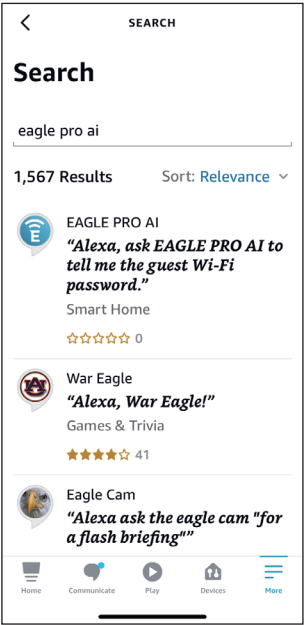


Step 4
The EAGLE PRO AI page.

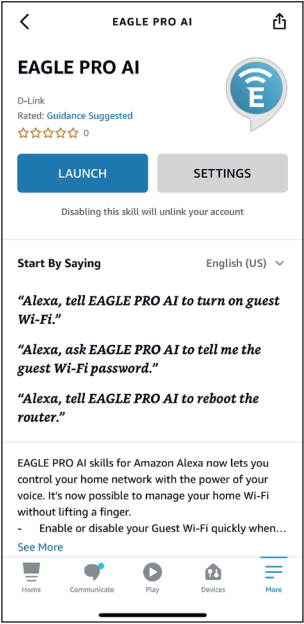


Step 5

Tap **LAUNCH** to link your D-Link account. Then enter your registered D-Link account.

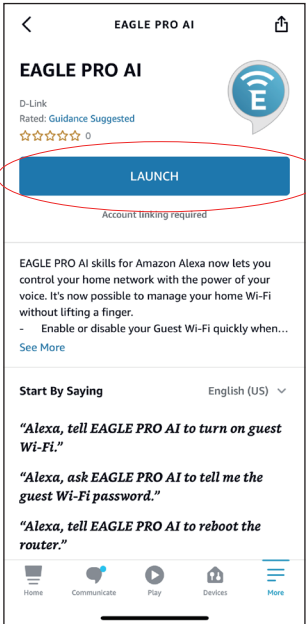

Step 6

Congratulations! **EAGLE PRO AI** has been successfully linked as a skill for your Amazon device. Refer to **Amazon Alexa Voice Commands** on the next page for tasks that you can ask your Amazon Alexa to perform.

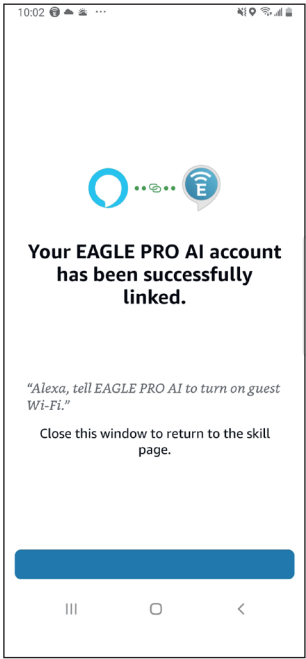

Amazon Alexa Voice Commands

With **EAGLE PRO AI** enabled as a skill for Alexa, you can ask Alexa to do any of the following tasks. Before commanding Alexa, say "Open EAGLE PRO AI" and respond to Alexa's offering by saying "Help."

Task	Command
Enable the guest Wi-Fi	"Enable my guest Wi-Fi."
Disable the guest Wi-Fi	"Disable my guest Wi-Fi."
Find out your Wi-Fi SSID	"What is my Wi-Fi SSID?"
Find out the guest Wi-Fi name and password	"What are my guest Wi-Fi credentials?"
Reboot the router	"Reboot my router."
Upgrade the router	"Upgrade my router."
Obtain weekly report messages	"Read messages."
Note: Network can be substituted for Wi-Fi.	

If using an Alexa speaker, start your command with one of the following:

1. "Alexa, ask EAGLE PRO AI to." For example, command Alexa by saying, "Alexa, ask EAGLE PRO AI to enable my guest Wi-Fi."
2. "Alexa, talk to EAGLE PRO AI" and wait for Alexa to respond. Then say your command.


Google Assistant Setup

You will need the Google Assistant app, a Google account, and a D-Link account to use this feature.

Note: The screenshots may be different depending on your mobile device's OS version. However, the process is the same.


Step 1

We will set up the pin code first for controls such as reboot and enable or disable guest Wi-Fi. Tap **Voice Control** from the **Home** screen of the EAGLE PRO AI app.

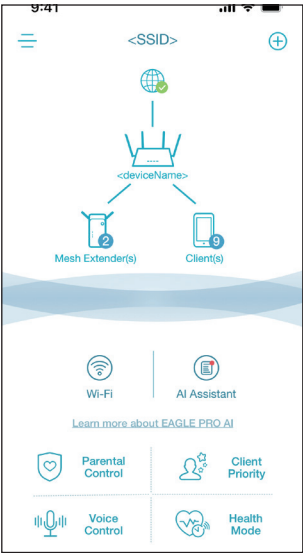

Step 2


Tap **Edit** to customize the pin code or use the randomly generated number.

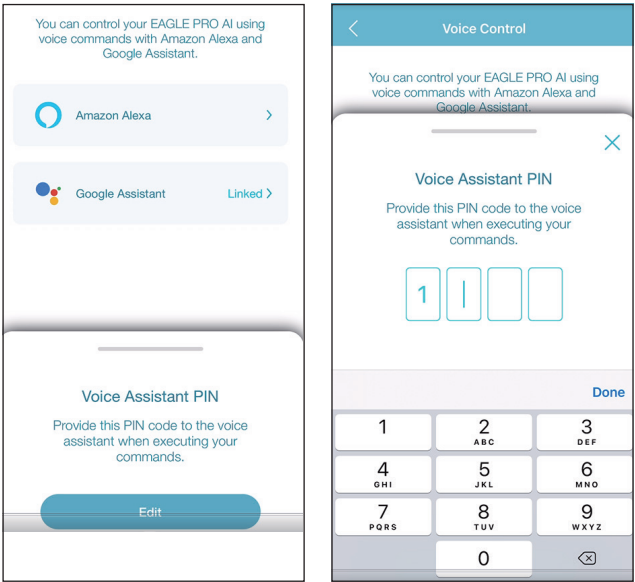

Step 3
Launch the **Google Assistant** app.



Step 4
Say or Type in your command and provide the pin code when being asked.
Refer to **Google Assistant Voice Commands** on the next page for tasks that you can ask your Google Assistant to perform.

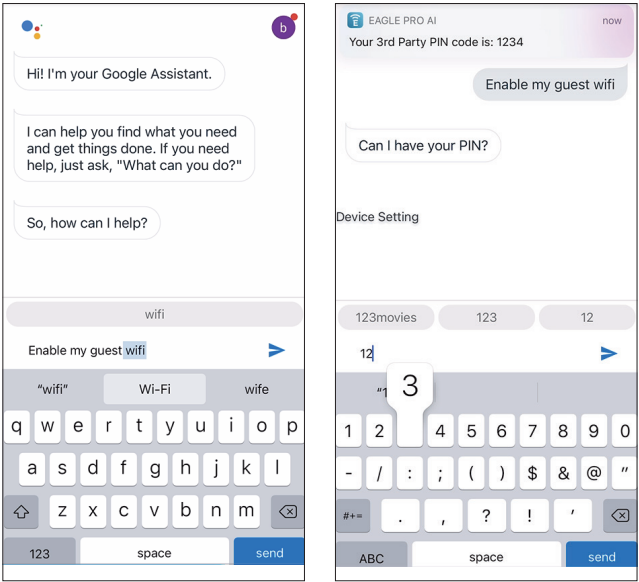

Google Assistant Voice Commands

With **EAGLE PRO AI** linked with the Google Assistant, you can ask your Google Assistant to do any of these tasks:

Task	Command
Check guest Wi-Fi status	"Is my guest Wi-Fi enabled?" ²
Check Wi-Fi status	"Is my Wi-Fi enabled?" ²
Check guest Wi-Fi SSID	"What is my guest Wi-Fi SSID?" ²
Check Wi-Fi SSID	"What is my Wi-Fi SSID?" ²
Enable the guest Wi-Fi	"Enable my guest Wi-Fi." ²
Disable the guest Wi-Fi	"Disable my guest Wi-Fi." ²
Find out the guest Wi-Fi password	"What is my guest Wi-Fi password?" ^{1,2}
Reboot the router	"Reboot my router."
Update the router	"Software update my router."
Notes: 1. Only supported on Nest Hub with screen display. 2. Network can be substituted for Wi-Fi.	

If using a Google Home speaker, start your command by saying "Hey Google."

Connect to a Wireless Client

WPS Button

The easiest way to connect your wireless devices to your Wi-Fi network is with WPS (Wi-Fi Protected Setup). Most wireless devices such as wireless adapters, media players, Blu-ray DVD players, wireless printers, and cameras will have a WPS button that you can press to connect to the mesh point. Please refer to your user manual for the wireless device you want to connect to make sure you understand how to enable WPS. After consulting your device's manual, follow the steps below:

Step 1 - Press the WPS button on the nearest mesh point for about 1 second. The Status LED on the front will start to blink white.



Step 2 - Within 120 seconds, press the WPS button on your wireless device (or launch the software utility and start the WPS process).

Step 3 - Allow up to 1 minute for your connection to be configured. Once the LED stops blinking, you will be connected and your wireless connection will be encrypted with WPA2, the default Wi-Fi security mode.




Windows 11/10

VPN Setup Instructions

This section provides Quick VPN setup instructions for Windows 11/10. Refer to **Quick VPN on page 71** for your router setup instructions.

This section provides Quick VPN setup instructions for Windows 11/10.

Click **Start > Settings > Network & Internet > VPN > Add a VPN Connection**. (or **Start > Settings > Network & Internet > VPN > Add VPN** for Windows 11.)

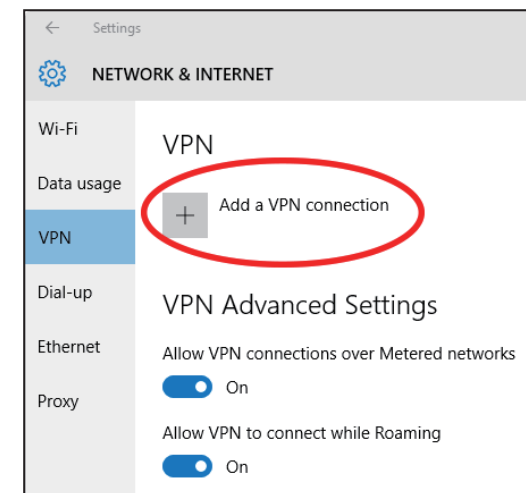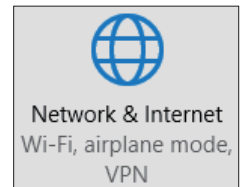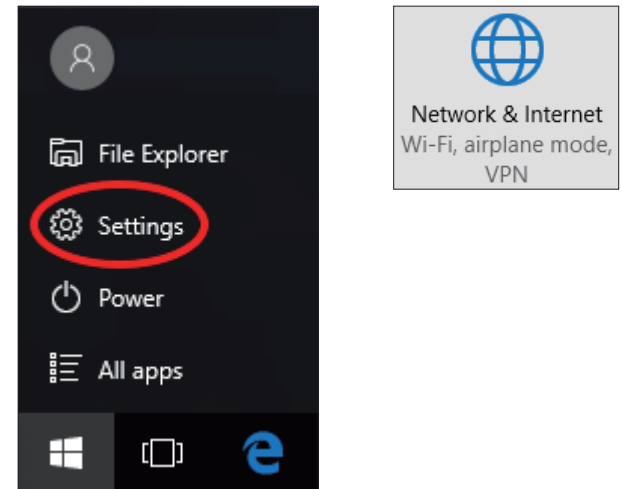

On the **Add a VPN connection** screen, do the following:

- ➊ Select **Windows (built-in)** from the **VPN Provider** menu.
- ➋ Create a name for your VPN connection.
- ➌ Enter your **IP/DDNS address** of your Quick VPN server.
- ➍ Select **L2TP/IPSec with pre-shared key** for **VPN type**.
- ➎ Enter the **Pre-shared key**.
- ➏ Select **User name and password** from **Type of sign-in info**.
If you would like windows to remember your sign-in information, enter your **User name, Password**, and select **Remember my sign-in info**
- ➐ Choose **Save**.

Your Windows 11/10 system is now configured to connect to your Quick VPN server.

Add a VPN connection

VPN provider
➊ Windows (built-in)

Connection name
➋ Quick VPN

Server name or address
➌ IP/DDNS Address of Quick VPN Server

VPN type
➍ L2TP/IPsec with pre-shared key

Pre-shared key
➎ Passkey

Type of sign-in info
➏ User name and password

User name (optional)
Username

Password (optional)
.....

☒ Remember my sign-in info



➐ Save Cancel

Connect or Disconnect

To connect to or disconnect from your Quick VPN server, click on the **Network** icon (either  or ) in the notification area of the Windows taskbar and click on your Quick VPN connection.

The section of VPN in **Network & Internet Settings** page will open, select your Quick VPN, then select **Connect**. Or if the Connect button shows under the VPN connection, select **Connect**.

If connected, the VPN connection name will display **Connected** underneath it. You can click **Disconnect** to stop the connection.

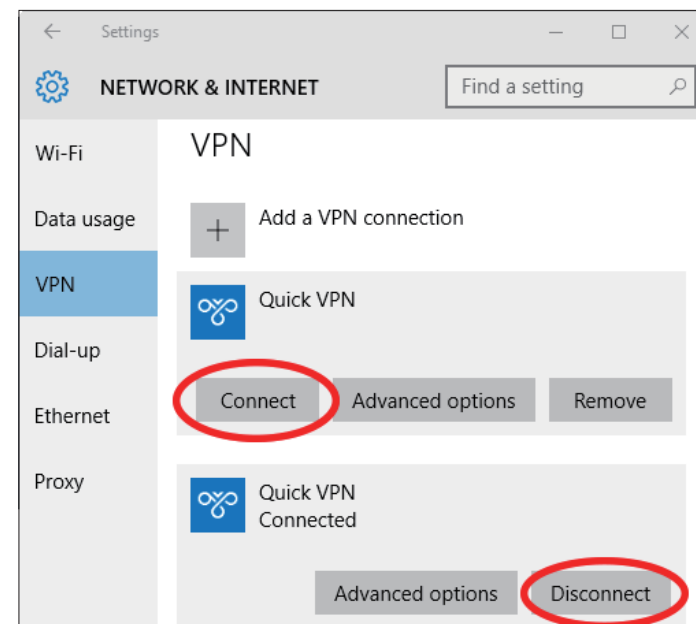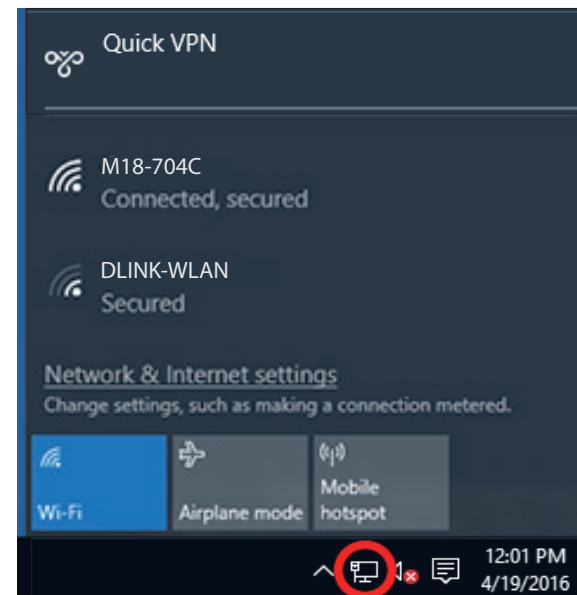


Android

VPN Setup Instructions

This section provides Quick VPN setup instructions for Android devices. Your device's screens may vary. Refer to **Quick VPN on page 71** for your router setup instructions.



Go to **Settings > Network & Internet > VPN** (or **Settings > Connections > More connection settings > VPN**).

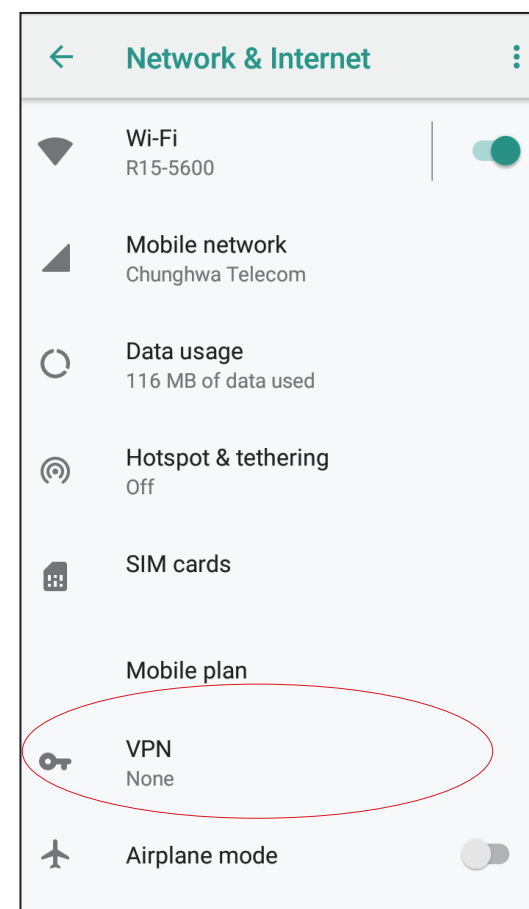

Tap **+** to create or **VPN Settings** to edit a VPN Network


- 1 Enter a name for your VPN connection.
- 2 Select **L2TP/IPSec PSK** for **Type**.
- 3 Enter the **IP/DDNS address** of your Quick VPN server.
- 4 Enter your **pre-shared key** in **IPSec pre-shared key** field.
- 5 Choose **Save**.

Your Android device is now configured with a VPN profile.

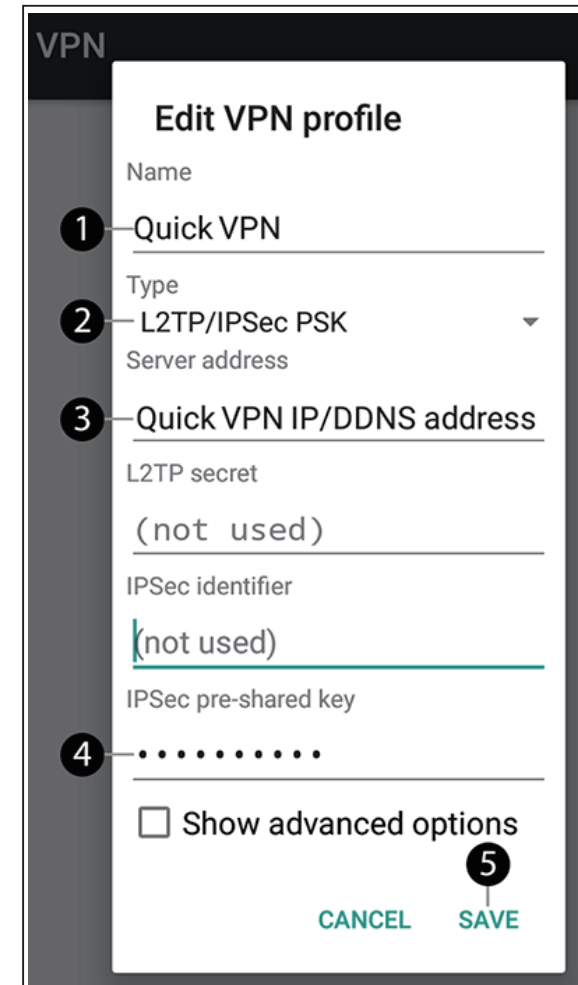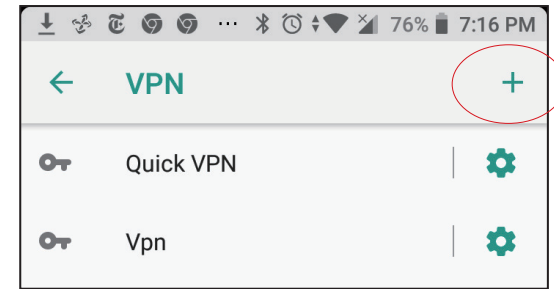

Connect or Disconnect

Tap the **Quick VPN** connection you created.

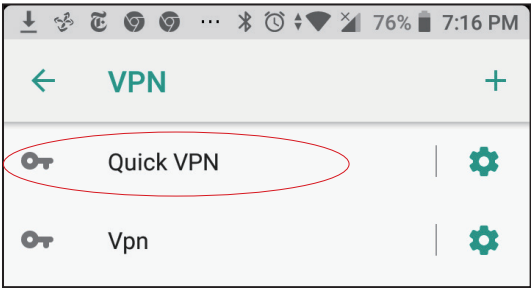

To connect, enter your **Username** and **Password**, then tap **CONNECT**.

Connect to Quick VPN

Username

Your Quick VPN Username

Password

.....

☐ Save account information

CANCELCONNECT

To disconnect, tap **DISCONNECT**.

VPN is connected

Session: Quick VPN

Duration: 00:00:09

Sent: 97 bytes / 5 packets

Received: 64 bytes / 4 packets

DISCONNECTCANCEL

Mac OS X



VPN Setup Instructions

This section provides Quick VPN setup instructions for OS X using the **Export** Profile function. Refer to **Quick VPN on page 71** for your router setup instructions.


Open the exported profile. The Install Profile dialogue will appear; click **Continue** and **Install**.

Enter your user account password when prompted. Close the **Profiles** dialogue.

Go to **Apple > System Preferences... > Network** and select the Quick VPN connection and click **Authentication Settings**.

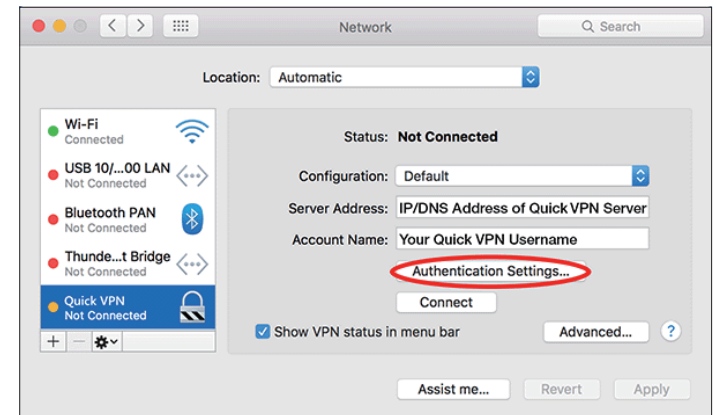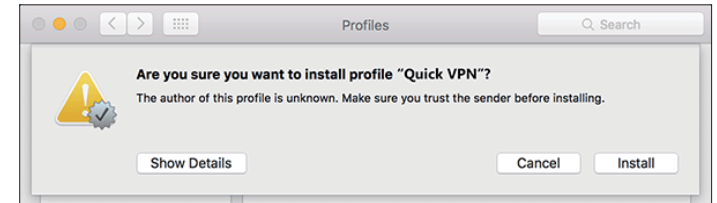

Enter your **pre-shared key** in the **Shared Secret** text box and click **OK, Apply**, then **OK**.

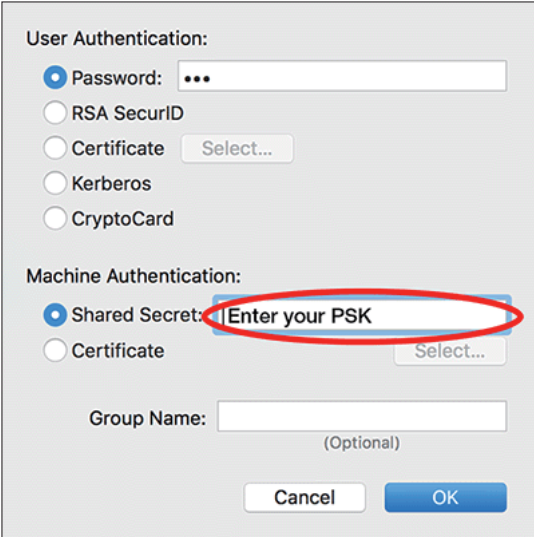

The image shows a VPN configuration dialog box with two main sections: "User Authentication" and "Machine Authentication".

User Authentication:

- ☒ Password: [text box with three dots]
- ☐ RSA SecurID
- ☐ Certificate [Select...]
- ☐ Kerberos
- ☐ CryptoCard

Machine Authentication:

- ☒ Shared Secret: [text box containing "Enter your PSK" which is circled in red]
- ☐ Certificate [Select...]

Group Name: [text box]
(Optional)

Buttons: Cancel, OK

Your Mac is now configured to connect to your Quick VPN server.

Connect or Disconnect

To connect to or disconnect from your Quick VPN server, go to **Apple > System Preferences... > Network**.

Select the Quick VPN connection and click on the **Connect** or **Disconnect** button.




iOS Devices


VPN Setup Instructions

This section provides Quick VPN setup instructions for iOS devices. Refer to **Quick VPN on page 71** for your router setup instructions.

Go into **Settings** on your compatible iOS device.
Scroll to and tap **General**.
Scroll to and tap **VPN**.

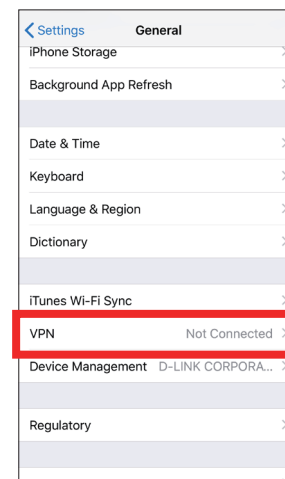

Tap **Add VPN Configuration...**

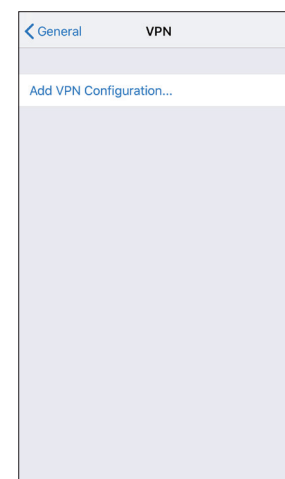

You should see a pop-up window asking you to fill out the details of your VPN connection.

Type: Choose **IPSec**. Tap **Back** to return to the Add Configuration page.

Description: For reference purposes only, used to differentiate between multiple VPN connections.

Server: Enter the IP/DDNS address of your Quick VPN server.

Account: Enter the Username used to authenticate login to the VPN server

Password: Enter Password used to authenticate login to the VPN server

Secret: Enter your Pre-Shared Key (PSK).

Tap **Done** to close the configuration window.

Your iOS device is now configured with a VPN profile.

CancelQuick VPNDone

TypeIPsec

DescriptionQuick VPN

ServerIP/DDNS_address_of_QuickVPN

Accountvpn

Password●●●

Use Certificate☐

Group Name

Secret●●●●●●

PROXY



Off

Manual


Auto

Connect or Disconnect

To connect or disconnect from to your Quick VPN server, go to **Settings** > **VPN** and tap the button next to **VPN Status**.

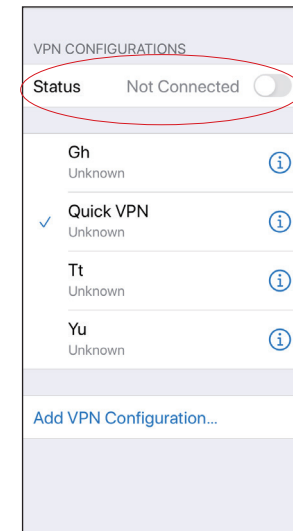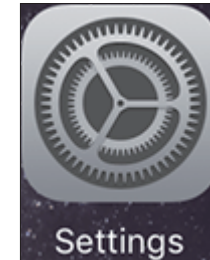

The VPN icon will appear in the notification area at the top of your screen indicating that your device is currently connected to the Quick VPN server.

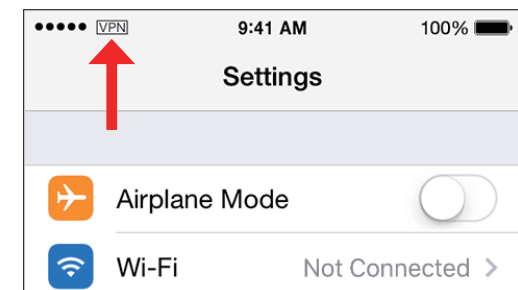

Troubleshooting

This chapter provides solutions to problems that can occur during the installation and operation of the router. Read the following descriptions if you are having problems.

1. Why can't I access the web-based configuration utility?

When entering the IP address of the D-Link router (**192.168.0.1** for example), you are not connecting to a website, nor do you have to be connected to the Internet. The device has the utility built-in to a ROM chip in the device itself. Your computer must be on the same IP subnet to connect to the web-based utility.

- Make sure you have an updated Java-enabled web browser. We recommend the following:
 - Microsoft Edge®
 - Mozilla Firefox 28 or higher
 - Google™ Chrome 28 or higher
 - Apple Safari 6 or higher
- Verify physical connectivity of the power adapter and network cable by checking the LED indicators of the device.
- Disable any Internet security software running on the computer. Software firewalls such as ZoneAlarm, BlackICE, Sygate and Norton Personal Firewall may block access to the configuration pages. Check the help files included with your firewall software for more information on disabling or configuring it.
- Access the web configuration. Open your web browser and enter the IP address of your D-Link router in the address bar. This should open the login page for your web configuration.
- If you still cannot access the configuration, unplug the power to the router for 10 seconds and plug back in. Wait about 30 seconds and try accessing the configuration. If you have multiple computers, try connecting using a different computer.

2. What can I do if I forgot my password?

If you forgot your password, you must reset your router. This process will change all your settings back to the factory defaults.

To reset the router, locate the reset button (hole) on the rear panel of the unit. With the router powered on, use a paperclip to hold the recessed button down until the Status LED turns red. Release the button and the router will go through its re-boot process. Wait about 30 seconds to access the router. The address of the web configuration is printed on the device label on the bottom of the device. You may also enter the default IP address: **192.168.0.1**. When logging in, enter the default device password printed on the device label too.

Wireless Basics

D-Link wireless products are based on industry standards to provide easy-to-use and compatible high-speed wireless connectivity within your home, business or public access wireless networks. D-Link's new EAGLE PRO AI products allow you to conveniently and reliably access your network with Wi-Fi 6 mesh system for improved coverage and speeds. Furthermore, you will be able to enjoy the efficacy of network management that AI-empowered Internet traffic and Wi-Fi environment optimization delivers.

A wireless local area network (WLAN) is a cellular computer network that transmits and receives data with radio signals instead of wires. Innovative ways to utilize WLAN technology are helping people to work and communicate more efficiently. The most recent Wi-Fi 6 has substantial gains over previous generations in speeds and encryption strength. It achieves faster speeds by communicating with multiple clients more efficiently through techniques such as Orthogonal Frequency Division Multiple Access (OFDMA) and Overlapping Basic Service Sets (OBSS). OFDMA improves channel utilization while OBSS eliminates network congestion.

Wireless users can use the same applications they use on a wired network. To enjoy the mobility of wireless network more safely in office environments and public areas such as airports, shops and universities, Wi-Fi Protected Access (WPA) security method is commonly employed. It uses a passphrase or key to authenticate your wireless connection. The advanced WPA3 implements the most robust password mechanism via Simultaneous Authentication of Equals (SAE). The Simultaneous Authentication of Equals (SAE) of WPA3 enhances the protection against dictionary attacks.

Under many circumstances, it may be desirable for mobile network devices to link to a conventional Ethernet LAN in order to use servers, printers or an Internet connection supplied through the wired LAN. A combination of Eagle Pro AI series router and extenders provides this links and whole-house coverage with significantly faster speeds .

How does wireless work?

Wireless works similarly to how cordless phones work, through radio signals that transmit data from one point A to point B. But wireless technology has restrictions as to how you can access the network. You must be within the wireless network range area to be able to connect your computer. There are two different types of wireless networks: Wireless Local Area Network (WLAN), and Wireless Personal Area Network (WPAN).

Wireless Local Area Network (WLAN)

In a wireless local area network, a device called an Access Point (AP) connects computers to the network. The access point has a small antenna attached to it, which allows it to transmit data back and forth over radio signals. With an indoor access point the signal can travel up to 300 feet. With an outdoor access point the signal can reach out up to 30 miles to serve places like manufacturing plants, industrial locations, university and high school campuses, airports, golf courses, and many other outdoor venues.

Wireless Personal Area Network (WPAN)

Bluetooth is the industry standard wireless technology used for WPAN. Bluetooth devices in WPAN operate in a range up to 30 feet away. Compared to WLAN the speed and wireless operation range are both less than WLAN, but in return it doesn't use nearly as much power. This makes it ideal for personal devices, such as mobile phones, PDAs, headphones, laptops, speakers, and other devices that operate on batteries.

Why D-Link Wi-Fi Mesh?

D-Link's Wi-Fi Mesh is a scalable solution that allows you to easily increase the coverage of your wireless AX network when connected to a D-Link Wi-Fi Mesh router. Utilizing the latest Wi-Fi 6 technology, your existing wireless mesh network delivers higher speeds, efficiency and reliability than previous generations. Moreover, multiple mesh devices can be connected with your mesh router to extend the range and enhance the network capabilities of your home or office seamlessly, so you can enjoy a much-improved experience with high-definition streaming media, VR games, and cloud storage.

Who uses wireless?

Wireless technology has become so popular in recent years that almost everyone is using it, whether it's for home, office, business, D-Link has a wireless solution for it.

Home uses/benefits

- Gives everyone at home broadband access
- Surf the web, check email, instant message, etc.
- Gets rid of the cables around the house
- Simple and easy to use

Small office and home office uses/benefits

- Stay on top of everything at home as you would at office
- Remotely access your office network from home
- Share Internet connection and printer with multiple computers
- No need to dedicate office space

Where is wireless used?

Wireless technology is expanding everywhere, not just at home or office. People like the freedom of mobility and it's becoming so popular that more and more public facilities now provide wireless access to attract people. The wireless connection in public places is usually called "hotspots".

Using a D-Link USB adapter with your laptop, you can access the hotspot to connect to the Internet from remote locations like: airports, hotels, coffee shops, libraries, restaurants, and convention centers.

Wireless network is easy to setup, but if you're installing it for the first time it could be quite a task not knowing where to start. That's why we've put together a few setup steps and tips to help you through the process of setting up a wireless network.

Tips

Here are a few things to keep in mind, when you install a wireless network.

Centralize your router or access point

Make sure you place the router/access point in a centralized location within your network for the best performance. Try to place the router/access point as high as possible in the room, so the signal gets dispersed throughout your home. If you have a two-story home, you may need a repeater to boost the signal to extend the range.

Eliminate Interference

Place home appliances such as cordless telephones, microwaves, and televisions as far away as possible from the router/access point. This would significantly reduce any interference that the appliances might cause since they operate on same frequency.

Wireless Encryption

Don't let your next-door neighbors or intruders connect to your wireless network. Encrypt your wireless network by utilizing the Wi-Fi protected Access security protocols on the router. Refer to the product manual for detail information on how to set it up.

Technical Specifications

Model	M18	M18x2	M18x3	M18x4
Product Image		 	  	   
General				
<i>For singular device unless separated:</i>				
Interfaces	1 x 10/100/1000 Mbps Gigabit Ethernet LAN port 1 x 10/100/1000 Mbps Gigabit Ethernet WAN Port 1 x Power Connector 1 x Reset Button 1 x WPS Button			
LED	Power/Status			
Antenna Type	2 x 2.4 GHz WLAN Internal Antenna 2 x 5 GHz WLAN Internal Antenna 1x 5 GHz ZeroWait DFS Antenna			
Wi-Fi Data Rate	2.4 GHz Up to 574 Mbps 5 GHz Up to 1201 Mbps			
Standards	IEEE 802.11ax ^{1,2,3} IEEE 802.11ac ^{1,2,3} IEEE 802.11n/g/b/a IEEE 802.11k IEEE 802.11v IEEE 802.11h IEEE 802.3u			
WAN Interface	Static IP Dynamic IP PPPoE PPTP L2TP DS-Lite Support 802.1p & 802.1q VLAN tagging and Priority bit			

The marking information is located at the bottom of the apparatus.

¹ Maximum wireless signal rate derived from IEEE Standard 802.11a, 802.11g, 802.11n, 802.11ac and 802.11ax specifications. Actual data throughput will vary. Network conditions and environmental factors - including volume of network traffic, building materials and construction, and network overhead - lower actual data throughput rate. Environmental factors will adversely affect wireless signal range.

² Frequency Range varies depending on country's regulation.

³ The router does not include 5.25-5.35 GHz & 5.47-5.725 GHz in some regions.

Functionality				
Security	WPA/WPA2 -Personal WPA2-Personal WPA2/WPA3 – Personal (WPS not supported) WPA3 – Personal (WPS Not supported)			
Firewall	DoS Stateful Packet Inspection Anti-spoofing Checking IP Address Filtering 1 x DMZ			
Mesh	D-Link Wi-Fi Mesh			
QoS	D-Link Intelligent QoS Technology			
Coverage	210 sqm / 2300 sq. ft.	370 sqm / 4000 sq. ft.	500 sqm / 5400 sq. ft.	600 sqm / 6500 sq. ft.
Physical				
Hardware Version	A1			
Size	92 x 92 x 93 mm			
Weight	215 g			
Power Input	12V 1A			
Maximum Operating Voltage	12V			
Maximum Power Consumption	12 W			
Operating Temperature	0 to 40 °C (32 to 104 °F)			
Storage Temperature	-20 to 65 °C (-4 to 149 °F)			
Operating Humidity	10% to 90% non-condensing			
Storage Humidity	5% to 95% non-condensing			
Certifications	CE , FCC, IC, RCM			
Software				
EAGLE PRO AI	iOS Android			
Voice Control	Alexa Voice Control Google Assistant Voice Control			

Regulatory Information

Federal Communication Commission Interference Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Operations in the 5.15-5.25GHz band are restricted to indoor usage only. This device meets all the other requirements specified in Part 15E, Section 15.407 of the FCC Rules.

IMPORTANT NOTICE:

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 22 cm between the radiator & your body.

Note

The country code selection is for non-USA models only and is not available to all USA models. Per FCC regulations, all WiFi product marketed in the USA must be fixed to USA operational channels only.

Innovation, Science and Economic Development Canada (ISED) Statement:

This device complies with ISED licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'ISED applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Caution :

- (i) the device for operation in the band 5150-5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems;
- (ii) the maximum antenna gain permitted for devices in the bands 5250-5350 MHz and 5470-5725 MHz shall be such that the equipment still complies with the e.i.r.p. limit;
- (iii) the maximum antenna gain permitted for devices in the band 5725-5850 MHz shall be such that the equipment still complies with the e.i.r.p. limits specified for point-to-point and non-point-to-point operation as appropriate; and
- (iv) the worst-case tilt angle(s) necessary to remain compliant with the e.i.r.p. elevation mask requirement set forth in Section 6.2.2(3) shall be clearly indicated.
- (v) Users should also be advised that high-power radars are allocated as primary users (i.e. priority users) of the bands 5250-5350 MHz and 5650-5850 MHz and that these radars could cause interference and/or damage to LE-LAN devices.

Avertissement:

Le guide d'utilisation des dispositifs pour réseaux locaux doit inclure des instructions précises sur les restrictions susmentionnées, notamment :

- (i) les dispositifs fonctionnant dans la bande 5150-5250 MHz sont réservés uniquement pour une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites mobiles utilisant les mêmes canaux;
- (ii) le gain maximal d'antenne permis pour les dispositifs utilisant les bandes de 5250 à 5 350 MHz et de 5470 à 5725 MHz doit être conforme à la limite de la p.i.r.e;
- (iii) le gain maximal d'antenne permis (pour les dispositifs utilisant la bande de 5 725 à 5 850 MHz) doit être conforme à la limite de la p.i.r.e. spécifiée pour l'exploitation point à point et l'exploitation non point à point, selon le cas;
- (iv) les pires angles d'inclinaison nécessaires pour rester conforme à l'exigence de la p.i.r.e. applicable au masque d'élévation, et énoncée à la section 6.2.2 3), doivent être clairement indiqués.
- (v) De plus, les utilisateurs devraient aussi être avisés que les utilisateurs de radars de haute puissance sont désignés utilisateurs principaux (c.-à-d., qu'ils ont la priorité) pour les bandes 5250-5350 MHz et 5650-5850 MHz et que ces radars pourraient causer du brouillage et/ou des dommages aux dispositifs LAN-EL.

Radiation Exposure Statement

This equipment complies with ISED radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 40 cm between the radiator and your body.

Déclaration d'exposition aux radiations

Cet équipement est conforme aux limites d'exposition aux rayonnements ISED établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 40 cm de distance entre la source de rayonnement et votre corps.

以下警語適用台灣地區

依據 低功率電波輻射性電機管理辦法

第十二條: 經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

第十四條: 低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前項合法通信，指依電信法規定作業之無線電通信。低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

1.使用此產品時應避免影響附近雷達系統之操作。

「電磁波曝露量MPE標準值 $1\text{mW}/\text{cm}^2$ ，本產品使用時建議應距離人體 22 cm」



	Frequency Band(s) Frequenzband Fréquence bande(s) Bandas de Frecuencia Frequenza/e Frequentie(s)	Max. Output Power (EIRP) Max. Output Power Consommation d'énergie max. Potencia máxima de Salida Potenza max. Output Max. Output Power
5 G	5.15 – 5.25 GHz	200 mW
	5.25 – 5.35 GHz	200 mW
	5.47 – 5.725 GHz	1 W
2.4 G	2.4 – 2.4835 GHz	100 mW

European Community Declaration of Conformity:

Česky [Czech]	Tímto D-Link Corporation prohlašuje, že tento produkt, jeho příslušenství a software jsou v souladu se směrnicí 2014/53/EU. Celý text ES prohlášení o shodě vydaného EU a o firmwaru produktu lze stáhnout na stránkách k produktu www.dlink.com .
Dansk [Danish]	D-Link Corporation erklærer herved, at dette produkt, tilbehør og software er i overensstemmelse med direktiv 2014/53/EU. Den fulde tekst i EU-overensstemmelseserklæringen og produktfirmware kan wnloades fra produktsiden hos www.dlink.com .
Deutsch [German]	Hiermit erklärt die D-Link Corporation, dass dieses Produkt, das Zubehör und die Software der Richtlinie 2014/53/EU entsprechen. Der vollständige Text der Konformitätserklärung der Europäischen Gemeinschaft sowie die Firmware zum Produkt stehen Ihnen zum Herunterladen von der Produktseite im Internet auf www.dlink.com zur Verfügung.
Eesti [Estonian]	Käesolevaga kinnitab D-Link Corporation, et see toode, tarvikud ja tarkvara on kooskõlas direktiiviga 2014/53/EL. Euroopa Liidu vastavusdeklaratsiooni täistekst ja toote püsivara on allalaadimiseks saadaval tootelehel www.dlink.com .
English	Hereby, D-Link Corporation, declares that this product, accessories, and software are in compliance with directive 2014/53/EU. The full text of the EU Declaration of Conformity and product firmware are available for download from the product page at www.dlink.com
Español [Spanish]	Por la presente, D-Link Corporation declara que este producto, accesorios y software cumplen con las directivas 2014/53/UE. El texto completo de la declaración de conformidad de la UE y el firmware del producto están disponibles y se pueden descargar desde la página del producto en www.dlink.com .
Ελληνική [Greek]	Με την παρούσα, η D-Link Corporation δηλώνει ότι αυτό το προϊόν, τα αξεσουάρ και το λογισμικό συμμορφώνονται με την Οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης της ΕΕ και το υλικολογισμικό του προϊόντος είναι διαθέσιμα για λήψη από τη σελίδα του προϊόντος στην τοποθεσία www.dlink.com .
Français [French]	Par les présentes, D-Link Corporation déclare que ce produit, ces accessoires et ce logiciel sont conformes aux directives 2014/53/UE. Le texte complet de la déclaration de conformité de l'UE et le microprogramme du produit sont disponibles au téléchargement sur la page des produits à www.dlink.com .
Italiano [Italian]	Con la presente, D-Link Corporation dichiara che questo prodotto, i relativi accessori e il software sono conformi alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE e il firmware del prodotto sono disponibili per il download dalla pagina del prodotto su www.dlink.com .

Latviski [Latvian]	Ar šo uzņēmums D-Link Corporation apliecina, ka šis produkts, piederumi un programmatūra atbilst direktīvai 2014/53/ES. ES atbilstības deklarācijas pilno tekstu un produkta aparātprogrammatūru var lejupielādēt attiecīgā produkta lapā vietnē www.dlink.com .
Lietuvių [Lithuanian]	Šiuo dokumentu „D-Link Corporation“ pareiškia, kad šis gaminys, priedai ir programinė įranga atitinka direktyvą 2014/53/ES. Visą ES atitikties deklaracijos tekstą ir gaminio programinę aparatinę įrangą galima atsisiųsti iš gaminio puslapio adresu www.dlink.com .
Nederlands [Dutch]	Hierbij verklaart D-Link Corporation dat dit product, accessoires en software voldoen aan de richtlijnen 2014/53/EU. De volledige tekst van de EU conformiteitsverklaring en productfirmware is beschikbaar voor download van de productpagina op www.dlink.com .
Malti [Maltese]	Bil-preżenti, D-Link Corporation tiddikjara li dan il-prodott, l-aċċessorji, u s-software huma konformi mad-Direttiva 2014/53/UE. Tista' tniżżel it-test sħiħ tad-dikjarazzjoni ta' konformità tal-UE u l-firmware tal-prodott mill-paġna tal-prodott fuq www.dlink.com .
Magyar [Hungarian]	Ezennel a D-Link Corporation kijelenti, hogy a jelen termék, annak tartozékai és szoftvere megfelelnek a 2014/53/EU sz. rendeletnek rendelkezéseinek. Az EU Megfelelőségi nyilatkozat teljes szövege és a termék firmware a termék oldaláról tölthető le a www.dlink.com címen.
Polski [Polish]	D-Link Corporation niniejszym oświadcza, że ten produkt, akcesoria oraz oprogramowanie są zgodne z dyrektywami 2014/53/EU. Pełen tekst deklaracji zgodności UE oraz oprogramowanie sprzętowe do produktu można pobrać na stronie produktu w witrynie www.dlink.com .
Português [Portuguese]	Desta forma, a D-Link Corporation declara que este produto, os acessórios e o software estão em conformidade com a diretiva 2014/53/UE. O texto completo da declaração de conformidade da UE e do firmware
Slovensko[Slovenian]	Podjetje D-Link Corporation s tem izjavlja, da so ta izdelek, dodatna oprema in programnska oprema skladni z direktivami 2014/53/EU. Celotno besedilo izjave o skladnosti EU in vdelana programska oprema sta na voljo za prenos na strani izdelka na www.dlink.com .
Slovensky [Slovak]	Spoločnosť D-Link týmto vyhlasuje, že tento produkt, príslušenstvo a softvér sú v súlade so smernicou 214/53/EÚ. Úplné znenie vyhlásenia EÚ o zhode a firmvéri produktu sú k dispozícii na prevzatie zo stránky produktu www.dlink.com .
Suomi [Finnish]	D-Link Corporation täten vakuuttaa, että tämä tuote, lisävarusteet ja ohjelmisto ovat direktiivin 2014/53/EU vaatimusten mukaisia. Täydellinen EU-vaatimustenmukaisuusvakuutus samoin kuin tuotteen laiteohjelmisto ovat ladattavissa osoitteesta www.dlink.com .
Svenska[Swedish]	D-Link Corporation försäkrar härmed att denna produkt, tillbehör och programvara överensstämmer med direktiv 2014/53/EU. Hela texten med EU-försäkran om överensstämmelse och produkt-firmware kan hämtas från produktsidan på www.dlink.com .

Íslenska [Icelandic]	Hér með lýsir D-Link Corporation því yfir að þessi vara, fylgihlutir og hugbúnaður eru í samræmi við tilskipun 2014/53/EB. Sækja má ESB-samræmisýfirlýsinguna í heild sinni og fastbúnað vörunnar af vefsíðu vörunnar á www.dlink.com .
Norsk [Norwegian]	Herved erklærer D-Link Corporation at dette produktet, tilbehøret og programvaren er i samsvar med direktivet 2014/53/EU. Den fullstendige teksten i EU-erklæring om samsvar og produktets fastvare er tilgjengelig for nedlasting fra produktsiden på www.dlink.com .

Warning Statement:

The equipment supplied by an approved external power adapter which is considered to be Pluggable Equipment Type A. The socket outlets shall be installed near the equipment and be easily accessible.

NOTICE OF WIRELESS RADIO LAN USAGE IN THE EUROPEAN COMMUNITY (FOR WIRELESS PRODUCT ONLY):

- This device is restricted to indoor use when operated in the European Community using channels in the 5.15-5.35 GHz band to reduce the potential for interference.
- This device is a 2.4 GHz wideband transmission system (transceiver), intended for use in all EU member states and EFTA countries. This equipment may be operated in AL, AD, BE, BG, DK, DE, FI, FR, GR, GW, IS, IT, HR, LI, LU, MT, MK, MD, MC, NL, NO, AT, PL, PT, RO, SM, SE, RS, SK, ES, CI, HU, and CY.

Usage Notes:

- To remain in conformance with European National spectrum usage regulations, frequency and channel limitations will be applied on the products according to the country where the equipment will be deployed.
- This device is restricted from functioning in Ad-hoc mode while operating in 5 GHz. Ad-hoc mode is direct peer-to-peer communication between two client devices without an Access Point.
- Access points will support DFS (Dynamic Frequency Selection) and TPC (Transmit Power Control) functionality as required when operating in 5 GHz band within the EU.
- Please refer to the product manual or datasheet to check whether your product uses 2.4 GHz and/or 5 GHz wireless.

HINWEIS ZUR VERWENDUNG VON DRAHTLOS-NETZWERK (WLAN) IN DER EUROPÄISCHEN GEMEINSCHAFT (NUR FÜR EIN DRAHTLOSES PRODUKT)

- Der Betrieb dieses Geräts in der Europäischen Gemeinschaft bei Nutzung von Kanälen im 5,15-5,35 GHz Frequenzband ist ausschließlich auf Innenräume beschränkt, um das Interferenzpotential zu reduzieren.
- Bei diesem Gerät handelt es sich um ein zum Einsatz in allen EU-Mitgliedsstaaten und in EFTA-Ländern - ausgenommen Frankreich. Der Betrieb dieses Geräts ist in den folgenden Ländern erlaubt: AL, AD, BE, BG, DK, DE, FI, FR, GR, GW, IS, IT, HR, LI, LU, MT, MK, MD, MC, NL, NO, AT, PL, PT, RO, SM, SE, RS, SK, ES, CI, HU, CY

Gebrauchshinweise:

- Um den in Europa geltenden nationalen Vorschriften zum Nutzen des Funkspektrums weiterhin zu entsprechen, werden Frequenz und Kanalbeschränkungen, dem jeweiligen Land, in dem das Gerät zum Einsatz kommt, entsprechend, auf die Produkte angewandt.
- Die Funktionalität im Ad-hoc-Modus bei Betrieb auf 5 GHz ist für dieses Gerät eingeschränkt. Bei dem Ad-hoc-Modus handelt es sich um eine Peer-to-Peer-Kommunikation zwischen zwei Client-Geräten ohne einen Access Point.
- Access Points unterstützen die Funktionen DFS (Dynamic Frequency Selection) und TPC (Transmit Power Control) wie erforderlich bei Betrieb auf 5 GHz innerhalb der EU.
- Bitte schlagen Sie im Handbuch oder Datenblatt nach, ob Ihr Gerät eine 2,4 GHz und / oder 5 GHz Verbindung nutzt.

AVIS CONCERNANT L'UTILISATION DE LA RADIO SANS FIL LAN DANS LA COMMUNAUTÉ EUROPÉENNE (UNIQUEMENT POUR LES PRODUITS SANS FIL)

- Cet appareil est limité à un usage intérieur lorsqu'il est utilisé dans la Communauté européenne sur les canaux de la bande de 5,15 à 5,35 GHz afin de réduire les risques d'interférences.
- Cet appareil est un système de transmission à large bande (émetteur-récepteur) de 2,4 GHz, destiné à être utilisé dans tous les États-membres de l'UE et les pays de l'AELE. Cet équipement peut être utilisé dans les pays suivants : AL, AD, BE, BG, DK, DE, FI, FR, GR, GW, IS, IT, HR, LI, LU, MT, MK, MD, MC, NL, NO, AT, PL, PT, RO, SM, SE, RS, SK, ES, CI, HU, CY

Notes d'utilisation:

- Pour rester en conformité avec la réglementation nationale européenne en matière d'utilisation du spectre, des limites de fréquence et de canal seront appliquées aux produits selon le pays où l'équipement sera déployé.
- Cet appareil ne peut pas utiliser le mode Ad-hoc lorsqu'il fonctionne dans la bande de 5 GHz. Le mode Adhoc fournit une communication directe pair à pair entre deux périphériques clients sans point d'accès.
- Les points d'accès prendront en charge les fonctionnalités DFS (Dynamic Frequency Selection) et TPC (Transmit Power Control) au besoin lors du fonctionnement dans la bande de 5 GHz au sein de l'UE.
- Merci de vous référer au guide d'utilisation ou de la fiche technique afin de vérifier si votre produit utilise 2.4 GHz et/ou 5 GHz sans fil.

AVISO DE USO DE LA LAN DE RADIO INALÁMBRICA EN LA COMUNIDAD EUROPEA (SOLO PARA EL PRODUCTO INALÁMBRICO)

- El uso de este dispositivo está restringido a interiores cuando funciona en la Comunidad Europea utilizando canales en la banda de 5,15-5,35 GHz, para reducir la posibilidad de interferencias.
- Este dispositivo es un sistema de transmisión (transceptor) de banda ancha de 2,4 GHz, pensado para su uso en todos los estados miembros de la UE y en los países de la AELC. Este equipo se puede utilizar en AL, AD, BE, BG, DK, DE, FI, FR, GR, GW, IS, IT, HR, LI, LU, MT, MK, MD, MC, NL, NO, AT, PL, PT, RO, SM, SE, RS, SK, ES, CI, HU, CY

Notas de uso:

- Para seguir cumpliendo las normas europeas de uso del espectro nacional, se aplicarán limitaciones de frecuencia y canal en los productos en función del país en el que se pondrá en funcionamiento el equipo.
- Este dispositivo tiene restringido el funcionamiento en modo Ad-hoc mientras funcione a 5 Ghz. El modo Ad-hoc es la comunicación directa de igual a igual entre dos dispositivos cliente sin un punto de acceso.
- Los puntos de acceso admitirán la funcionalidad DFS (Selección de frecuencia dinámica) y TPC (Control de la potencia de transmisión) si es necesario cuando funcionan a 5 Ghz dentro de la UE.
- Por favor compruebe el manual o la ficha de producto para comprobar si el producto utiliza las bandas inalámbricas de 2.4 GHz y/o la de 5 GHz.

AVVISO PER L'USO DI LAN RADIO WIRELESS NELLA COMUNITÀ EUROPEA (SOLO PER PRODOTTI WIRELESS)

- Nella Comunità europea, l'uso di questo dispositivo è limitato esclusivamente agli ambienti interni sui canali compresi nella banda da 5,15 a 5,35 GHz al fine di ridurre potenziali interferenze. Questo dispositivo è un sistema di trasmissione a banda larga a 2,4 GHz (ricetrasmittente), destinato all'uso in tutti gli stati membri dell'Unione europea e nei paesi EFTA.
- Questo dispositivo può essere utilizzato in AL, AD, BE, BG, DK, DE, FI, FR, GR, GW, IS, IT, HR, LI, LU, MT, MK, MD, MC, NL, NO, AT, PL, PT, RO, SM, SE, RS, SK, ES, CI, HU, CY

Note per l'uso

- Al fine di mantenere la conformità alle normative nazionali europee per l'uso dello spettro di frequenze, saranno applicate limitazioni sulle frequenze e sui canali per il prodotto in conformità alle normative del paese in cui il dispositivo viene utilizzato.
- Questo dispositivo non può essere attivato in modalità Ad-hoc durante il funzionamento a 5 GHz. La modalità Ad-hoc è una comunicazione diretta peer-to-peer fra due dispositivi client senza un punto di accesso.
- I punti di accesso supportano le funzionalità DFS (Dynamic Frequency Selection) e TPC (Transmit Power Control) richieste per operare a 5 GHz nell'Unione europea.
- Ti invitiamo a fare riferimento al manuale del prodotto o alla scheda tecnica per verificare se il tuo prodotto utilizza le frequenze 2,4 GHz e/o 5 GHz.

KENNISGEVING VAN DRAADLOOS RADIO LAN-GEBRUIK IN DE EUROPESE GEMEENSCHAP (ALLEEN VOOR DRAADLOOS PRODUCT)

- Dit toestel is beperkt tot gebruik binnenshuis wanneer het wordt gebruikt in de Europese Gemeenschap gebruik makend van kanalen in de 5.15-5.35 GHz band om de kans op interferentie te beperken.
- Dit toestel is een 2.4 GHz breedband transmissiesysteem (transceiver) dat bedoeld is voor gebruik in alle EU lidstaten en EFTA landen. Deze uitrusting mag gebruikt worden in AL, AD, BE, BG, DK, DE, FI, FR, GR, GW, IS, IT, HR, LI, LU, MT, MK, MD, MC, NL, NO, AT, PL, PT, RO, SM, SE, RS, SK, ES, CI, HU, CY

Gebruiksaanwijzingen:

- Om de gebruiksvoorschriften van het Europese Nationale spectrum na te leven, zullen frequentie- en kanaalbeperkingen worden toegepast op de producten volgens het land waar de uitrusting gebruikt zal worden.
- Dit toestel kan niet functioneren in Ad-hoc mode wanneer het gebruikt wordt in 5 GHz. Ad-hoc mode is directe peer-to-peer communicatie tussen twee klantenapparaten zonder een toegangspunt.
- Toegangspunten ondersteunen DFS (Dynamic Frequency Selection) en TPC (Transmit Power Control) functionaliteit zoals vereist bij gebruik in 5 GHz binnen de EU.
- Raadpleeg de handleiding of de datasheet om te controleren of uw product gebruik maakt van 2.4 GHz en/of 5 GHz.

SAFETY INSTRUCTIONS

The following general safety guidelines are provided to help ensure your own personal safety and protect your product from potential damage. Remember to consult the product user instructions for more details.

- Static electricity can be harmful to electronic components. Discharge static electricity from your body (i.e. touching grounded bare metal) before touching the product.
- Do not attempt to service the product and never disassemble the product. For some products with a user replaceable battery, please read and follow the instructions in the user manual.
- Do not spill food or liquid on your product and never push any objects into the openings of your product.
- Do not use this product near water, areas with high humidity, or condensation unless the product is specifically rated for outdoor application.
- Keep the product away from radiators and other heat sources.
- Always unplug the product from mains power before cleaning and use a dry lint free cloth only.

SICHERHEITSVORSCHRIFTEN

Die folgenden allgemeinen Sicherheitsvorschriften dienen als Hilfe zur Gewährleistung Ihrer eigenen Sicherheit und zum Schutz Ihres Produkts. Weitere Details finden Sie in den Benutzeranleitungen zum Produkt.

- Statische Elektrizität kann elektronischen Komponenten schaden. Um Schäden durch statische Aufladung zu vermeiden, leiten Sie elektrostatische Ladungen von Ihrem Körper ab, (z. B. durch Berühren eines geerdeten blanken Metallteils), bevor Sie das Produkt berühren.
- Unterlassen Sie jeden Versuch, das Produkt zu warten, und versuchen Sie nicht, es in seine Bestandteile zu zerlegen. Für einige Produkte mit austauschbaren Akkus lesen Sie bitte das Benutzerhandbuch und befolgen Sie die dort beschriebenen Anleitungen.
- Vermeiden Sie, dass Speisen oder Flüssigkeiten auf Ihr Produkt gelangen, und stecken Sie keine Gegenstände in die Gehäuseschlitze oder -öffnungen Ihres Produkts.
- Verwenden Sie dieses Produkt nicht in unmittelbarer Nähe von Wasser und nicht in Bereichen mit hoher Luftfeuchtigkeit oder Kondensation, es sei denn, es ist speziell zur Nutzung in Außenbereichen vorgesehen und eingestuft.
- Halten Sie das Produkt von Heizkörpern und anderen Quellen fern, die Wärme erzeugen.
- Trennen Sie das Produkt immer von der Stromzufuhr, bevor Sie es reinigen und verwenden Sie dazu ausschließlich ein trockenes fusselfreies Tuch.

CONSIGNES DE SÉCURITÉ

Les consignes générales de sécurité ci-après sont fournies afin d'assurer votre sécurité personnelle et de protéger le produit d'éventuels dommages. Veuillez consulter les consignes d'utilisation du produit pour plus de détails.

- L'électricité statique peut endommager les composants électroniques. Déchargez l'électricité statique de votre corps (en touchant un objet en métal relié à la terre par exemple) avant de toucher le produit.
- N'essayez pas d'intervenir sur le produit et ne le démontez jamais. Pour certains produits contenant une batterie remplaçable par l'utilisateur, veuillez lire et suivre les consignes contenues dans le manuel d'utilisation.
- Ne renversez pas d'aliments ou de liquide sur le produit et n'insérez jamais d'objets dans les orifices.
- N'utilisez pas ce produit à proximité d'un point d'eau, de zones très humides ou de condensation sauf si le produit a été spécifiquement conçu pour une application extérieure.
- Éloignez le produit des radiateurs et autres sources de chaleur.
- Débranchez toujours le produit de l'alimentation avant de le nettoyer et utilisez uniquement un chiffon sec non pelucheux.

INSTRUCCIONES DE SEGURIDAD

Las siguientes directrices de seguridad general se facilitan para ayudarle a garantizar su propia seguridad personal y para proteger el producto frente a posibles daños. No olvide consultar las instrucciones del usuario del producto para obtener más información.

- La electricidad estática puede resultar nociva para los componentes electrónicos. Descargue la electricidad estática de su cuerpo (p. ej., tocando algún metal sin revestimiento conectado a tierra) antes de tocar el producto.
- No intente realizar el mantenimiento del producto ni lo desmonte nunca. Para algunos productos con batería reemplazable por el usuario, lea y siga las instrucciones del manual de usuario.
- No derrame comida o líquidos sobre el producto y nunca deje que caigan objetos en las aberturas del mismo.
- No utilice este producto cerca del agua, en zonas con humedad o condensación elevadas a menos que el producto esté clasificado específicamente para aplicación en exteriores.
- Mantenga el producto alejado de los radiadores y de otras fuentes de calor.
- Desenchufe siempre el producto de la alimentación de red antes de limpiarlo y utilice solo un paño seco sin pelusa.

ISTRUZIONI PER LA SICUREZZA

Le seguenti linee guida sulla sicurezza sono fornite per contribuire a garantire la sicurezza personale degli utenti e a proteggere il prodotto da potenziali danni. Per maggiori dettagli, consultare le istruzioni per l'utente del prodotto.

- L'elettricità statica può essere pericolosa per i componenti elettronici. Scaricare l'elettricità statica dal corpo (ad esempio toccando una parte metallica collegata a terra) prima di toccare il prodotto.
- Non cercare di riparare il prodotto e non smontarlo mai. Per alcuni prodotti dotati di batteria sostituibile dall'utente, leggere e seguire le istruzioni riportate nel manuale dell'utente.
- Non versare cibi o liquidi sul prodotto e non spingere mai alcun oggetto nelle aperture del prodotto.
- Non usare questo prodotto vicino all'acqua, in aree con elevato grado di umidità o soggette a condensa a meno che il prodotto non sia specificatamente approvato per uso in ambienti esterni.
- Tenere il prodotto lontano da caloriferi e altre fonti di calore.
- Scollegare sempre il prodotto dalla presa elettrica prima di pulirlo e usare solo un panno asciutto che non lasci filacce.

VEILIGHEIDSinFORMATIE

De volgende algemene veiligheidsinformatie werd verstrekt om uw eigen persoonlijke veiligheid te waarborgen en uw product te beschermen tegen mogelijke schade. Denk eraan om de gebruikersinstructies van het product te raadplegen voor meer informatie.

- Statische elektriciteit kan schadelijk zijn voor elektronische componenten. Ontlaad de statische elektriciteit van uw lichaam (d.w.z. het aanraken van geaard bloot metaal) voordat u het product aanraakt.
- U mag nooit proberen het product te onderhouden en u mag het product nooit demonteren. Voor sommige producten met door de gebruiker te vervangen batterij, dient u de instructies in de gebruikershandleiding te lezen en te volgen.
- Mors geen voedsel of vloeistof op uw product en u mag nooit voorwerpen in de openingen van uw product duwen.
- Gebruik dit product niet in de buurt van water, gebieden met hoge vochtigheid of condensatie, tenzij het product specifiek geclassificeerd is voor gebruik buitenshuis.
- Houd het product uit de buurt van radiators en andere warmtebronnen.
- U dient het product steeds los te koppelen van de stroom voordat u het reinigt en gebruik uitsluitend een droge pluisvrije doek.

Disposing and Recycling Your Product



EN

ENGLISH



This symbol on the product or packaging means that according to local laws and regulations this product should not be disposed of in household waste but sent for recycling. Please take it to a collection point designated by your local authorities once it has reached the end of its life, some will accept products for free. By recycling the product and its packaging in this manner you help to conserve the environment and protect human health.

D-Link and the Environment

At D-Link, we understand and are committed to reducing any impact our operations and products may have on the environment. To minimise this impact D-Link designs and builds its products to be as environmentally friendly as possible, by using recyclable, low toxic materials in both products and packaging.

D-Link recommends that you always switch off or unplug your D-Link products when they are not in use. By doing so you will help to save energy and reduce CO2 emissions.

To learn more about our environmentally responsible products and packaging please visit www.dlinkgreen.com.

DEUTSCH

DE



Dieses Symbol auf dem Produkt oder der Verpackung weist darauf hin, dass dieses Produkt gemäß bestehender örtlicher Gesetze und Vorschriften nicht über den normalen Hausmüll entsorgt werden sollte, sondern einer Wiederverwertung zuzuführen ist. Bringen Sie es bitte zu einer von Ihrer Kommunalbehörde entsprechend amtlich ausgewiesenen Sammelstelle, sobald das Produkt das Ende seiner Nutzungsdauer erreicht hat. Für die Annahme solcher Produkte erheben einige dieser Stellen keine Gebühren. Durch ein auf diese Weise durchgeführtes Recycling des Produkts und seiner Verpackung helfen Sie, die Umwelt zu schonen und die menschliche Gesundheit zu schützen.

D-Link und die Umwelt

D-Link ist sich den möglichen Auswirkungen seiner Geschäftstätigkeiten und seiner Produkte auf die Umwelt bewusst und fühlt sich verpflichtet, diese entsprechend zu mindern. Zu diesem Zweck entwickelt und stellt D-Link seine Produkte mit dem Ziel größtmöglicher Umweltfreundlichkeit her und verwendet wiederverwertbare, schadstoffarme Materialien bei Produktherstellung und Verpackung.

D-Link empfiehlt, Ihre Produkte von D-Link, wenn nicht in Gebrauch, immer auszuschalten oder vom Netz zu nehmen. Auf diese Weise helfen Sie, Energie zu sparen und CO2-Emissionen zu reduzieren.

Wenn Sie mehr über unsere umweltgerechten Produkte und Verpackungen wissen möchten, finden Sie entsprechende Informationen im Internet unter www.dlinkgreen.com.

FRANÇAIS**FR**

Ce symbole apposé sur le produit ou son emballage signifie que, conformément aux lois et réglementations locales, ce produit ne doit pas être éliminé avec les déchets domestiques mais recyclé. Veuillez le rapporter à un point de collecte prévu à cet effet par les autorités locales; certains accepteront vos produits gratuitement. En recyclant le produit et son emballage de cette manière, vous aidez à préserver l'environnement et à protéger la santé de l'homme.

D-Link et l'environnement

Chez D-Link, nous sommes conscients de l'impact de nos opérations et produits sur l'environnement et nous engageons à le réduire. Pour limiter cet impact, D-Link conçoit et fabrique ses produits de manière aussi écologique que possible, en utilisant des matériaux recyclables et faiblement toxiques, tant dans ses produits que ses emballages.

D-Link recommande de toujours éteindre ou débrancher vos produits D-Link lorsque vous ne les utilisez pas. Vous réaliserez ainsi des économies d'énergie et réduirez vos émissions de CO2.

Pour en savoir plus sur les produits et emballages respectueux de l'environnement, veuillez consulter le www.dlinkgreen.com.

ESPAÑOL**ES**

Este símbolo en el producto o el embalaje significa que, de acuerdo con la legislación y la normativa local, este producto no se debe desechar en la basura doméstica sino que se debe reciclar. Llévelo a un punto de recogida designado por las autoridades locales una vez que ha llegado al fin de su vida útil; algunos de ellos aceptan recogerlos de forma gratuita. Al reciclar el producto y su embalaje de esta forma, contribuye a preservar el medio ambiente y a proteger la salud de los seres humanos.

D-Link y el medio ambiente

En D-Link, comprendemos y estamos comprometidos con la reducción del impacto que puedan tener nuestras actividades y nuestros productos en el medio ambiente. Para reducir este impacto, D-Link diseña y fabrica sus productos para que sean lo más ecológicos posible, utilizando materiales reciclables y de baja toxicidad tanto en los productos como en el embalaje.

D-Link recomienda apagar o desenchufar los productos D-Link cuando no se estén utilizando. Al hacerlo, contribuirá a ahorrar energía y a reducir las emisiones de CO2.

Para obtener más información acerca de nuestros productos y embalajes ecológicos, visite el sitio www.dlinkgreen.com.

ITALIANO**IT**

La presenza di questo simbolo sul prodotto o sulla confezione del prodotto indica che, in conformità alle leggi e alle normative locali, questo prodotto non deve essere smaltito nei rifiuti domestici, ma avviato al riciclo. Una volta terminato il ciclo di vita utile, portare il prodotto presso un punto di raccolta indicato dalle autorità locali. Alcuni questi punti di raccolta accettano gratuitamente i prodotti da riciclare. Scegliendo di riciclare il prodotto e il relativo imballaggio, si contribuirà a preservare l'ambiente e a salvaguardare la salute umana.

D-Link e l'ambiente

D-Link cerca da sempre di ridurre l'impatto ambientale dei propri stabilimenti e dei propri prodotti. Allo scopo di ridurre al minimo tale impatto, D-Link progetta e realizza i propri prodotti in modo che rispettino il più possibile l'ambiente, utilizzando materiali riciclabili a basso tasso di tossicità sia per i prodotti che per gli imballaggi.

D-Link raccomanda di spegnere sempre i prodotti D-Link o di scollegarne la spina quando non vengono utilizzati. In questo modo si contribuirà a risparmiare energia e a ridurre le emissioni di anidride carbonica.

Per ulteriori informazioni sui prodotti e sugli imballaggi D-Link a ridotto impatto ambientale, visitate il sito all'indirizzo www.dlinkgreen.com.

NEDERLANDS**NL**

Dit symbool op het product of de verpakking betekent dat dit product volgens de plaatselijke wetgeving niet mag worden weggegooid met het huishoudelijk afval, maar voor recyclage moeten worden ingeleverd. Zodra het product het einde van de levensduur heeft bereikt, dient u het naar een inzamelpunt te brengen dat hiertoe werd aangeduid door uw plaatselijke autoriteiten, sommige autoriteiten accepteren producten zonder dat u hiervoor dient te betalen. Door het product en de verpakking op deze manier te recyclen helpt u het milieu en de gezondheid van de mens te beschermen.

D-Link en het milieu

Bij D-Link spannen we ons in om de impact van onze handelingen en producten op het milieu te beperken. Om deze impact te beperken, ontwerpt en bouwt D-Link zijn producten zo milieuvriendelijk mogelijk, door het gebruik van recycleerbare producten met lage toxiciteit in product en verpakking.

D-Link raadt aan om steeds uw D-Link producten uit te schakelen of uit de stekker te halen wanneer u ze niet gebruikt. Door dit te doen bespaart u energie en beperkt u de CO₂-emissies.

Breng een bezoek aan www.dlinkgreen.com voor meer informatie over onze milieuverantwoorde producten en verpakkingen.

POLSKI**PL**

Ten symbol umieszczony na produkcie lub opakowaniu oznacza, że zgodnie z miejscowym prawem i lokalnymi przepisami niniejszego produktu nie wolno wyrzucać jak odpady czy śmieci z gospodarstwa domowego, lecz należy go poddać procesowi recyklingu. Po zakończeniu użytkowania produktu, niektóre odpowiednie do tego celu podmioty przyjmą takie produkty nieodpłatnie, dlatego prosimy dostarczyć go do punktu zbiórki wskazanego przez lokalne władze. Poprzez proces recyklingu i dzięki takiemu postępowaniu z produktem oraz jego opakowaniem, pomogą Państwo chronić środowisko naturalne i dbać o ludzkie zdrowie.

D-Link i środowisko

D-Link podchodzimy w sposób świadomy do ochrony otoczenia oraz jesteśmy zaangażowani w zmniejszanie wpływu naszych działań i produktów na środowisko naturalne. W celu zminimalizowania takiego wpływu firma D-Link konstruuje i wytwarza swoje produkty w taki sposób, aby były one jak najbardziej przyjazne środowisku, stosując do tych celów materiały nadające się do powtórnego wykorzystania, charakteryzujące się małą toksycznością zarówno w przypadku samych produktów jak i opakowań.

Firma D-Link zaleca, aby Państwo zawsze prawidłowo wyłączali z użytku swoje produkty D-Link, gdy nie są one wykorzystywane. Postępując w ten sposób pozwalają Państwo oszczędzać energię i zmniejszać emisje CO₂.

Aby dowiedzieć się więcej na temat produktów i opakowań mających wpływ na środowisko prosimy zapoznać się ze stroną Internetową www.dlinkgreen.com.

ČESKY**CZ**


Tento symbol na výrobku nebo jeho obalu znamená, že podle místně platných předpisů se výrobek nesmí vyhazovat do komunálního odpadu, ale odeslat k recyklaci. Až výrobek doslouží, odnese jej prosím na sběrné místo určené místními úřady k tomuto účelu. Někteří sběrná místa přijímají výrobky zdarma. Recyklací výrobku i obalu pomáháte chránit životní prostředí i lidské zdraví.

D-Link a životní prostředí

Ve společnosti D-Link jsme si vědomi vlivu našich provozů a výrobků na životní prostředí a snažíme se o minimalizaci těchto vlivů. Proto své výrobky navrhujeme a vyrábíme tak, aby byly co nejekologičtější, a ve výrobcích i obalech používáme recyklovatelné a nízkotoxické materiály.

Společnost D-Link doporučuje, abyste své výrobky značky D-Link vypnuli nebo vytáhli ze zásuvky vždy, když je nepoužíváte. Pomůžete tak šetřit energii a snížit emise CO₂.

Více informací o našich ekologických výrobcích a obalech najdete na adrese www.dlinkgreen.com.

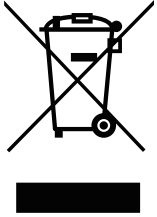MAGYAR**HU**


Ez a szimbólum a terméken vagy a csomagoláson azt jelenti, hogy a helyi törvényeknek és szabályoknak megfelelően ez a termék nem semmisíthető meg a háztartási hulladékkal együtt, hanem újrahasznosításra kell küldeni. Kérjük, hogy a termék élettartamának elteltét követően vigye azt a helyi hatóság által kijelölt gyűjtőhelyre. A termékek egyes helyeken ingyen elhelyezhetők. A termék és a csomagolás újrahasznosításával segíti védeni a környezetet és az emberek egészségét.

A D-Link és a környezet

A D-Linknél megértjük és elköteleztük magunkat a műveleteink és termékeink környezetre gyakorolt hatásainak csökkentésére. Az ezen hatás csökkentése érdekében a D-Link a lehető leginkább környezetbarát termékeket tervez és gyárt azért, hogy újrahasznosítható, alacsony károsanyag-tartalmú termékeket gyárt és csomagolásokat alkalmaz.

A D-Link azt javasolja, hogy mindig kapcsolja ki vagy húzza ki a D-Link termékeket a tápforrásból, ha nem használja azokat. Ezzel segít az energia megtakarításában és a széndioxid kibocsátásának csökkentésében.

Környezetbarát termékeinkről és csomagolásainkról további információkat a www.dlinkgreen.com weboldalon tudhat meg.

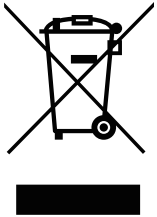NORSK**NO**


Dette symbolet på produktet eller forpakningen betyr at dette produktet ifølge lokale lover og forskrifter ikke skal kastes sammen med husholdningsavfall, men leveres inn til gjenvinning. Vennligst ta det til et innsamlingssted anvist av lokale myndigheter når det er kommet til slutten av levetiden. Noen steder aksepteres produkter uten avgift. Ved på denne måten å gjenvinne produktet og forpakningen hjelper du å verne miljøet og beskytte folks helse.

D-Link og miljøet

Hos D-Link forstår vi oss på og er forpliktet til å minske innvirkningen som vår drift og våre produkter kan ha på miljøet. For å minimalisere denne innvirkningen designer og lager D-Link produkter som er så miljøvennlig som mulig, ved å bruke resirkulerbare, lav-toksiske materialer både i produktene og forpakningen.

D-Link anbefaler at du alltid slår av eller frakobler D-Link-produkter når de ikke er i bruk. Ved å gjøre dette hjelper du å spare energi og å redusere CO2-utslipp.

For mer informasjon angående våre miljøansvarlige produkter og forpakninger kan du gå til www.dlinkgreen.com.

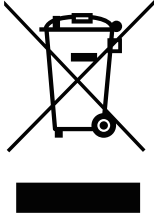DANSK**DK**


Dette symbol på produktet eller emballagen betyder, at dette produkt i henhold til lokale love og regler ikke må bortskaffes som husholdningsaffald, mens skal sendes til genbrug. Indlever produktet til et indsamlingssted som angivet af de lokale myndigheder, når det er nået til slutningen af dets levetid. I nogle tilfælde vil produktet blive modtaget gratis. Ved at indlevere produktet og dets emballage til genbrug på denne måde bidrager du til at beskytte miljøet og den menneskelige sundhed.

D-Link og miljøet

Hos D-Link forstår vi og bestræber os på at reducere enhver indvirkning, som vores aktiviteter og produkter kan have på miljøet. For at minimere denne indvirkning designer og producerer D-Link sine produkter, så de er så miljøvenlige som muligt, ved at bruge genanvendelige materialer med lavt giftighedsniveau i både produkter og emballage.

D-Link anbefaler, at du altid slukker eller frakobler dine D-Link-produkter, når de ikke er i brug. Ved at gøre det bidrager du til at spare energi og reducere CO₂-udledningerne.

Du kan finde flere oplysninger om vores miljømæssigt ansvarlige produkter og emballage på www.dlinkgreen.com.

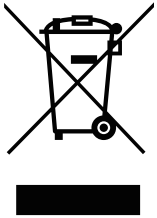SUOMI**FI**

Tämä symboli tuotteen pakkauksessa tarkoittaa, että paikallisten lakien ja säännösten mukaisesti tätä tuotetta ei pidä hävittää yleisen kotitalousjätteen seassa vaan se tulee toimittaa kierrätettäväksi. Kun tuote on elinkaarensa päässä, toimita se lähimpään viranomaisten hyväksymään kierrätyspisteeseen. Kierrättämällä käytetyn tuotteen ja sen pakkauksen autat tukemaan sekä ympäristön että ihmisten terveyttä ja hyvinvointia.

D-Link ja ympäristö

D-Link ymmärtää ympäristönsuojelun tärkeyden ja on sitoutunut vähentämään tuotteistaan ja niiden valmistuksesta ympäristölle mahdollisesti aiheutuvia haittavaikutuksia. Nämä negatiiviset vaikutukset minimoidakseen D-Link suunnittelee ja valmistaa tuotteensa mahdollisimman ympäristöystävällisiksi käyttämällä kierrätettäviä, alhaisia pitoisuuksia haitallisia aineita sisältäviä materiaaleja sekä tuotteissaan että niiden pakkauksissa.

Suosittellemme, että irrotat D-Link-tuotteesi virtalähteestä tai sammutat ne aina, kun ne eivät ole käytössä. Toimimalla näin autat säästämään energiaa ja vähentämään hiilidioksiidipäästöjä.

Lue lisää ympäristöystävällisistä D-Link-tuotteista ja pakkauksistamme osoitteesta www.dlinkgreen.com.

SVENSKA**SE**

Den här symbolen på produkten eller förpackningen betyder att produkten enligt lokala lagar och föreskrifter inte skall kastas i hushållssoporna utan i stället återvinnas. Ta den vid slutet av dess livslängd till en av din lokala myndighet utsedd uppsamlingsplats, vissa accepterar produkter utan kostnad. Genom att på detta sätt återvinna produkten och förpackningen hjälper du till att bevara miljön och skydda människors hälsa.

D-Link och miljön

På D-Link förstår vi och är fast beslutna att minska den påverkan våra verksamheter och produkter kan ha på miljön. För att minska denna påverkan utformar och bygger D-Link sina produkter för att de ska vara så miljövänliga som möjligt, genom att använda återvinningsbara material med låg gifthalt i både produkter och förpackningar.

D-Link rekommenderar att du alltid stänger av eller kopplar ur dina D-Link produkter när du inte använder dem. Genom att göra detta hjälper du till att spara energi och minska utsläpp av koldioxid.

För mer information om våra miljöansvariga produkter och förpackningar www.dlinkgreen.com.

PORTUGUÊS**PT**

Este símbolo no produto ou embalagem significa que, de acordo com as leis e regulamentações locais, este produto não deverá ser eliminado juntamente com o lixo doméstico mas enviado para a reciclagem. Transporte-o para um ponto de recolha designado pelas suas autoridades locais quando este tiver atingido o fim da sua vida útil, alguns destes pontos aceitam produtos gratuitamente. Ao reciclar o produto e respectiva embalagem desta forma, ajuda a preservar o ambiente e protege a saúde humana.

A D-Link e o ambiente

Na D-Link compreendemos e comprometemo-nos com a redução do impacto que as nossas operações e produtos possam ter no ambiente. Para minimizar este impacto a D-Link concebe e constrói os seus produtos para que estes sejam o mais inofensivos para o ambiente possível, utilizando materiais recicláveis e não tóxicos tanto nos produtos como nas embalagens.

A D-Link recomenda que desligue os seus produtos D-Link quando estes não se encontrarem em utilização. Com esta acção ajudará a poupar energia e reduzir as emissões de CO₂.

Para saber mais sobre os nossos produtos e embalagens responsáveis a nível ambiental visite www.dlinkgreen.com.